

Hygienic Pump

Vitalobe

Characteristic Curves Booklet



Legal information/Copyright

Characteristic Curves Booklet Vitalobe

All rights reserved. The contents provided herein must neither be distributed, copied, reproduced, edited or processed for any other purpose, nor otherwise transmitted, published or made available to a third party without the manufacturer's express written consent.

Subject to technical modification without prior notice.

© KSB Aktiengesellschaft, Frankenthal 24.10.2014

Contents


Hygienic pump	5
Rotary lobe pump	5
Vitalobe	5
General	5
Overview of sizes	6
Vitalobe selection chart	7
Characteristic curves	8
Characteristic curve Vitalobe 100 - bi-lobe rotor - clearance: standard	8
Characteristic curve Vitalobe 100 - gear-shaped rotor - clearance: standard	9
NPSH curve Vitalobe 100	10
Characteristic curve Vitalobe 105 - bi-wing rotor - clearance: standard	11
Characteristic curve Vitalobe 105 - gear-shaped rotor - clearance: standard	12
Characteristic curve Vitalobe 105 - gear-shaped rotor - clearance: enlarged	13
NPSH curve Vitalobe 105	14
Characteristic curve Vitalobe 110 - tri-lobe rotor - clearance: standard	15
Characteristic curve Vitalobe 110 - tri-lobe rotor - clearance: enlarged	16
Characteristic curve Vitalobe 110 - bi-wing rotor - clearance: standard	17
Characteristic curve Vitalobe 110 - bi-wing rotor - clearance: enlarged	18
NPSH curve Vitalobe 110	19
Characteristic curve Vitalobe 115 - tri-lobe rotor - clearance: standard	20
Characteristic curve Vitalobe 115 - tri-lobe rotor - clearance: enlarged	21
Characteristic curve Vitalobe 115 - bi-wing rotor - clearance: standard	22
NPSH curve Vitalobe 115	23
Characteristic curve Vitalobe 215 - bi-lobe rotor - clearance: standard	24
Characteristic curve Vitalobe 215 - tri-lobe rotor - clearance: standard	25
Characteristic curve Vitalobe 215 - tri-lobe rotor - clearance: enlarged	26
Characteristic curve Vitalobe 215 - bi-wing rotor - clearance: standard	27
Characteristic curve Vitalobe 215 - bi-wing rotor - clearance: enlarged	28
NPSH curve Vitalobe 215	29
Characteristic curve Vitalobe 220 - bi-lobe rotor - clearance: standard	30
Characteristic curve Vitalobe 220 - tri-lobe rotor - clearance: standard	31
Characteristic curve Vitalobe 220 - tri-lobe rotor - clearance: enlarged	32
Characteristic curve Vitalobe 220 - bi-wing rotor - clearance: standard	33
Characteristic curve Vitalobe 220 - bi-wing rotor - clearance: enlarged	34
NPSH curve Vitalobe 220	35
Characteristic curve Vitalobe 325 - bi-lobe rotor - clearance: standard	36
Characteristic curve Vitalobe 325 - tri-lobe rotor - clearance: standard	37
Characteristic curve Vitalobe 325 - tri-lobe rotor - clearance: enlarged	38
Characteristic curve Vitalobe 325 - bi-wing rotor - clearance: standard	39
Characteristic curve Vitalobe 325 - bi-wing rotor - clearance: enlarged	40
NPSH curve Vitalobe 325	41
Characteristic curve Vitalobe 330 - bi-lobe rotor - clearance: standard	42
Characteristic curve Vitalobe 330 - bi-lobe rotor - clearance: enlarged	43
Characteristic curve Vitalobe 330 - tri-lobe rotor - clearance: standard	44
Characteristic curve Vitalobe 330 - tri-lobe rotor - clearance: enlarged	45

Characteristic curve Vitalobe 330 - bi-wing rotor - clearance: standard	46
Characteristic curve Vitalobe 330 - bi-wing rotor - clearance: enlarged	47
NPSH curve Vitalobe 330	48
Characteristic curve Vitalobe 390 - bi-lobe rotor - clearance: standard	49
Characteristic curve Vitalobe 390 - tri-lobe rotor - clearance: standard	50
Characteristic curve Vitalobe 390 - tri-lobe rotor - clearance: enlarged	51
Characteristic curve Vitalobe 390 - bi-wing rotor - clearance: standard	52
NPSH curve Vitalobe 390	53
Characteristic curve Vitalobe 430 - bi-lobe rotor - clearance: standard	54
Characteristic curve Vitalobe 430 - tri-lobe rotor - clearance: standard	55
Characteristic curve Vitalobe 430 - tri-lobe rotor - clearance: enlarged	56
Characteristic curve Vitalobe 430 - bi-wing rotor - clearance: standard	57
Characteristic curve Vitalobe 430 - bi-wing rotor - clearance: enlarged	58
NPSH curve Vitalobe 430	59
Characteristic curve Vitalobe 440 - bi-lobe rotor - clearance: standard	60
Characteristic curve Vitalobe 440 - tri-lobe rotor - clearance: standard	61
Characteristic curve Vitalobe 440 - tri-lobe rotor - clearance: enlarged	62
Characteristic curve Vitalobe 440 - bi-wing rotor - clearance: standard	63
Characteristic curve Vitalobe 440 - bi-wing rotor - clearance: enlarged	64
NPSH curve Vitalobe 440	65
Characteristic curve Vitalobe 470 - bi-lobe rotor - clearance: standard	66
Characteristic curve Vitalobe 470 - tri-lobe rotor - clearance: standard	67
Characteristic curve Vitalobe 470 - tri-lobe rotor - clearance: enlarged	68
Characteristic curve Vitalobe 470 - bi-wing rotor - clearance: standard	69
Characteristic curve Vitalobe 470 - bi-wing rotor - clearance: enlarged	70
NPSH curve Vitalobe 470	71
Characteristic curve Vitalobe 490 - bi-lobe rotor - clearance: standard	72
Characteristic curve Vitalobe 490 - tri-lobe rotor - clearance: standard	73
Characteristic curve Vitalobe 490 - tri-lobe rotor - clearance: enlarged	74
Characteristic curve Vitalobe 490 - bi-wing rotor - clearance: standard	75
Characteristic curve Vitalobe 490 - bi-wing rotor - clearance: enlarged	76
NPSH curve Vitalobe 490	77
Characteristic curve Vitalobe 550 - bi-lobe rotor - clearance: standard	78
Characteristic curve Vitalobe 550 - tri-lobe rotor - clearance: standard	79
Characteristic curve Vitalobe 550 - tri-lobe rotor - clearance: enlarged	80
Characteristic curve Vitalobe 550 - bi-wing rotor - clearance: standard	81
NPSH curve Vitalobe 550	82
Characteristic curve Vitalobe 660 - tri-lobe rotor - clearance: standard	83
Characteristic curve Vitalobe 680 - tri-lobe rotor - clearance: standard	84
NPSH curve Vitalobe 660-680	85

Hygienic pump

Rotary lobe pump

Vitalobe

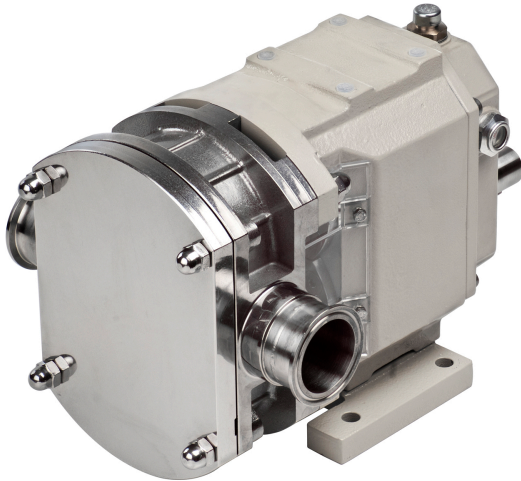

General

Test class: Characteristic curves to ISO 9906 Class 3B

NPSH values

The NPSH values indicated in the characteristic curves correspond to a head drop of 3 %.

NPSH values in low-flow conditions

NPSH values for flow rates below $Q = 0.3 \times Q_{opt}$ can only be measured with intense technical efforts. Evidence of NPSH values in the low-flow range cannot be provided.

Density of the fluid handled

The indicated heads and performance data apply to pumped fluids with a density $\rho = 1.0 \text{ kg/dm}^3$ and a kinematic viscosity ν of up to $20 \text{ mm}^2/\text{s}$ max. If the density $\neq 1.0$, the performance data must be multiplied by ρ . For viscosities $>20 \text{ mm}^2/\text{s}$ the corresponding data for cold water has to be calculated and the impact on the pump's performance has to be determined.

Friction loss

For some design variants (reinforced bearings, specific shaft seals) friction losses must be considered and indicated as additional power requirement in the data sheet.

Correction factors


The characteristic curves apply to pumps with cast iron or bronze impellers. When using an impeller made of cast steel materials the efficiency and pump power of the corresponding pump sizes have to be multiplied by the correction factors indicated in the characteristic curves.

Overview of sizes

Contents page individual characteristic curves Vitalobe

Size	Clearance	
	Standard	Enlarged
Vitalobe 100 - bi-lobe rotor	(⇒ Page 8)	-
Vitalobe 100 - gear-shaped rotor	(⇒ Page 9)	-
NPSH curve Vitalobe 100	(⇒ Page 10)	
Vitalobe 105 - bi-wing rotor	(⇒ Page 11)	-
Vitalobe 105 - gear-shaped rotor	(⇒ Page 12)	(⇒ Page 13)
NPSH curve Vitalobe 105	(⇒ Page 14)	
Vitalobe 110 - tri-lobe rotor	(⇒ Page 15)	(⇒ Page 16)
Vitalobe 110 - bi-wing rotor	(⇒ Page 17)	(⇒ Page 18)
NPSH curve Vitalobe 110	(⇒ Page 19)	
Vitalobe 115 - tri-lobe rotor	(⇒ Page 20)	(⇒ Page 21)
Vitalobe 115 - bi-wing rotor	(⇒ Page 22)	-
NPSH curve Vitalobe 115	(⇒ Page 23)	
Vitalobe 215 - bi-lobe rotor	(⇒ Page 24)	-
Vitalobe 215 - tri-lobe rotor	(⇒ Page 25)	(⇒ Page 26)
Vitalobe 215 - bi-wing rotor	(⇒ Page 27)	(⇒ Page 28)
NPSH curve Vitalobe 215	(⇒ Page 29)	
Vitalobe 220 - bi-lobe rotor	(⇒ Page 30)	-
Vitalobe 220 - tri-lobe rotor	(⇒ Page 31)	(⇒ Page 32)
Vitalobe 220 - bi-wing rotor	(⇒ Page 33)	(⇒ Page 34)
NPSH curve Vitalobe 220	(⇒ Page 35)	
Vitalobe 325 - bi-lobe rotor	(⇒ Page 36)	-
Vitalobe 325 - tri-lobe rotor	(⇒ Page 37)	(⇒ Page 38)
Vitalobe 325 - bi-wing rotor	(⇒ Page 39)	(⇒ Page 40)
NPSH curve Vitalobe 325	(⇒ Page 41)	
Vitalobe 330 - bi-lobe rotor	(⇒ Page 42)	(⇒ Page 43)
Vitalobe 330 - tri-lobe rotor	(⇒ Page 44)	(⇒ Page 45)
Vitalobe 330 - bi-wing rotor	(⇒ Page 46)	(⇒ Page 47)
NPSH curve Vitalobe 330	(⇒ Page 48)	
Vitalobe 390 - bi-lobe rotor	(⇒ Page 49)	-
Vitalobe 390 - tri-lobe rotor	(⇒ Page 50)	(⇒ Page 51)
Vitalobe 390 - bi-wing rotor	(⇒ Page 52)	-
NPSH curve Vitalobe 390	(⇒ Page 53)	
Vitalobe 430 - bi-lobe rotor	(⇒ Page 54)	-
Vitalobe 430 - tri-lobe rotor	(⇒ Page 55)	(⇒ Page 56)
Vitalobe 430 - bi-wing rotor	(⇒ Page 57)	(⇒ Page 58)
NPSH curve Vitalobe 430	(⇒ Page 59)	
Vitalobe 440 - bi-lobe rotor	(⇒ Page 60)	-
Vitalobe 440 - tri-lobe rotor	(⇒ Page 61)	(⇒ Page 62)
Vitalobe 440 - bi-wing rotor	(⇒ Page 63)	(⇒ Page 64)
NPSH curve Vitalobe 440	(⇒ Page 65)	
Vitalobe 470 - bi-lobe rotor	(⇒ Page 66)	-
Vitalobe 470 - tri-lobe rotor	(⇒ Page 67)	(⇒ Page 68)
Vitalobe 470 - bi-wing rotor	(⇒ Page 69)	(⇒ Page 70)
NPSH curve Vitalobe 470	(⇒ Page 71)	
Vitalobe 490 - bi-lobe rotor	(⇒ Page 72)	-
Vitalobe 490 - tri-lobe rotor	(⇒ Page 73)	(⇒ Page 74)
Vitalobe 490 - bi-wing rotor	(⇒ Page 75)	(⇒ Page 76)
NPSH curve Vitalobe 490	(⇒ Page 77)	
Vitalobe 550 - bi-lobe rotor	(⇒ Page 78)	-
Vitalobe 550 - tri-lobe rotor	(⇒ Page 79)	(⇒ Page 80)
Vitalobe 550 - bi-wing rotor	(⇒ Page 81)	-
NPSH curve Vitalobe 550	(⇒ Page 82)	
Vitalobe 660 - tri-lobe rotor	(⇒ Page 83)	-
Vitalobe 680 - tri-lobe rotor	(⇒ Page 84)	-
NPSH curve Vitalobe 660-680	(⇒ Page 85)	

Vitalobe selection chart

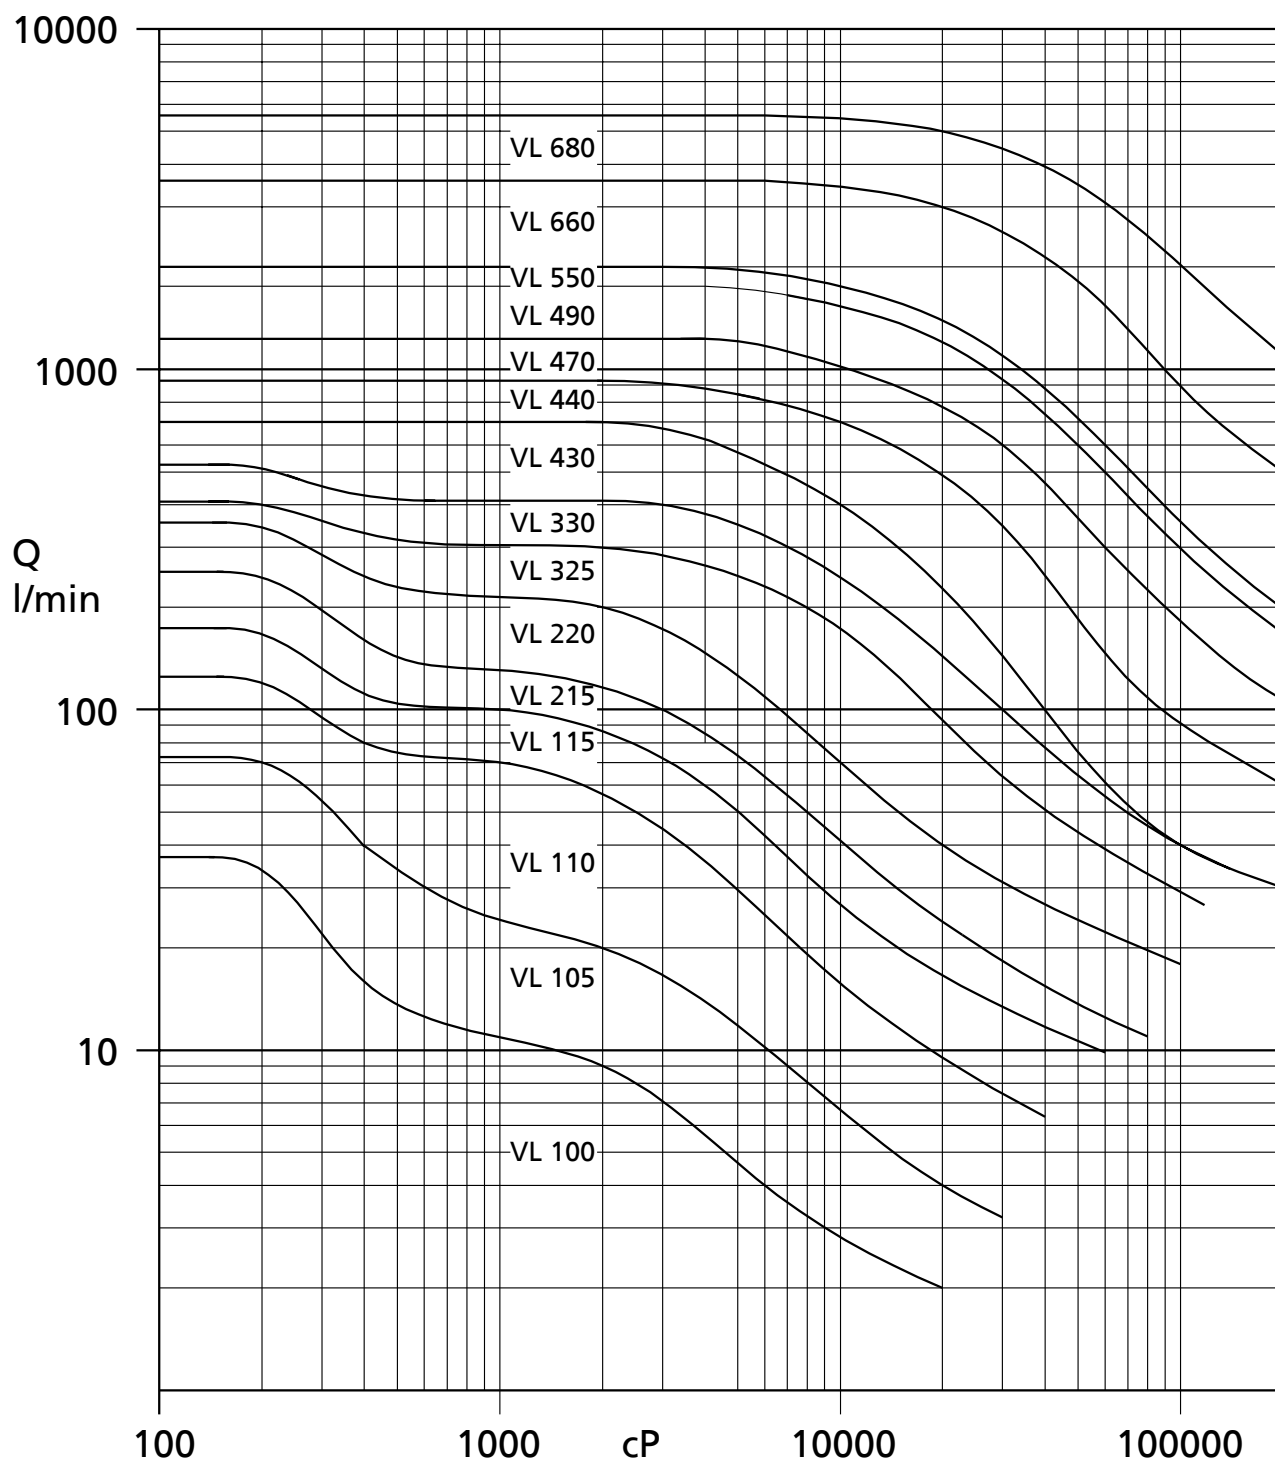


Characteristic curves

Characteristic curve Vitalobe 100 - bi-lobe rotor - clearance: standard


Characteristic curve Vitalobe 100 - bi-lobe rotor - clearance: standard

Flow rate: 0.035 l/rotation ¹⁾

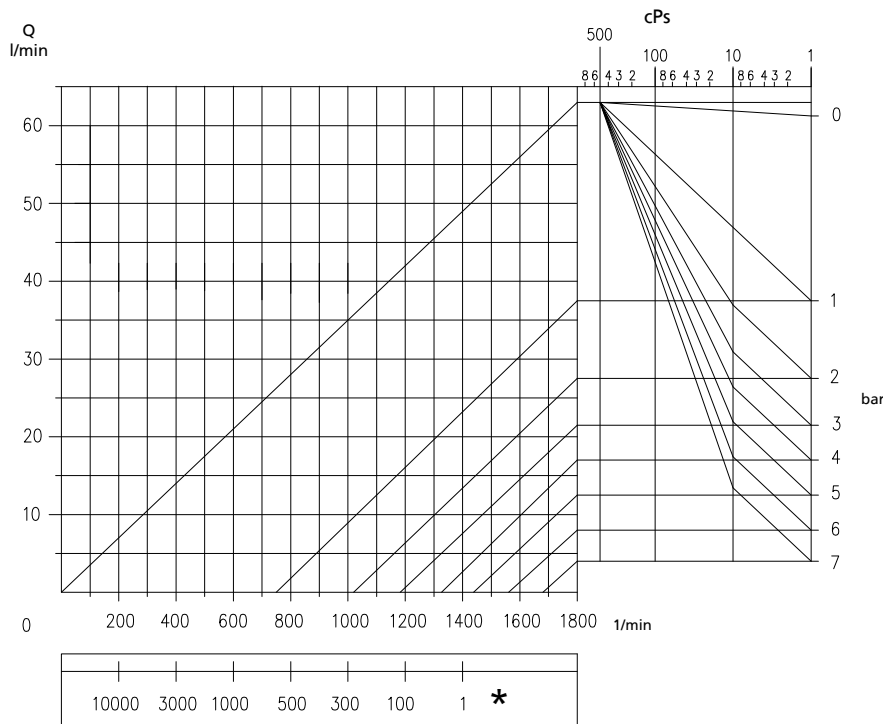

* Max. viscosity (cPs) at 0 bar (g) suction pressure / inlet pressure
Nozzle diameter 22 mm
Standard nominal nozzle diameter DN 25
Max. speed at 1 cPs = 1400 rpm
It is recommended not to use all maximum values at the same time.

Total input power Vitalobe 100 - bi-lobe rotor - clearance: standard

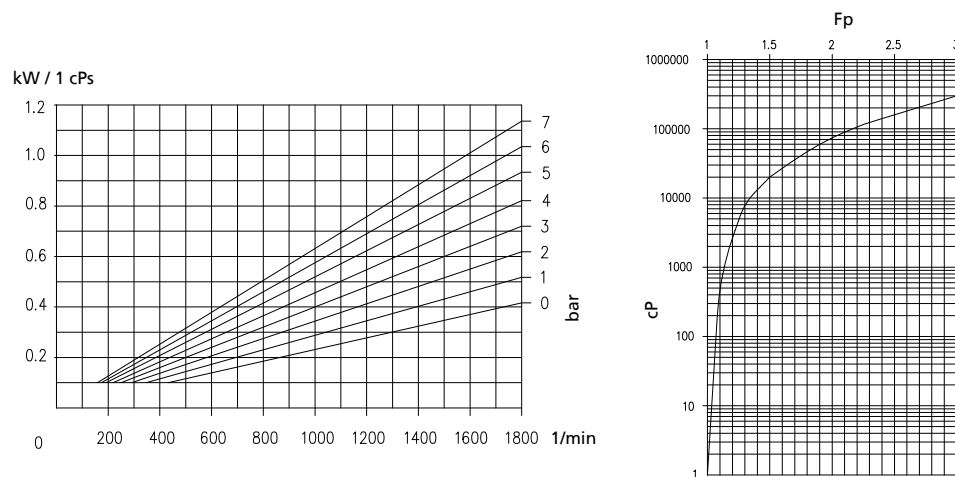


Total power = kW (1 cPs) x Fp

¹⁾ The characteristic curves shown are intended for orientation. Some individual pumps may differ for reasons related to their production, the fluid handled and the system conditions.

Characteristic curve Vitalobe 100 - gear-shaped rotor - clearance: standard


Characteristic curve Vitalobe 100 - gear-shaped rotor - clearance: standard

Flow rate: 0.035 l/rotation ²⁾

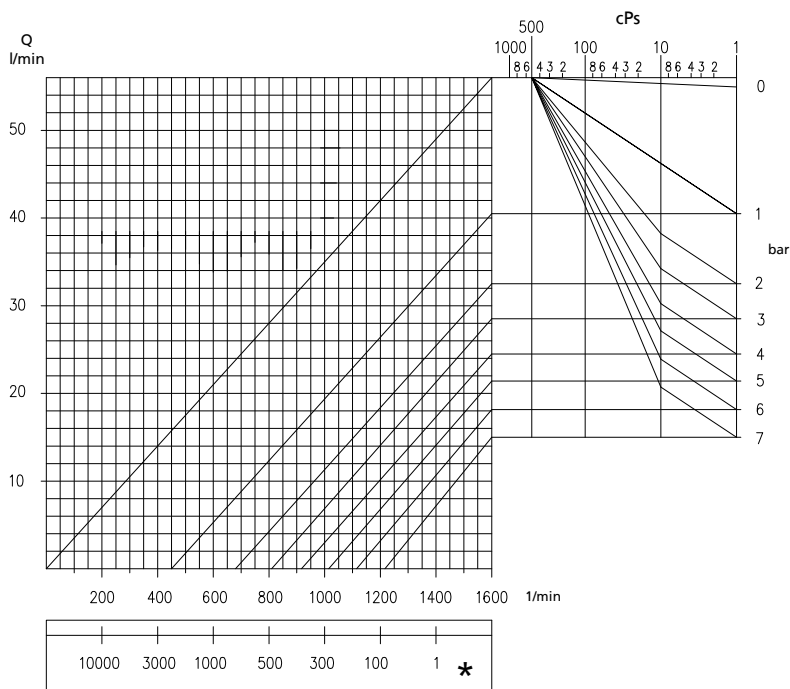

* Max. viscosity (cPs) at 0 bar (g) suction pressure / inlet pressure
Nozzle diameter 22 mm
Standard nominal nozzle diameter DN 25
Max. speed at 1 cPs = 1400 rpm
It is recommended not to use all maximum values at the same time.


Total input power Vitalobe 100 - gear-shaped rotor - clearance: standard

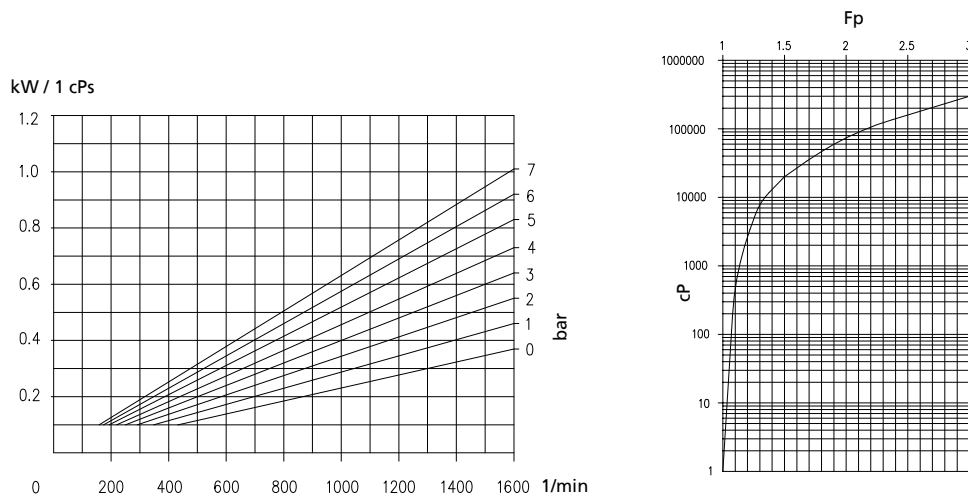

Total power = kW (1 cPs) x Fp

²⁾ The characteristic curves shown are intended for orientation. Some individual pumps may differ for reasons related to their production, the fluid handled and the system conditions.


NPSH curve Vitalobe 100

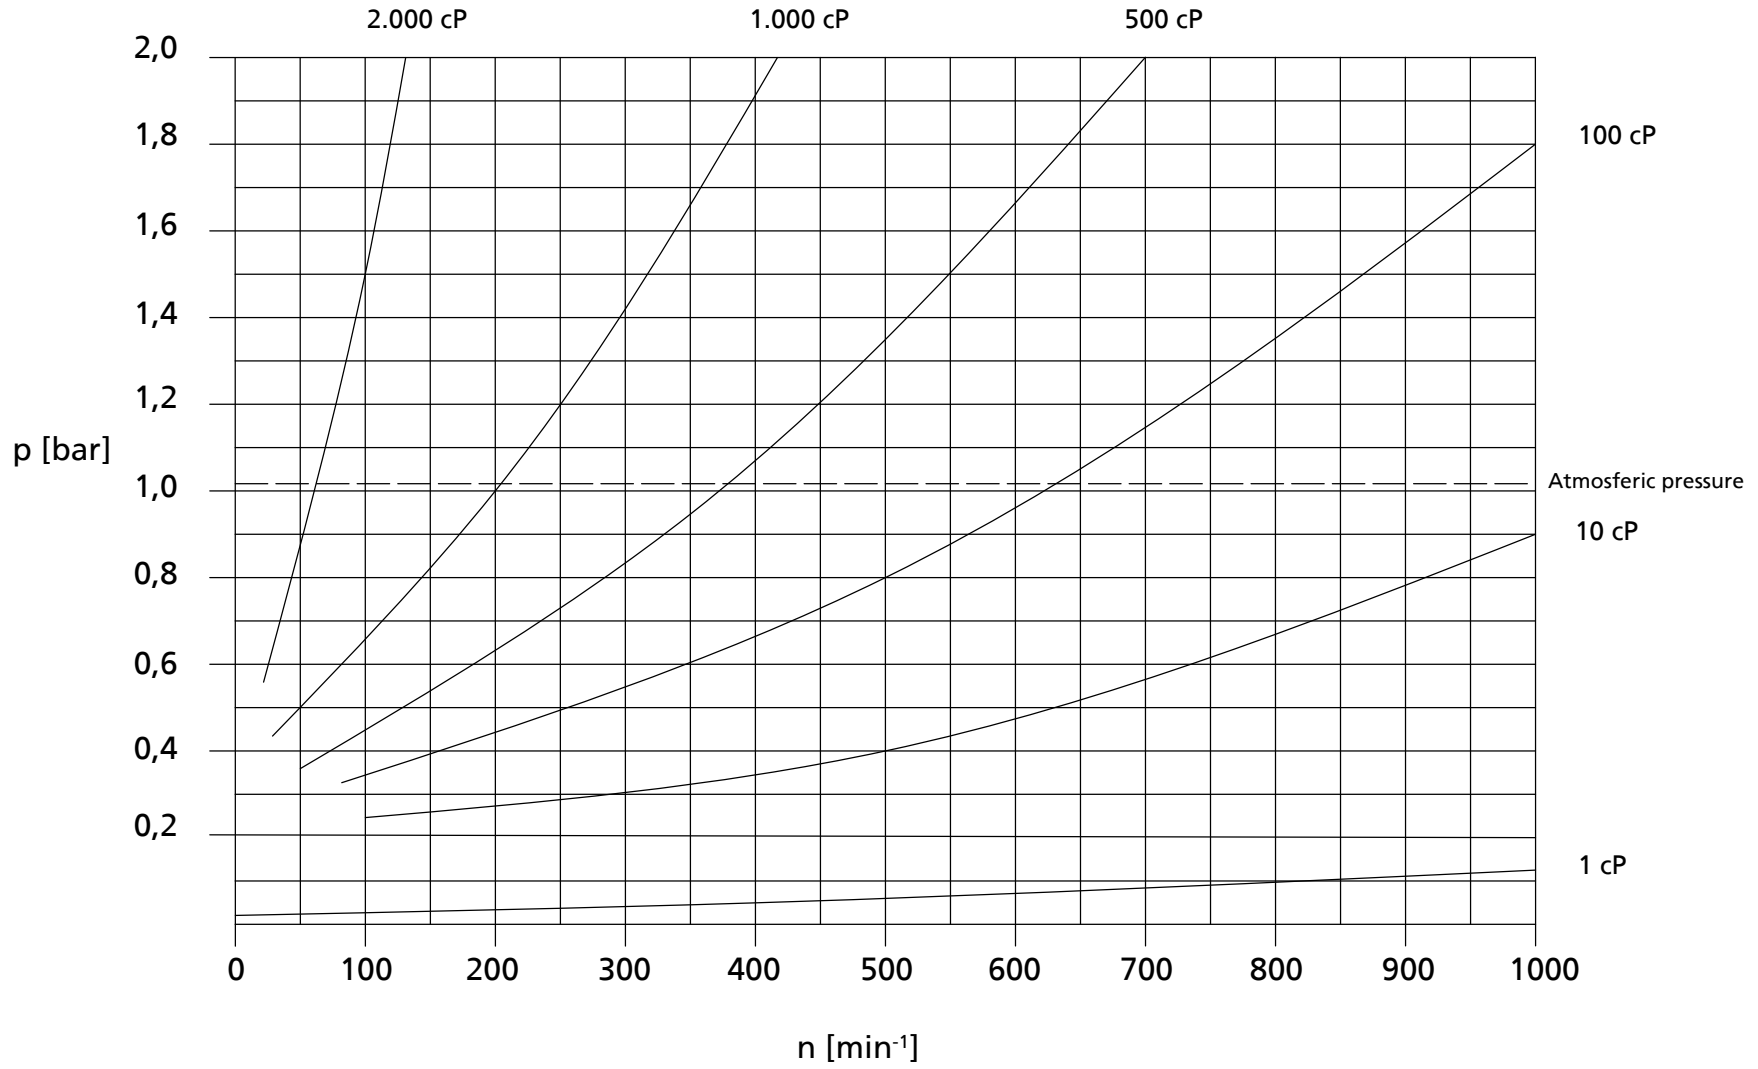

Characteristic curve Vitalobe 105 - bi-wing rotor - clearance: standard


Characteristic curve Vitalobe 105 - bi-wing rotor - clearance: standard

Flow rate: 0.07 l/rotation ³⁾

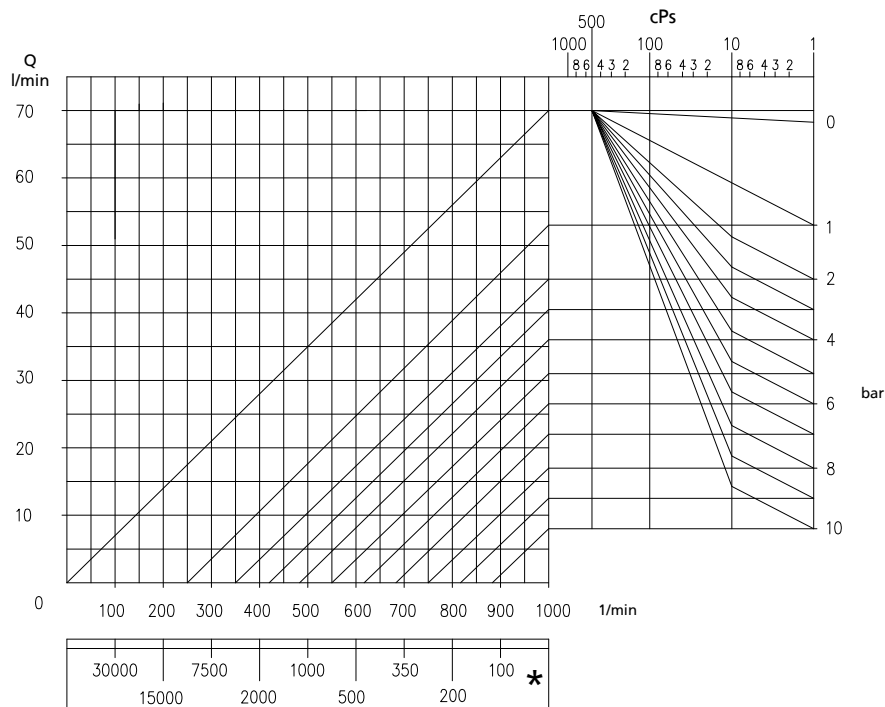

* Max. viscosity (cPs) at 0 bar (g) suction pressure / inlet pressure
Nozzle diameter 30.5 mm
Standard nominal nozzle diameter DN 40
Max. speed at 1 cPs = 1000 rpm
It is recommended not to use all maximum values at the same time.

Total input power Vitalobe 105 - bi-wing rotor - clearance: standard

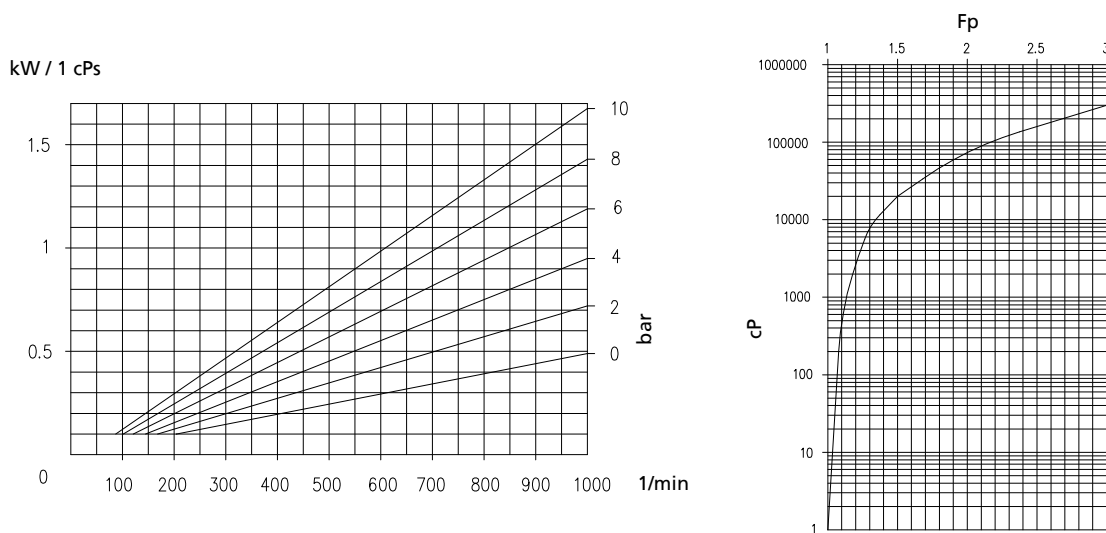


Total power = kW (1 cPs) x Fp

³⁾ The characteristic curves shown are intended for orientation. Some individual pumps may differ for reasons related to their production, the fluid handled and the system conditions.

Characteristic curve Vitalobe 105 - gear-shaped rotor - clearance: standard


Characteristic curve Vitalobe 105 - gear-shaped rotor - clearance: standard

Flow rate: 0.075 l/rotation ⁴⁾

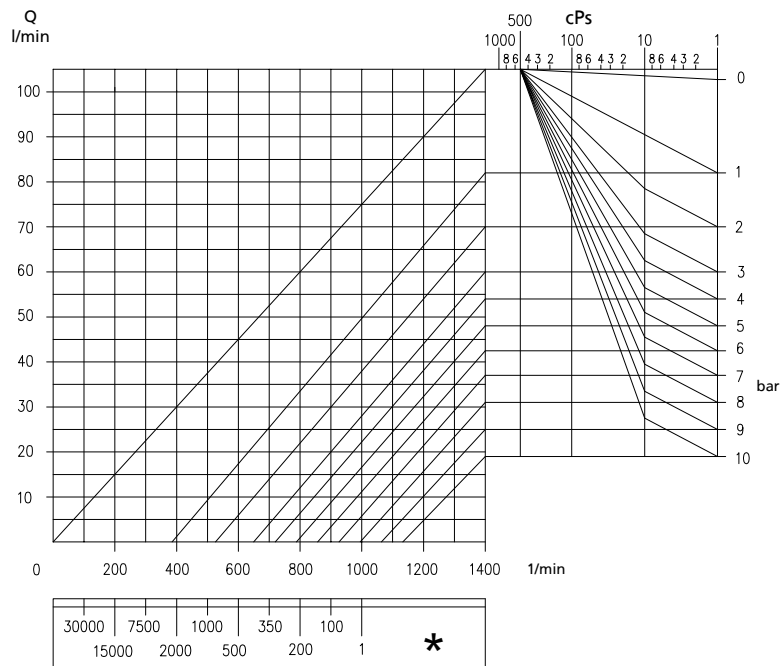

* Max. viscosity (cPs) at 0 bar (g) suction pressure / inlet pressure
Nozzle diameter 30.5 mm
Standard nominal nozzle diameter DN 40
Max. speed at 1 cPs = 1000 rpm
It is recommended not to use all maximum values at the same time.

Total input power Vitalobe 105 - gear-shaped rotor - clearance: standard

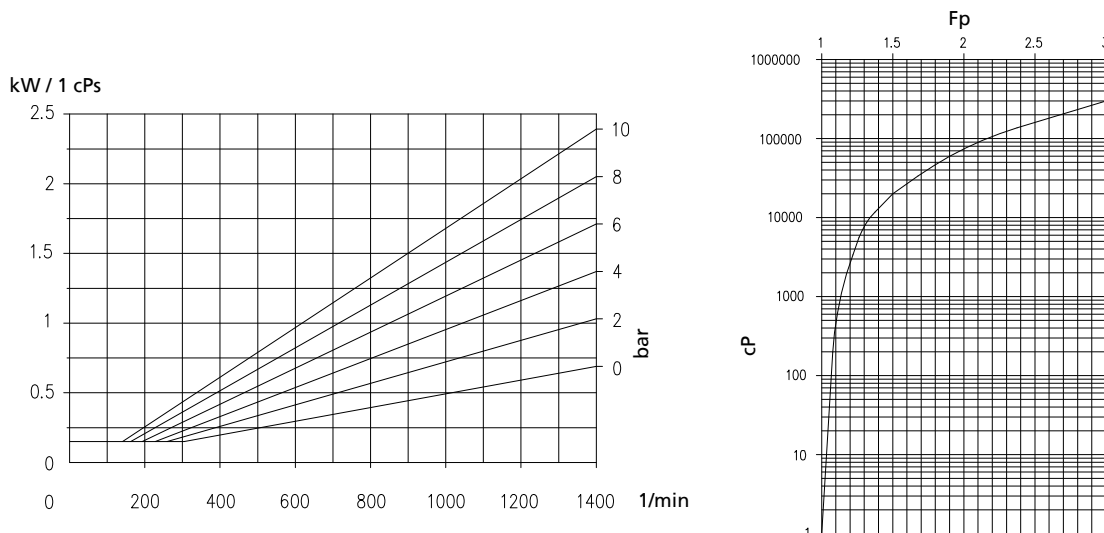


Total power = kW (1 cPs) x Fp

⁴⁾ The characteristic curves shown are intended for orientation. Some individual pumps may differ for reasons related to their production, the fluid handled and the system conditions.

Characteristic curve Vitalobe 105 - gear-shaped rotor - clearance: enlarged


Characteristic curve Vitalobe 105 - gear-shaped rotor - clearance: enlarged

Flow rate: 0.075 l/rotation ⁵⁾

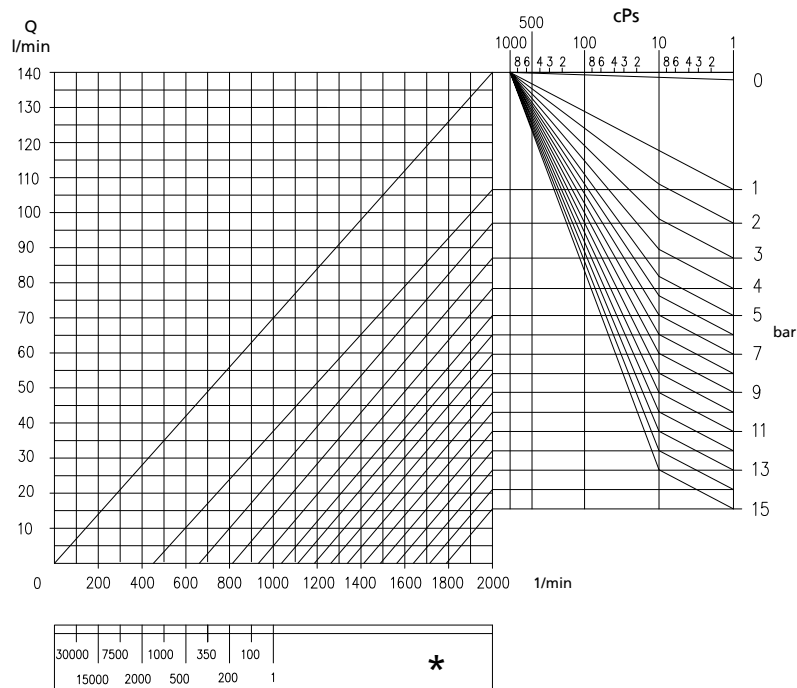

* Max. viscosity (cPs) at 0 bar (g) suction pressure / inlet pressure
Nozzle diameter 30.5 mm
Standard nominal nozzle diameter DN 40
Max. speed at 1 cPs = 1000 rpm
It is recommended not to use all maximum values at the same time.


Total input power Vitalobe 105 - gear-shaped rotor - clearance: enlarged

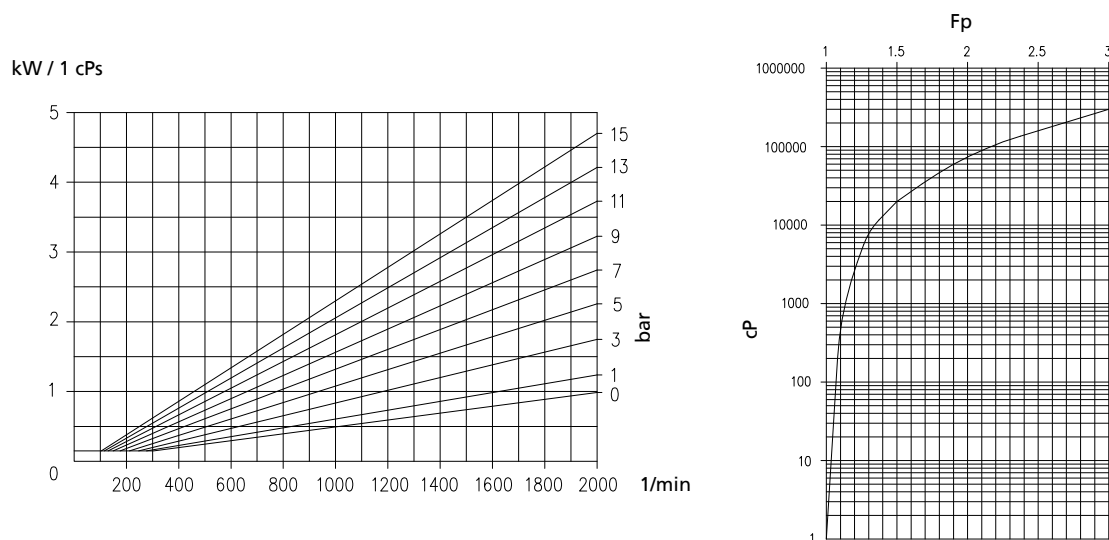

Total power = kW (1 cPs) x Fp

⁵⁾ The characteristic curves shown are intended for orientation. Some individual pumps may differ for reasons related to their production, the fluid handled and the system conditions.


NPSH curve Vitalobe 105

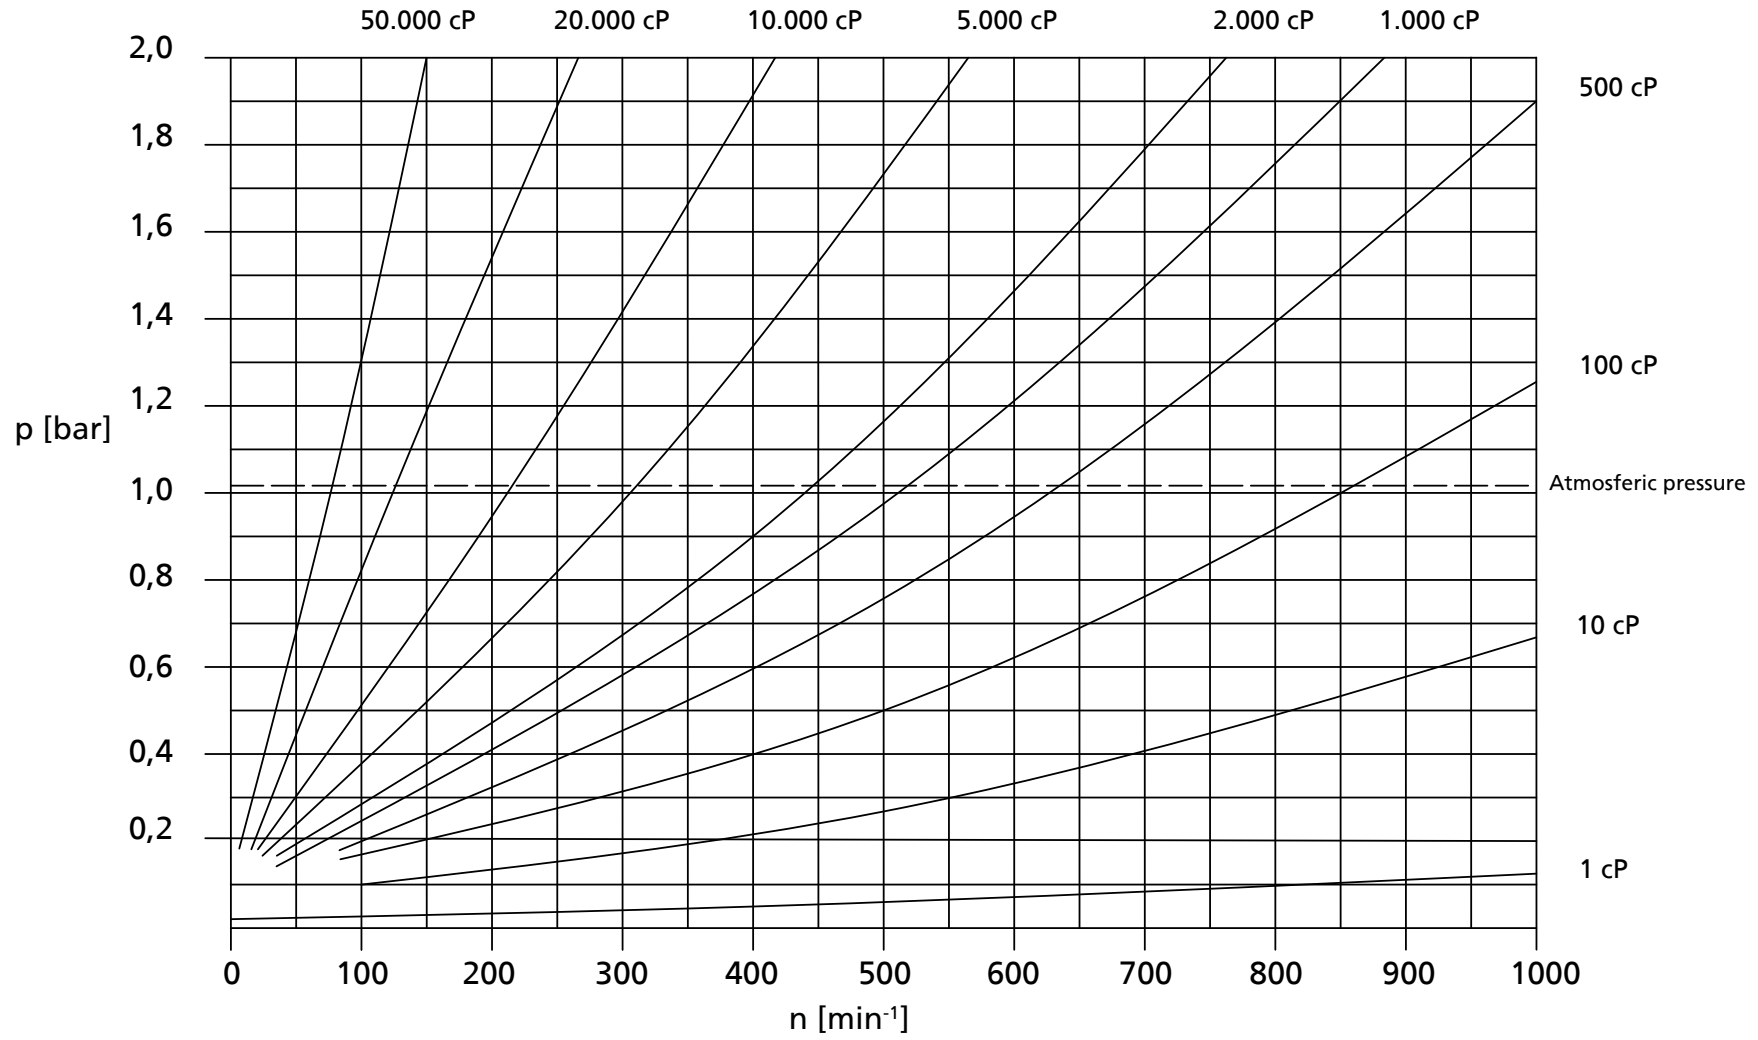

Characteristic curve Vitalobe 110 - tri-lobe rotor - clearance: standard


Characteristic curve Vitalobe 110 - tri-lobe rotor - clearance: standard

Flow rate: 0.138 l/rotation ⁶⁾

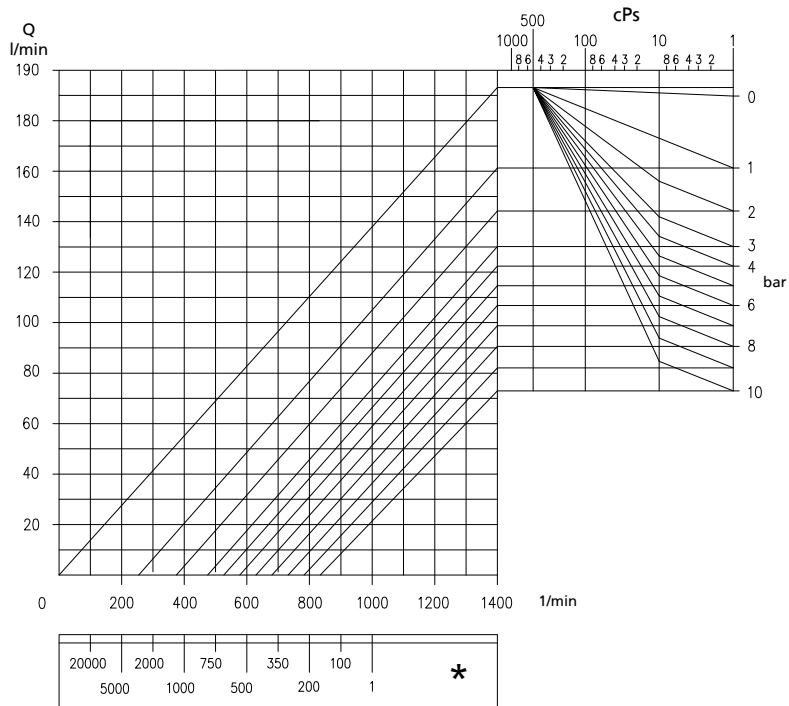

* Max. viscosity (cPs) at 0 bar (g) suction pressure / inlet pressure
Nozzle diameter 30.5 mm
Standard nominal nozzle diameter DN 40
Max. speed at 1 cPs = 1000 rpm
It is recommended not to use all maximum values at the same time.

Total input power Vitalobe 110 - tri-lobe rotor - clearance: standard

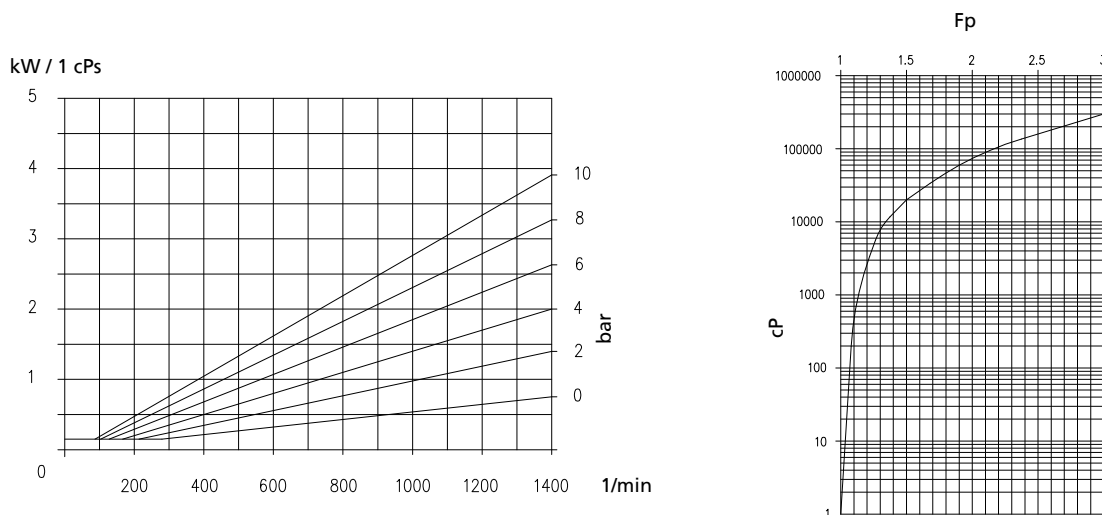


Total power = kW (1 cPs) x Fp

⁶⁾ The characteristic curves shown are intended for orientation. Some individual pumps may differ for reasons related to their production, the fluid handled and the system conditions.

Characteristic curve Vitalobe 110 - tri-lobe rotor - clearance: enlarged


Characteristic curve Vitalobe 110 - tri-lobe rotor - clearance: enlarged

Flow rate: 0.138 l/rotation ⁷⁾

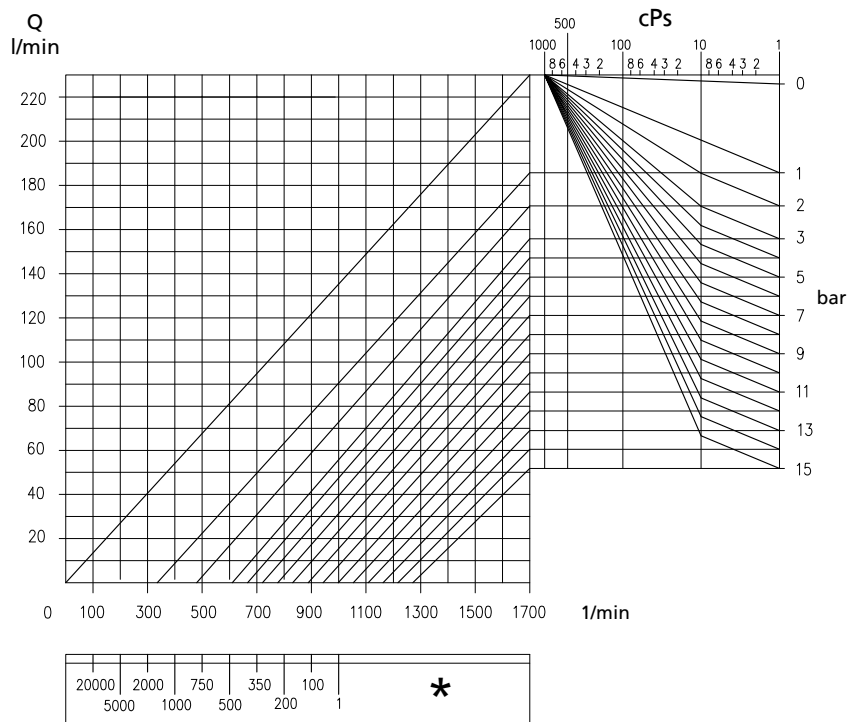

* Max. viscosity (cPs) at 0 bar (g) suction pressure / inlet pressure
Nozzle diameter 30.5 mm
Standard nominal nozzle diameter DN 40
Max. speed at 1 cPs = 1000 rpm
It is recommended not to use all maximum values at the same time.

Total input power Vitalobe 110 - tri-lobe rotor - clearance: enlarged

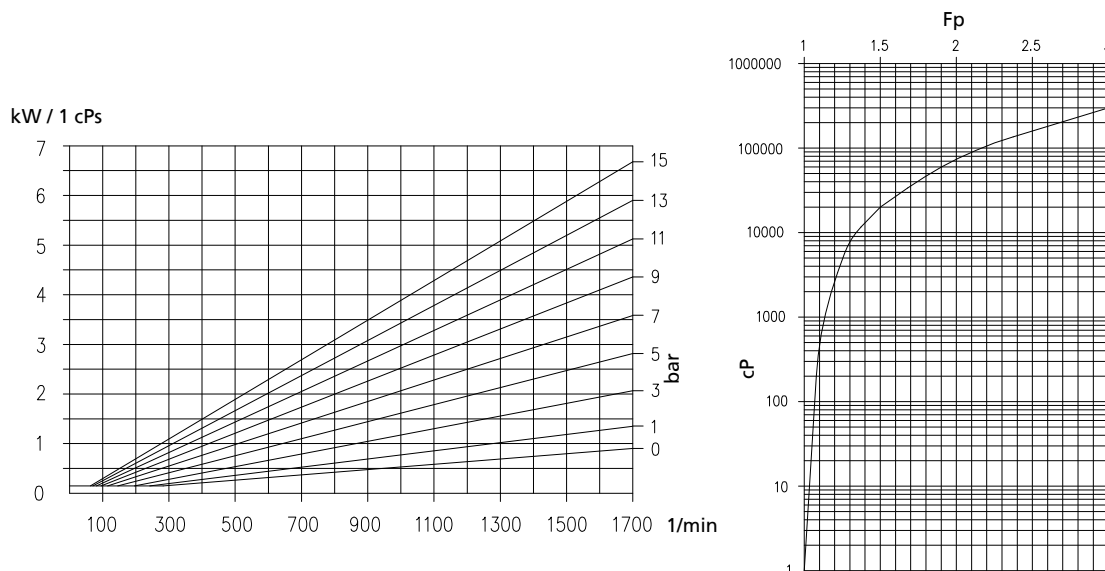


Total power = kW (1 cPs) x F_p

⁷⁾ The characteristic curves shown are intended for orientation. Some individual pumps may differ for reasons related to their production, the fluid handled and the system conditions.

Characteristic curve Vitalobe 110 - bi-wing rotor - clearance: standard


Characteristic curve Vitalobe 110 - bi-wing rotor - clearance: standard

Flow rate: 0.124 l/rotation ⁸⁾

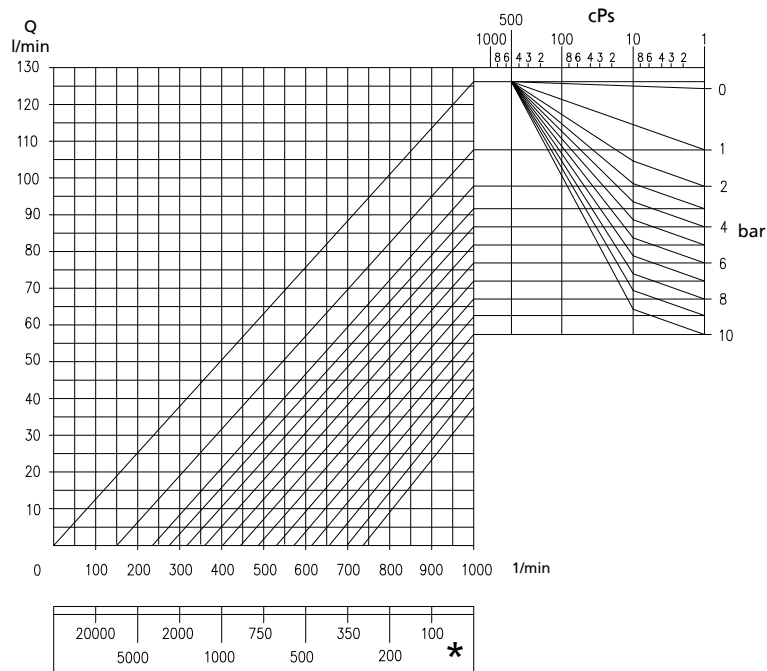

* Max. viscosity (cPs) at 0 bar (g) suction pressure / inlet pressure
Nozzle diameter 30.5 mm
Standard nominal nozzle diameter DN 40
Max. speed at 1 cPs = 1000 rpm
It is recommended not to use all maximum values at the same time.

Total input power Vitalobe 110 - bi-wing rotor - clearance: standard

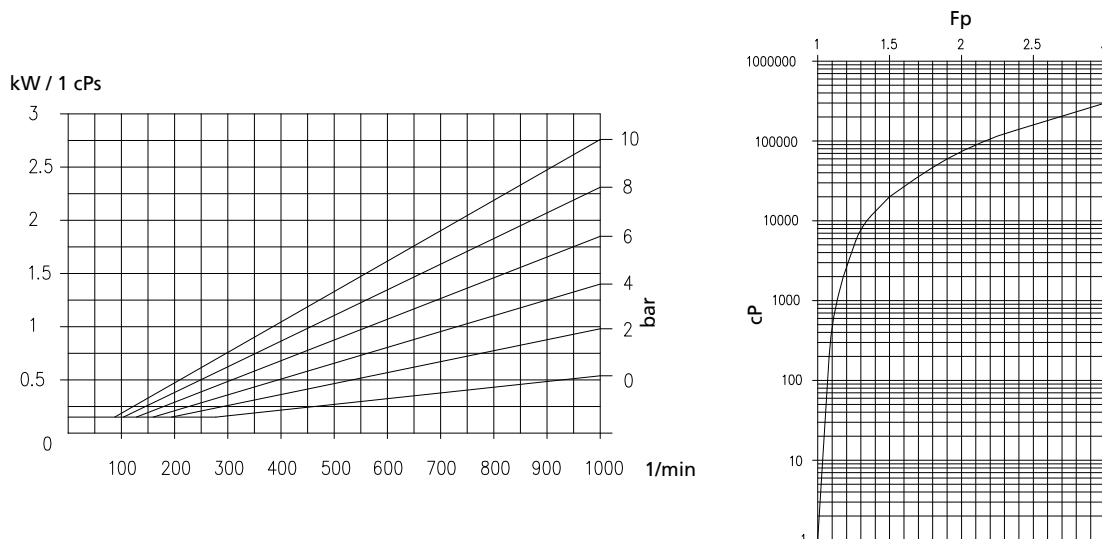


Total power = kW (1 cPs) x Fp

⁸⁾ The characteristic curves shown are intended for orientation. Some individual pumps may differ for reasons related to their production, the fluid handled and the system conditions.

Characteristic curve Vitalobe 110 - bi-wing rotor - clearance: enlarged

Characteristic curve Vitalobe 110 - bi-wing rotor - clearance: enlarged

Flow rate: 1.124 l/rotation ⁹⁾

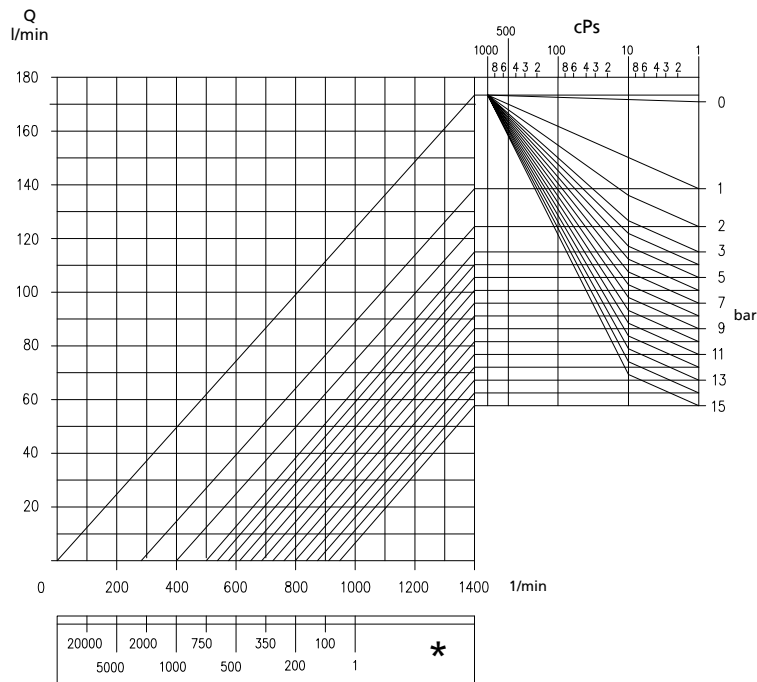

* Max. viscosity (cPs) at 0 bar (g) suction pressure / inlet pressure


Nozzle diameter 30.5 mm

Standard nominal nozzle diameter DN 40

Max. speed at 1 cPs = 1000 rpm

It is recommended not to use all maximum values at the same time.


Total input power Vitalobe 110 - bi-wing rotor - clearance: enlarged

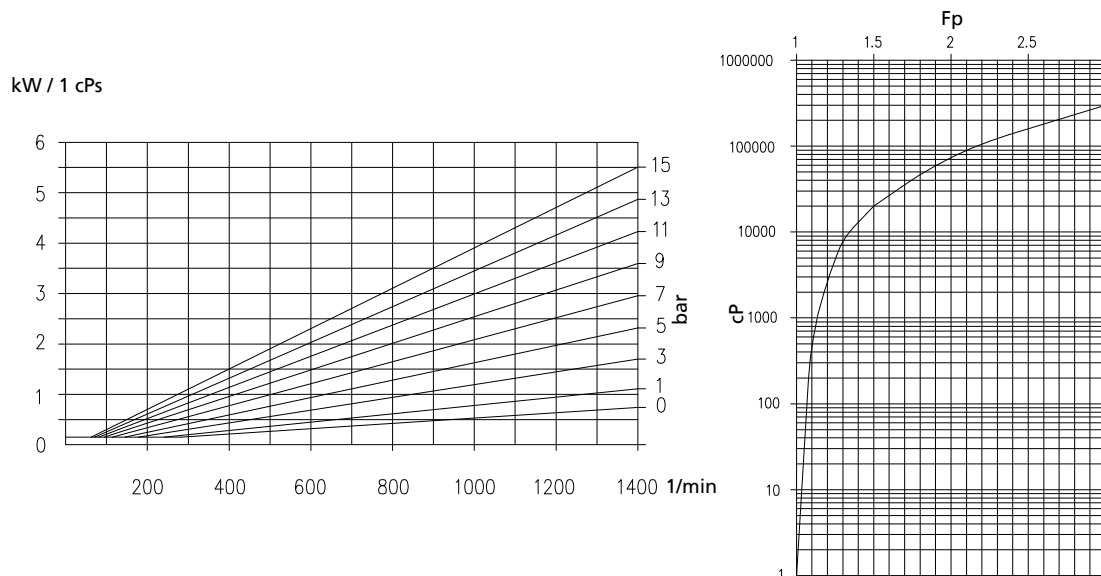

Total power = kW (1 cPs) x Fp

⁹⁾ The characteristic curves shown are intended for orientation. Some individual pumps may differ for reasons related to their production, the fluid handled and the system conditions.


NPSH curve Vitalobe 110

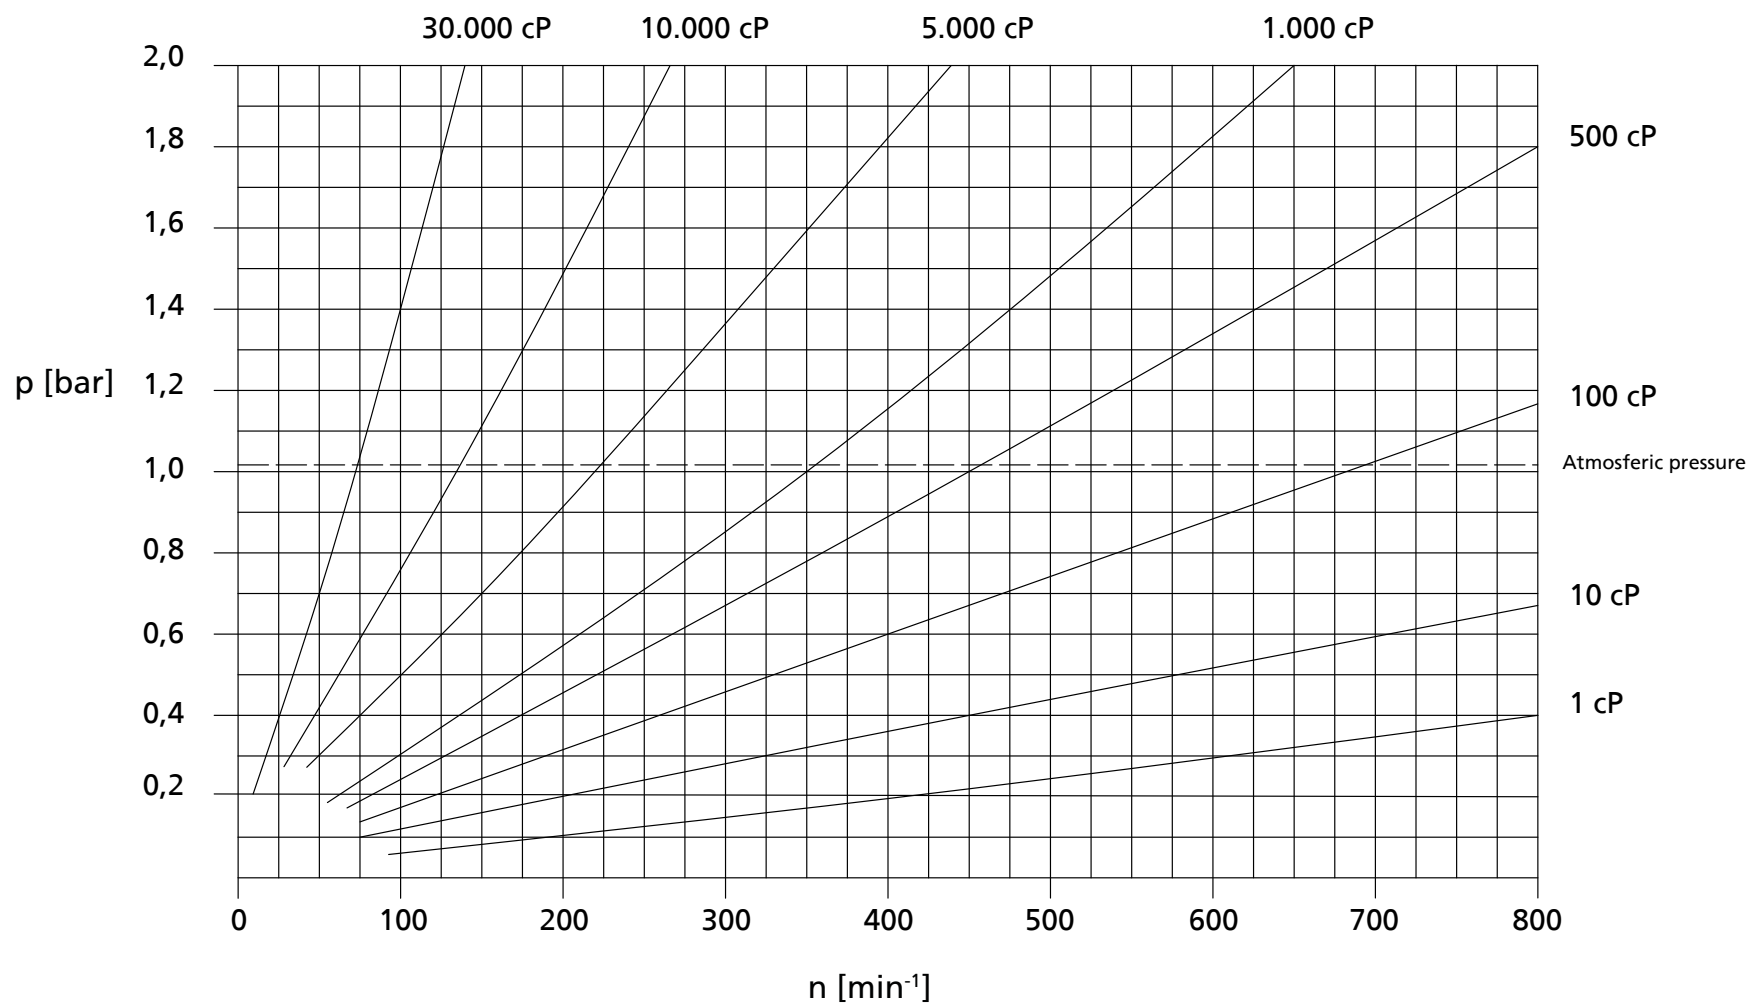

Characteristic curve Vitalobe 115 - tri-lobe rotor - clearance: standard



Characteristic curve Vitalobe 115 - tri-lobe rotor - clearance: standard

Flow rate: 0.204 l/rotation ¹⁰⁾

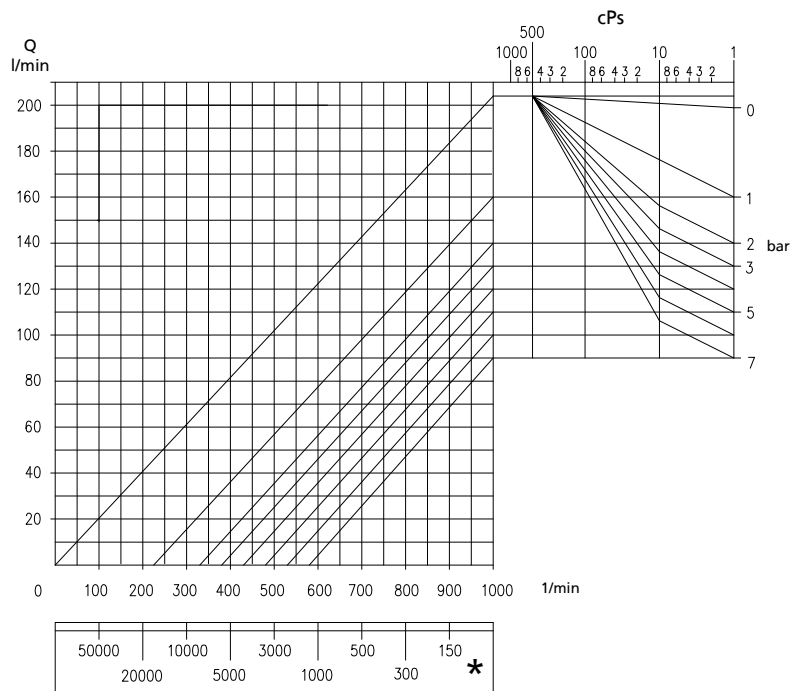

* Max. viscosity (cPs) at 0 bar (g) suction pressure / inlet pressure
Nozzle diameter 38 mm
Standard nominal nozzle diameter DN 40
Max. speed at 1 cPs = 1000 rpm
It is recommended not to use all maximum values at the same time.

Total input power Vitalobe 115 - tri-lobe rotor - clearance: standard

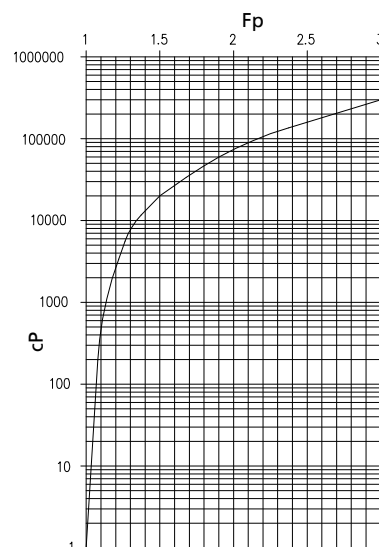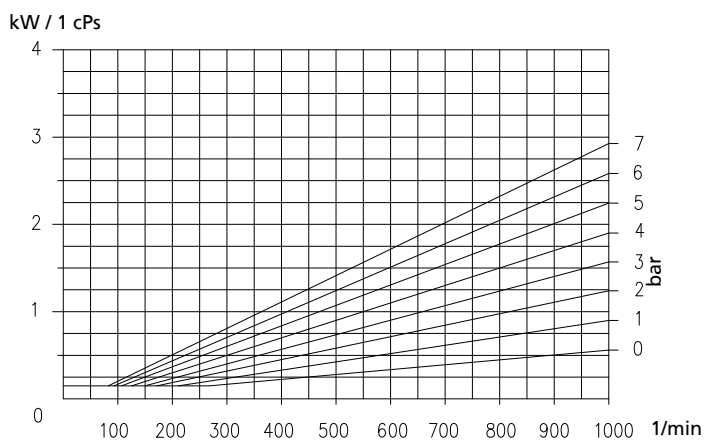


Total power = kW (1 cPs) x Fp

¹⁰⁾ The characteristic curves shown are intended for orientation. Some individual pumps may differ for reasons related to their production, the fluid handled and the system conditions.

Characteristic curve Vitalobe 115 - tri-lobe rotor - clearance: enlarged


Characteristic curve Vitalobe 115 - tri-lobe rotor - clearance: enlarged

Flow rate: 0.204 l/rotation ¹¹⁾

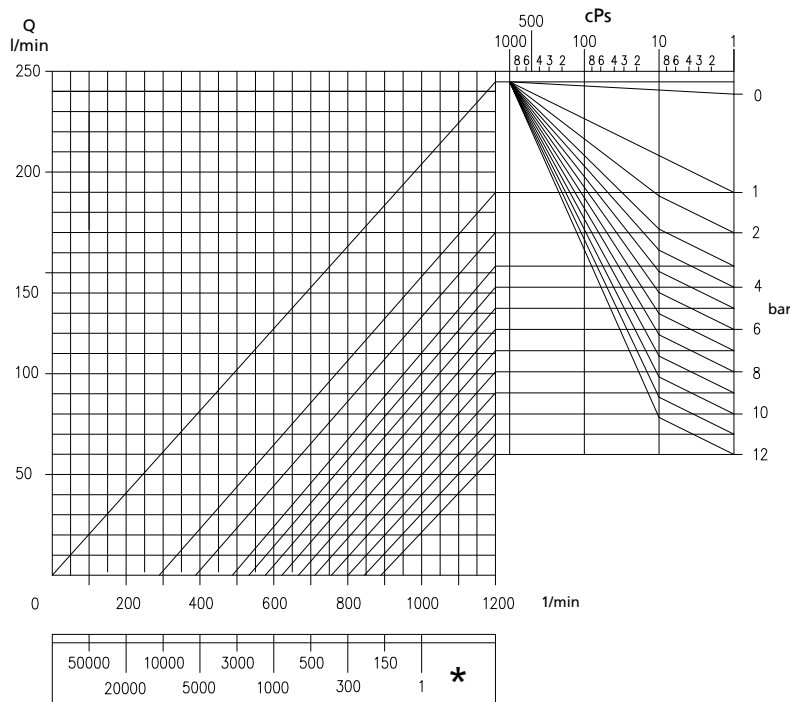

* Max. viscosity (cPs) at 0 bar (g) suction pressure / inlet pressure
Nozzle diameter 38 mm
Standard nominal nozzle diameter DN 40
Max. speed at 1 cPs = 1000 rpm
It is recommended not to use all maximum values at the same time.

Total input power Vitalobe 115 - tri-lobe rotor - clearance: enlarged

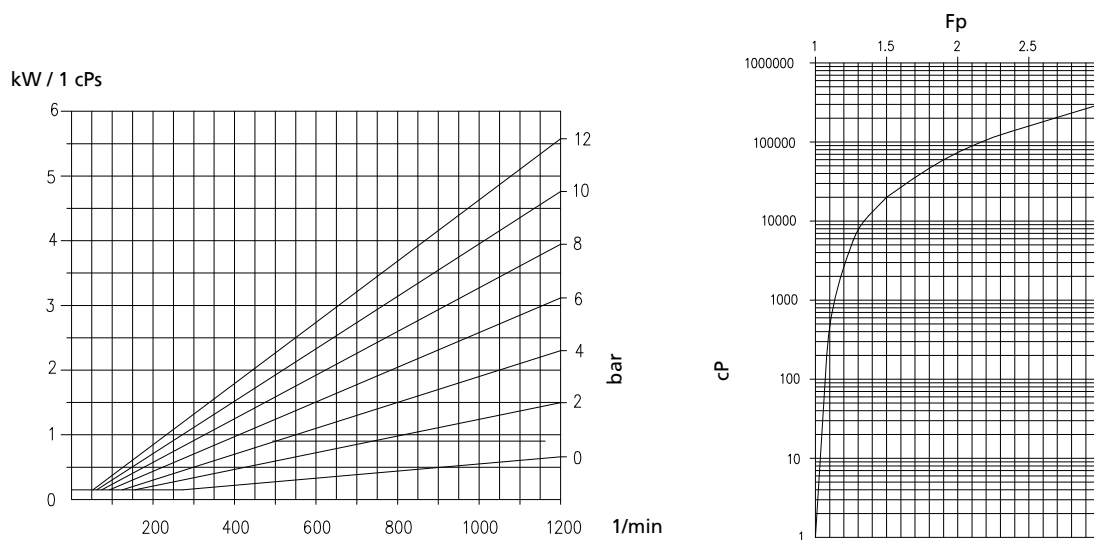


Total power = kW (1 cPs) x Fp

¹¹⁾ The characteristic curves shown are intended for orientation. Some individual pumps may differ for reasons related to their production, the fluid handled and the system conditions.

Characteristic curve Vitalobe 115 - bi-wing rotor - clearance: standard


Characteristic curve Vitalobe 115 - bi-wing rotor - clearance: standard

Flow rate: 0.19 l/rotation ¹²⁾

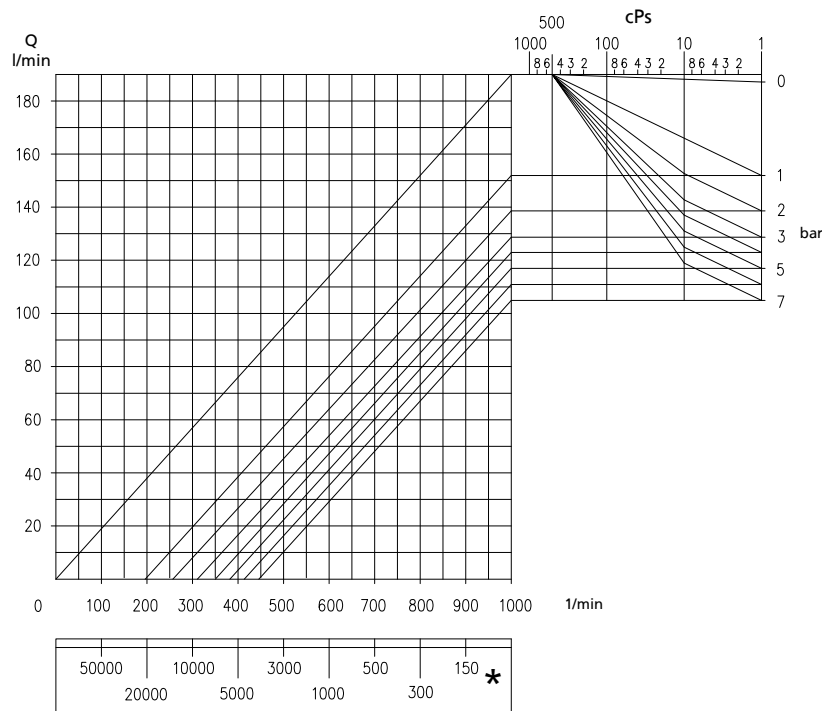

* Max. viscosity (cPs) at 0 bar (g) suction pressure / inlet pressure
Nozzle diameter 38 mm
Standard nominal nozzle diameter DN 40
Max. speed at 1 cPs = 1000 rpm
It is recommended not to use all maximum values at the same time.


Total input power Vitalobe 115 - bi-wing rotor - clearance: standard

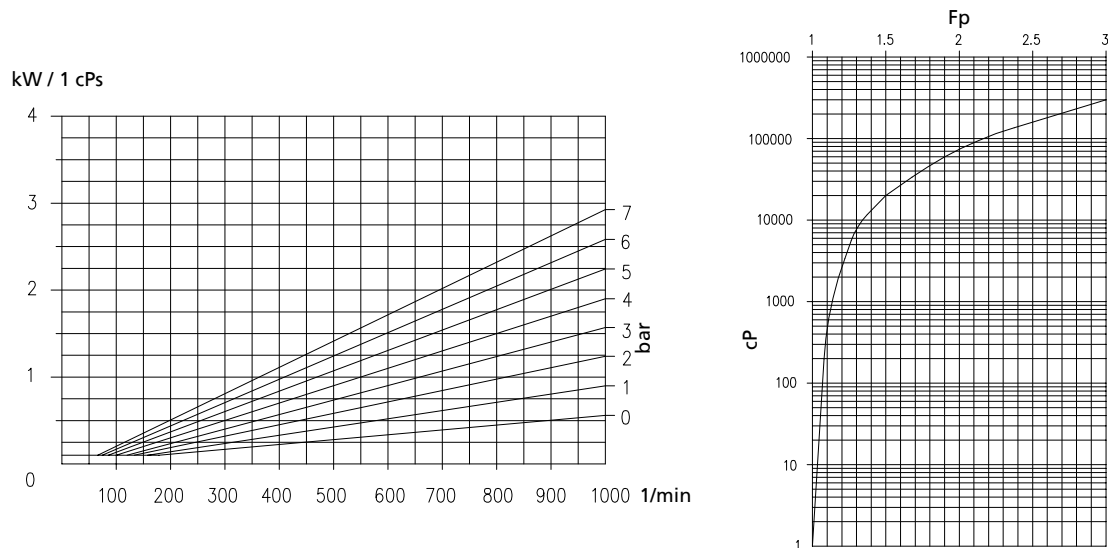

Total power = kW (1 cPs) x F_p

¹²⁾ The characteristic curves shown are intended for orientation. Some individual pumps may differ for reasons related to their production, the fluid handled and the system conditions.


NPSH curve Vitalobe 115

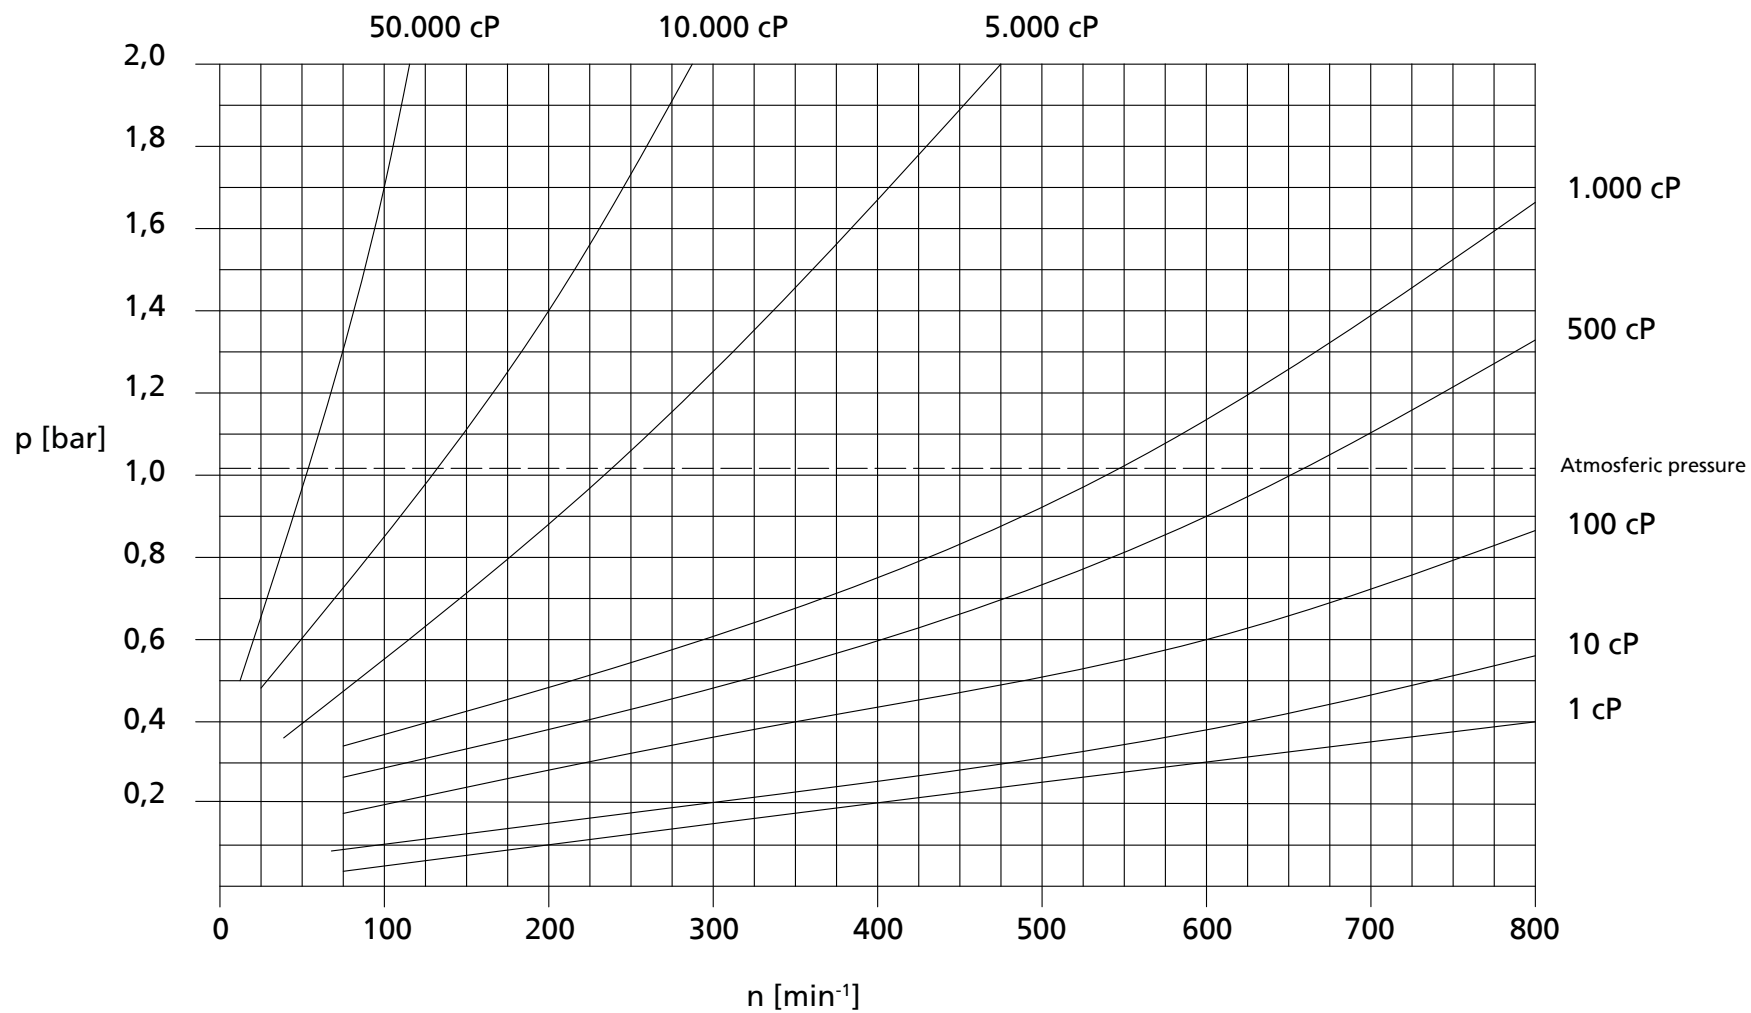

Characteristic curve Vitalobe 215 - bi-lobe rotor - clearance: standard


Characteristic curve Vitalobe 215 - bi-lobe rotor - clearance: standard

Flow rate: 0.274 l/rotation ¹³⁾

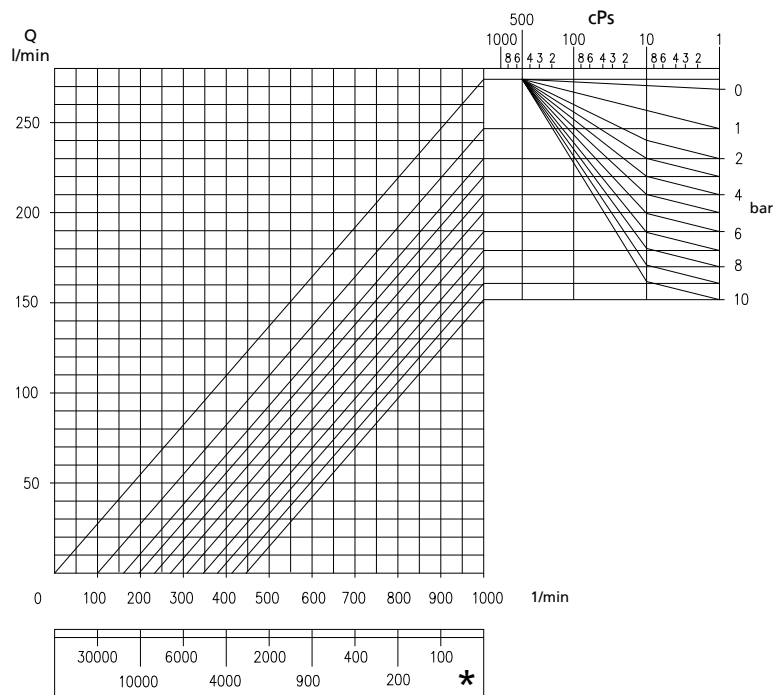

* Max. viscosity (cPs) at 0 bar (g) suction pressure / inlet pressure
Nozzle diameter 38 mm
Standard nominal nozzle diameter DN 40
Max. speed at 1 cPs = 1000 rpm
It is recommended not to use all maximum values at the same time.

Total input power Vitalobe 215 - bi-lobe rotor - clearance: standard

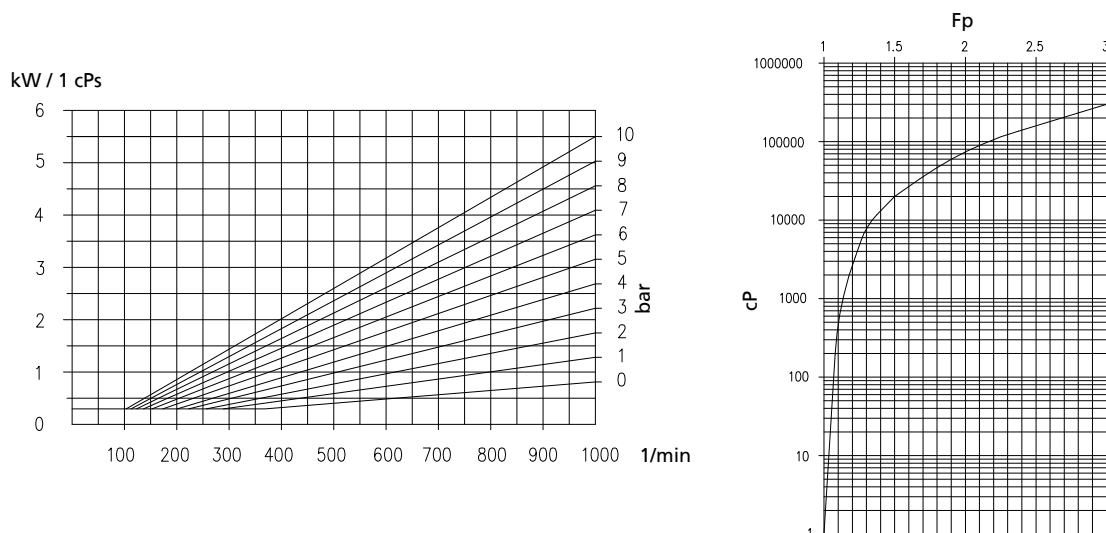


Total power = kW (1 cPs) x Fp

¹³⁾ The characteristic curves shown are intended for orientation. Some individual pumps may differ for reasons related to their production, the fluid handled and the system conditions.

Characteristic curve Vitalobe 215 - tri-lobe rotor - clearance: standard


Characteristic curve Vitalobe 215 - tri-lobe rotor - clearance: standard

Flow rate: 0.274 l/rotation ¹⁴⁾

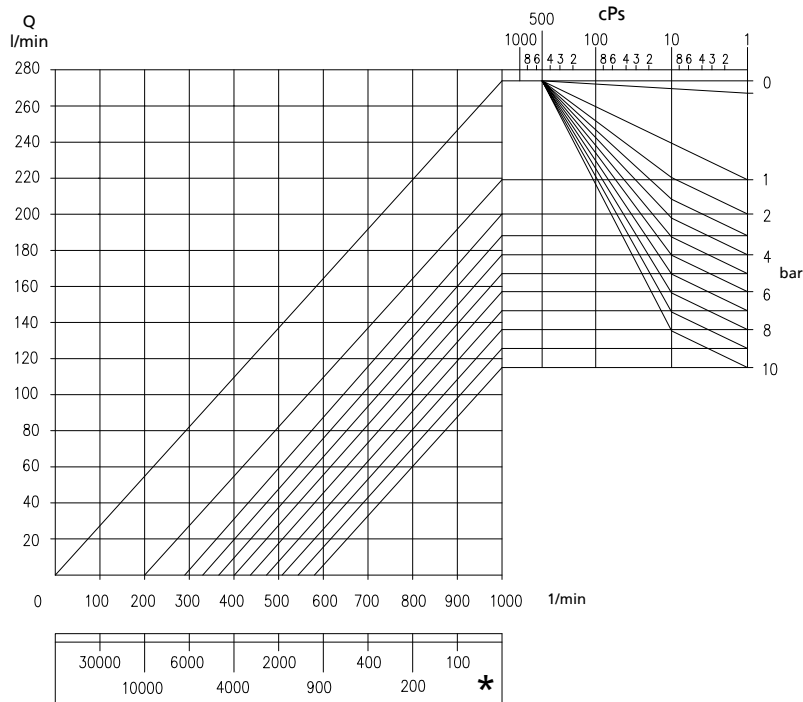

* Max. viscosity (cPs) at 0 bar (g) suction pressure / inlet pressure
Nozzle diameter 38 mm
Standard nominal nozzle diameter DN 40
Max. speed at 1 cPs = 1000 rpm
It is recommended not to use all maximum values at the same time.

Total input power Vitalobe 215 - tri-lobe rotor - clearance: standard

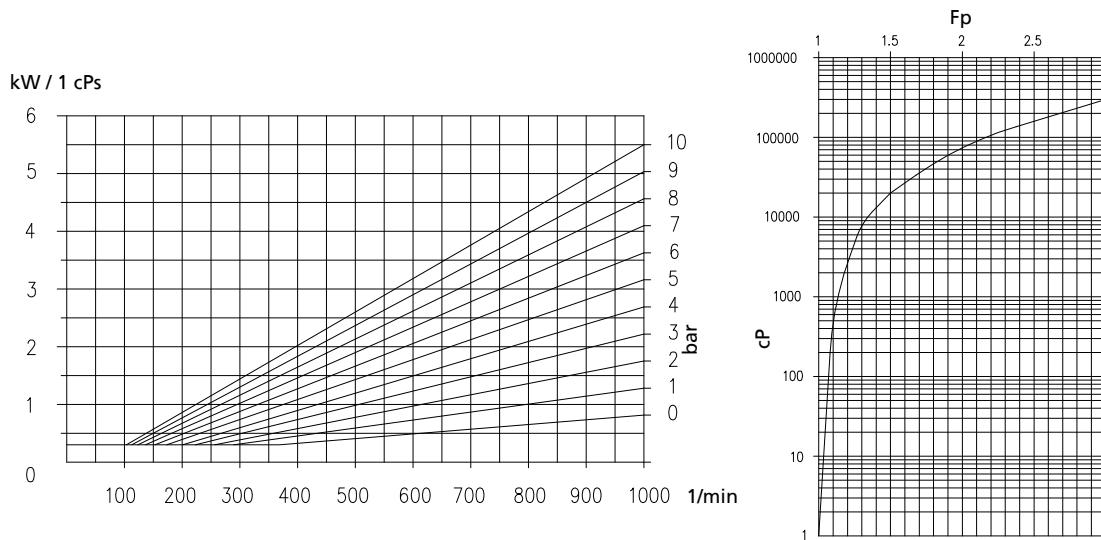


Total power = kW (1 cPs) x Fp

¹⁴⁾ The characteristic curves shown are intended for orientation. Some individual pumps may differ for reasons related to their production, the fluid handled and the system conditions.

Characteristic curve Vitalobe 215 - tri-lobe rotor - clearance: enlarged



Characteristic curve Vitalobe 215 - tri-lobe rotor - clearance: enlarged

Flow rate: 0.274 l/rotation ¹⁵⁾

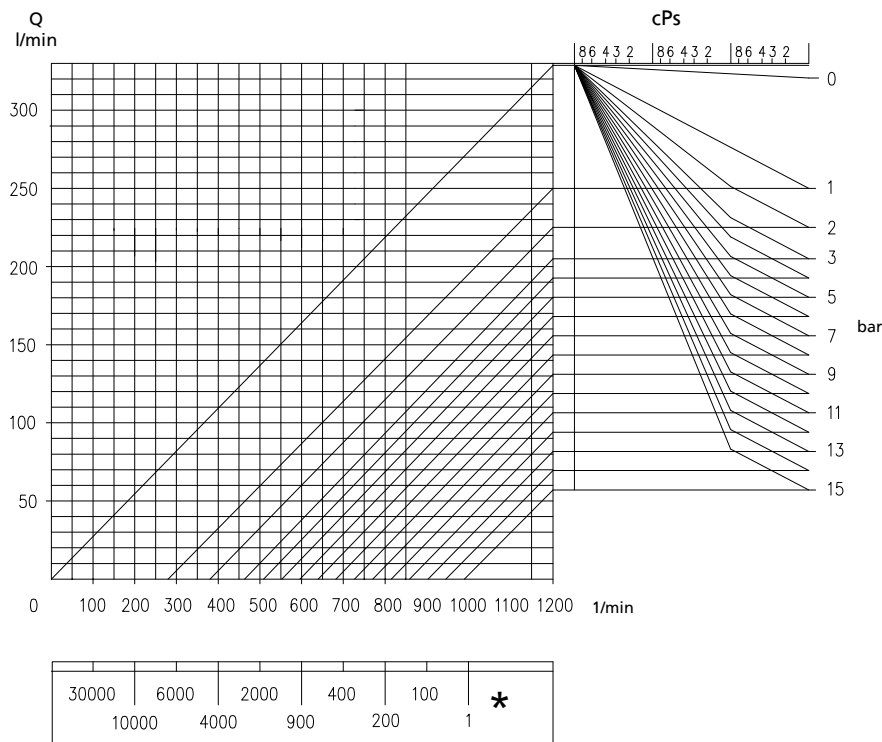

* Max. viscosity (cPs) at 0 bar (g) suction pressure / inlet pressure
Nozzle diameter 38 mm
Standard nominal nozzle diameter DN 40
Max. speed at 1 cPs = 1000 rpm
It is recommended not to use all maximum values at the same time.

Total input power Vitalobe 215 - tri-lobe rotor - clearance: enlarged

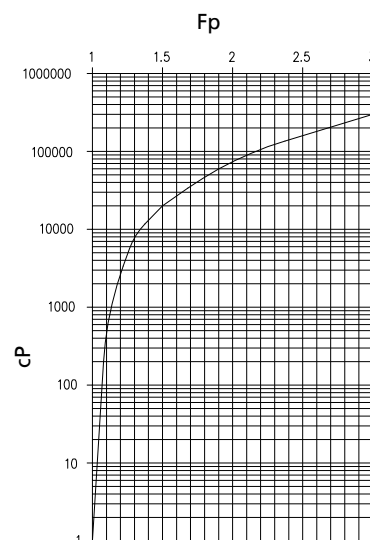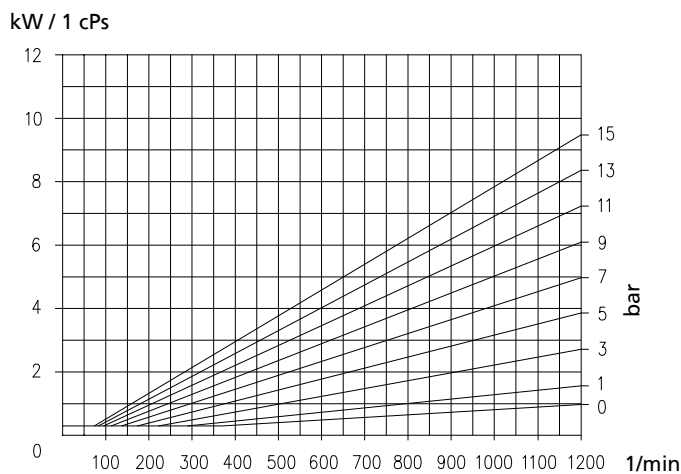


Total power = kW (1 cPs) x Fp

¹⁵⁾ The characteristic curves shown are intended for orientation. Some individual pumps may differ for reasons related to their production, the fluid handled and the system conditions.

Characteristic curve Vitalobe 215 - bi-wing rotor - clearance: standard


Characteristic curve Vitalobe 215 - bi-wing rotor - clearance: standard

Flow rate: 0.244 l/rotation ¹⁶⁾

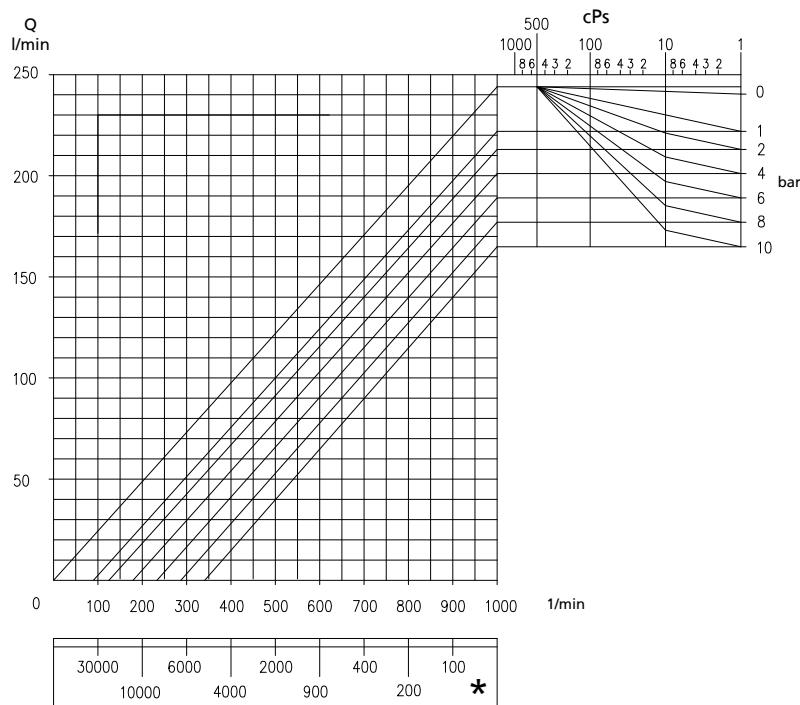

* Max. viscosity (cPs) at 0 bar (g) suction pressure / inlet pressure
Nozzle diameter 38 mm
Standard nominal nozzle diameter DN 40
Max. speed at 1 cPs = 1000 rpm
It is recommended not to use all maximum values at the same time.

Total input power Vitalobe 215 - bi-wing rotor - clearance: standard

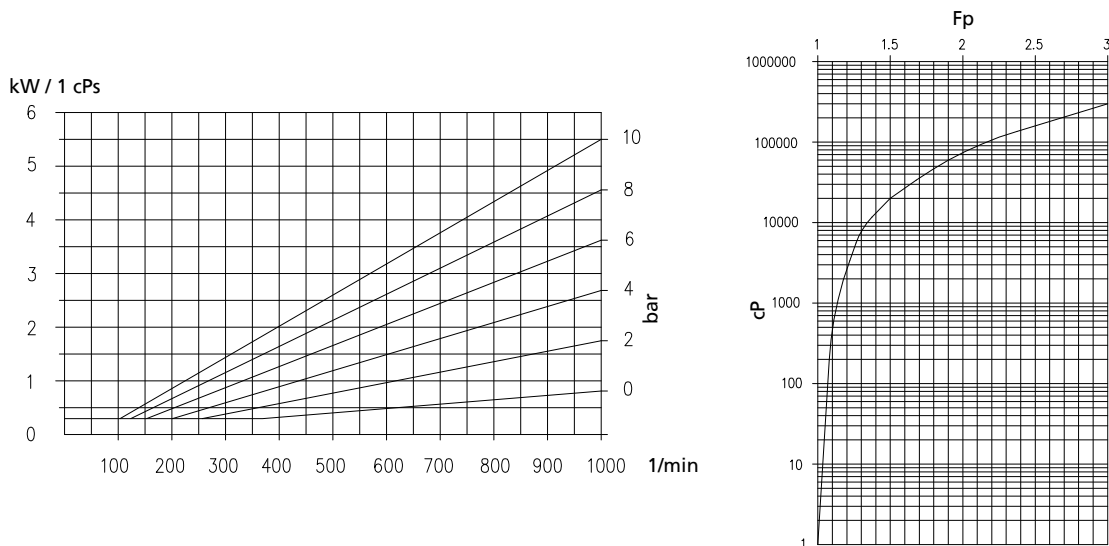


Total power = $kW (1 \text{ cPs}) \times Fp$

¹⁶⁾ The characteristic curves shown are intended for orientation. Some individual pumps may differ for reasons related to their production, the fluid handled and the system conditions.

Characteristic curve Vitalobe 215 - bi-wing rotor - clearance: enlarged


Characteristic curve Vitalobe 215 - bi-wing rotor - clearance: enlarged

Flow rate: 0.24 l/rotation ¹⁷⁾

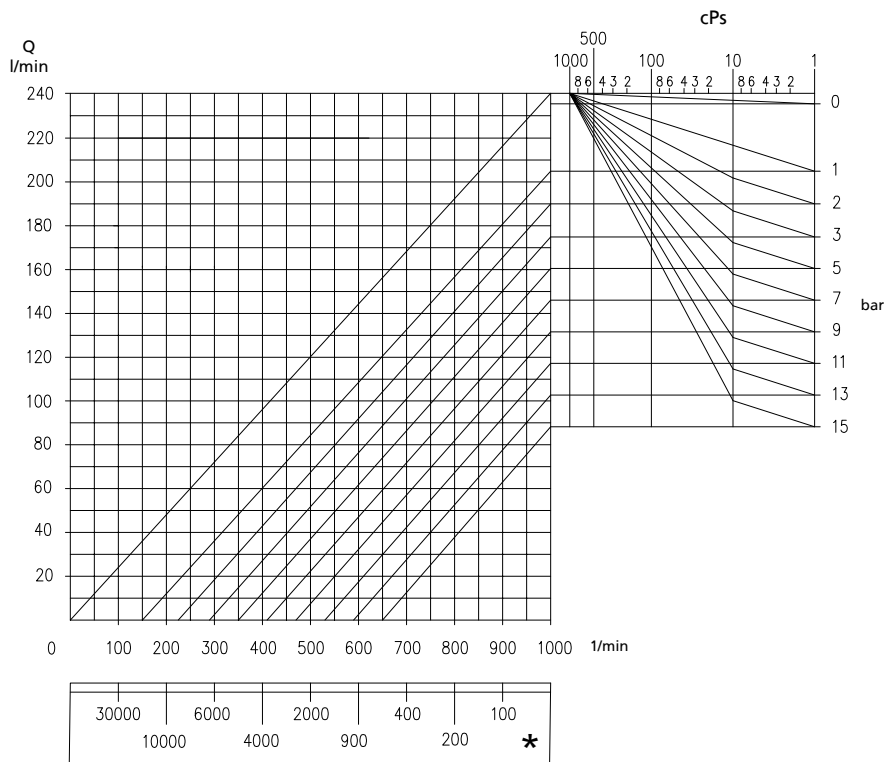

* Max. viscosity (cPs) at 0 bar (g) suction pressure / inlet pressure
Nozzle diameter 38 mm
Standard nominal nozzle diameter DN 40
Max. speed at 1 cPs = 1000 rpm
It is recommended not to use all maximum values at the same time.


Total input power Vitalobe 215 - bi-wing rotor - clearance: enlarged

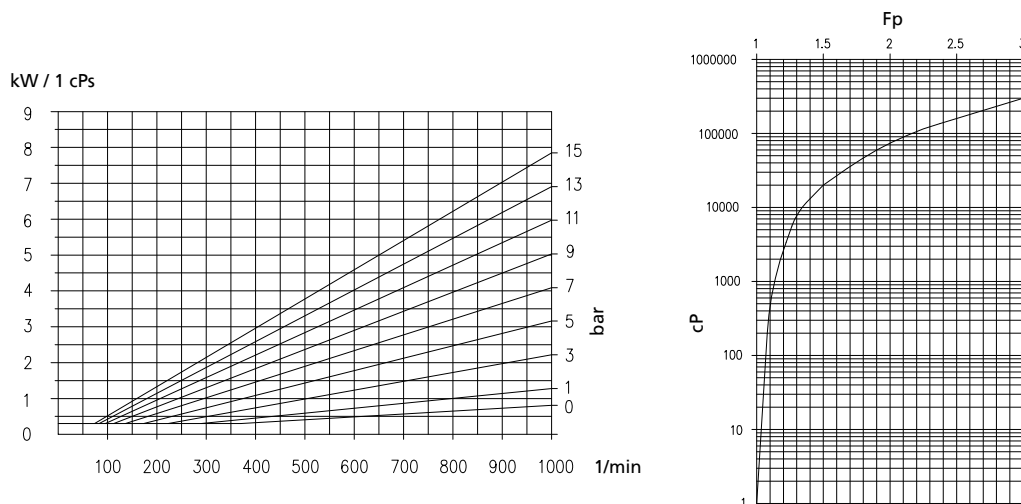

Total power = kW (1 cPs) x Fp

¹⁷⁾ The characteristic curves shown are intended for orientation. Some individual pumps may differ for reasons related to their production, the fluid handled and the system conditions.


NPSH curve Vitalobe 215

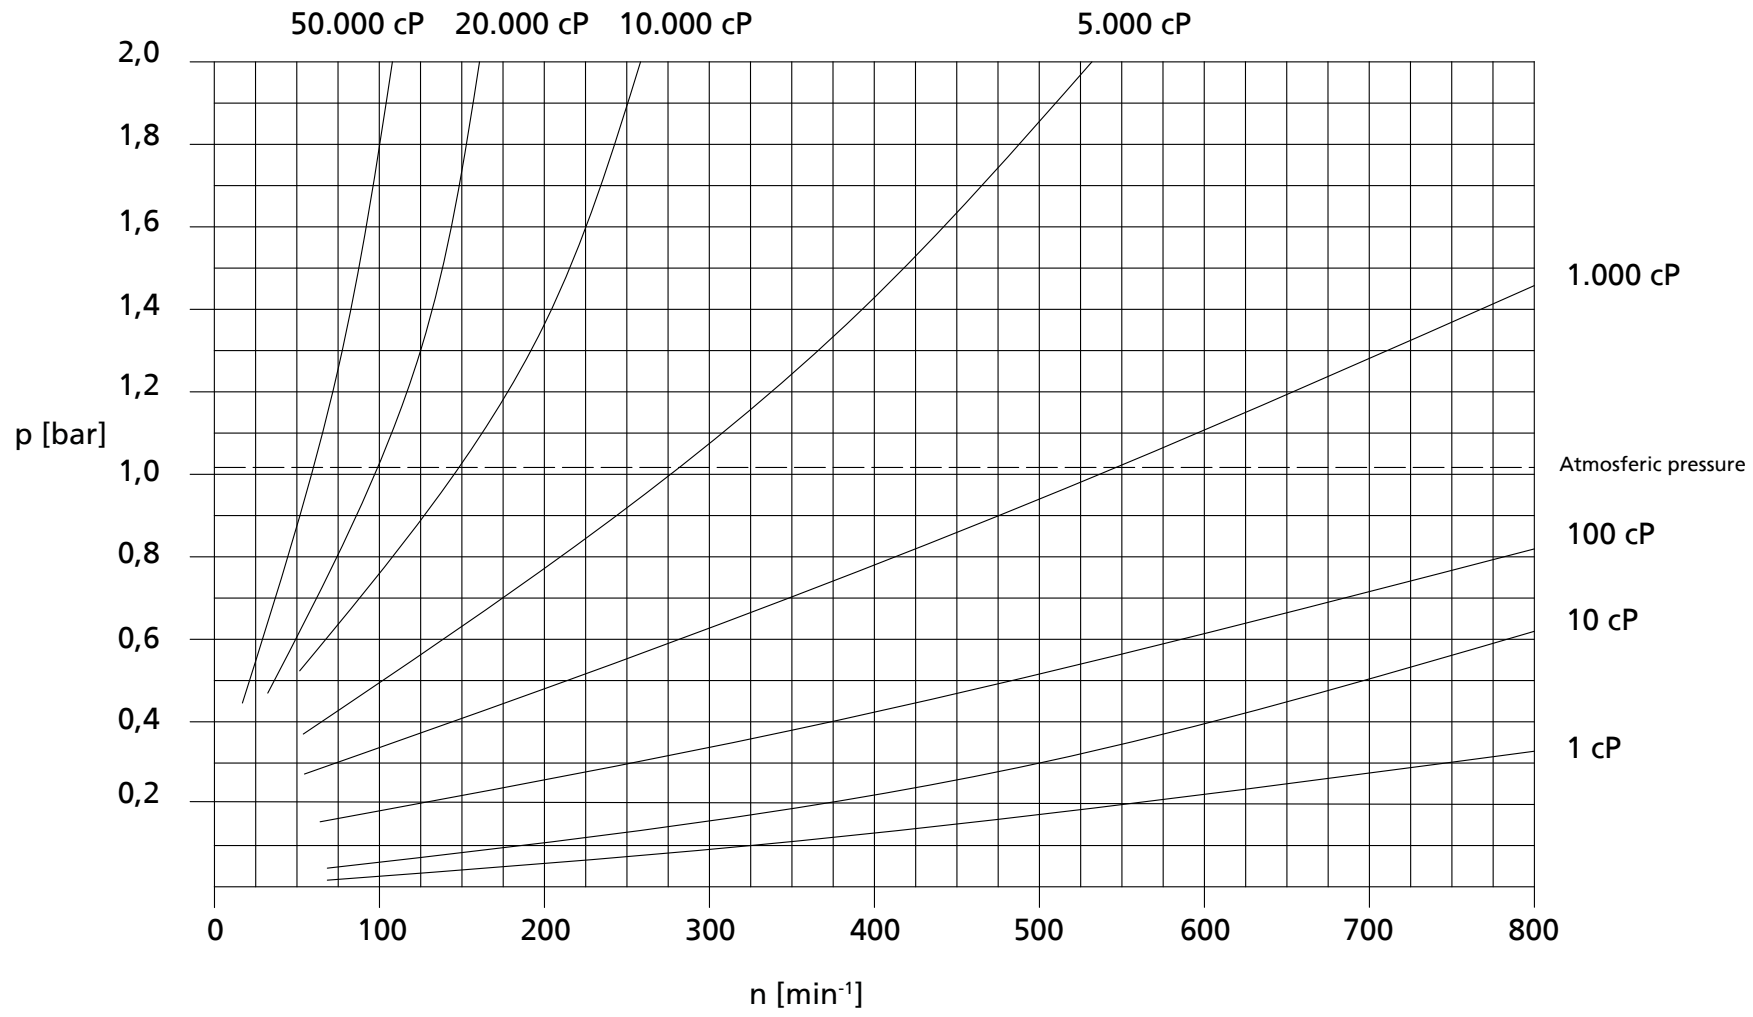

Characteristic curve Vitalobe 220 - bi-lobe rotor - clearance: standard


Characteristic curve Vitalobe 220 - bi-lobe rotor - clearance: standard

Flow rate: 0.39 l/rotation ¹⁸⁾

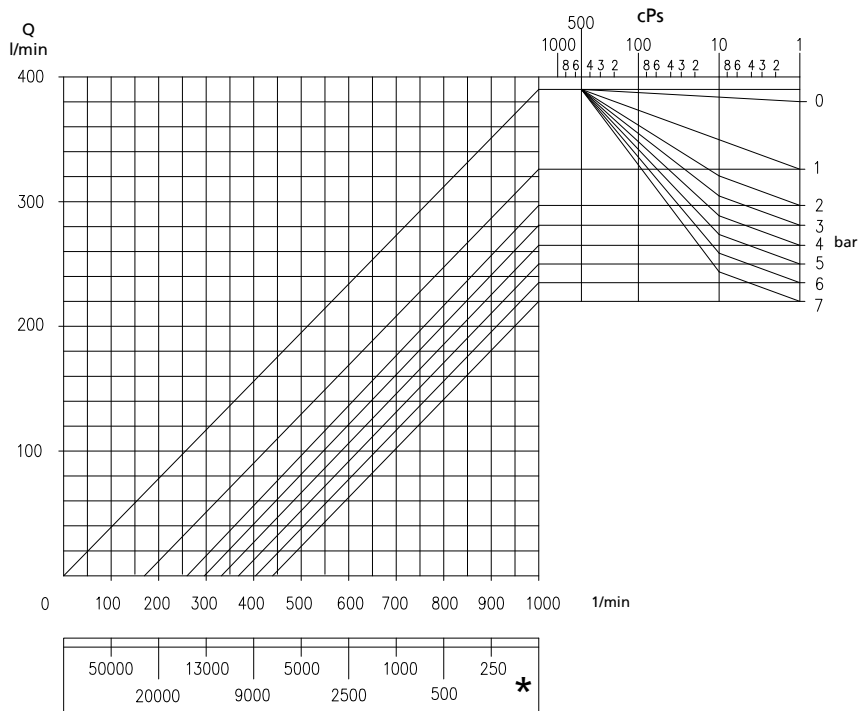

* Max. viscosity (cPs) at 0 bar (g) suction pressure / inlet pressure
Nozzle diameter 50 mm
Standard nominal nozzle diameter DN 50
Max. speed at 1 cPs = 1000 rpm
It is recommended not to use all maximum values at the same time.

Total input power Vitalobe 220 - bi-lobe rotor - clearance: standard

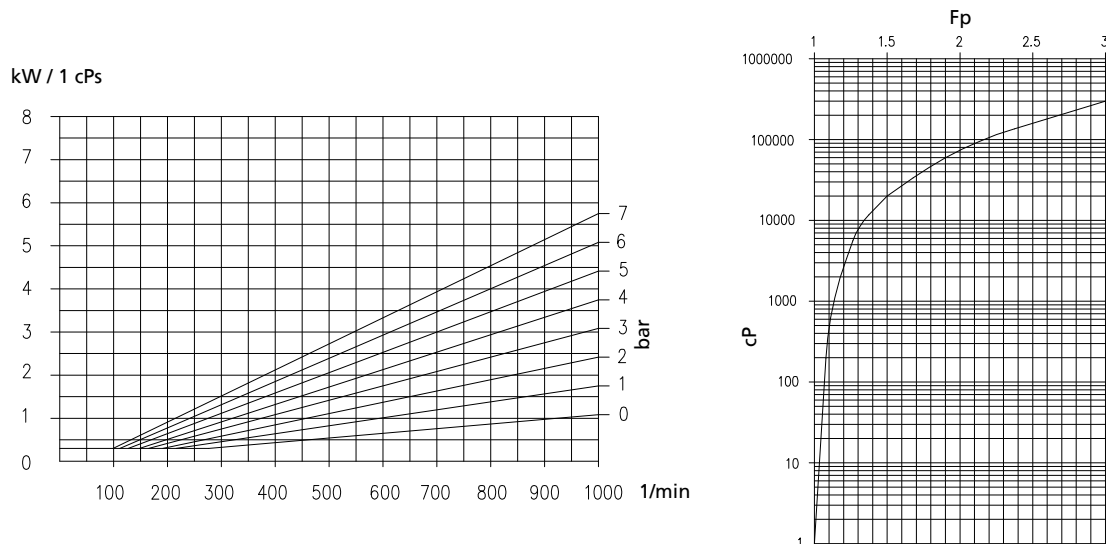


Total power = kW (1 cPs) x Fp

¹⁸⁾ The characteristic curves shown are intended for orientation. Some individual pumps may differ for reasons related to their production, the fluid handled and the system conditions.

Characteristic curve Vitalobe 220 - tri-lobe rotor - clearance: standard


Characteristic curve Vitalobe 220 - tri-lobe rotor - clearance: standard

Flow rate: 0.39 l/rotation ¹⁹⁾

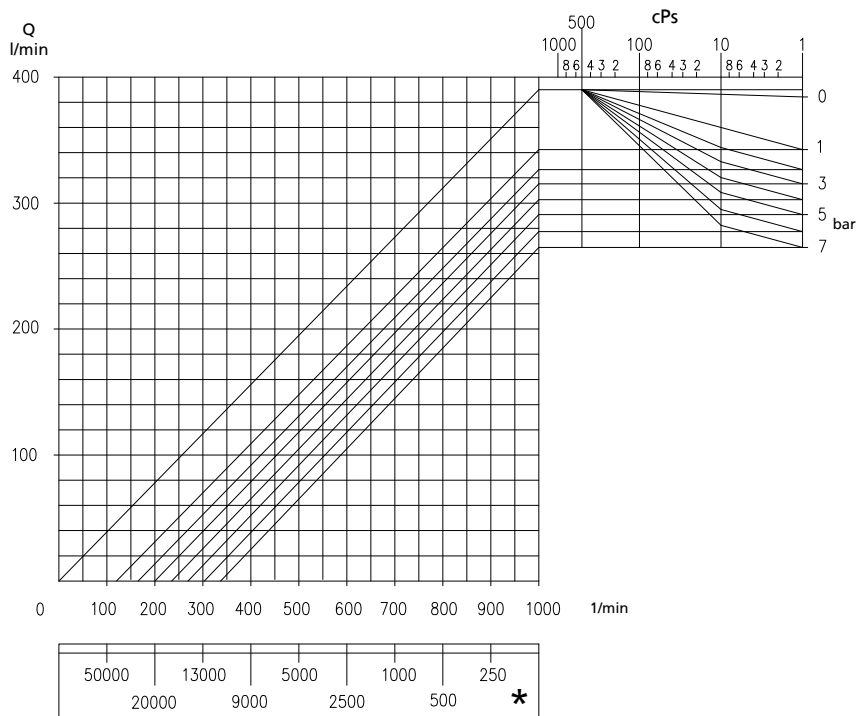

* Max. viscosity (cPs) at 0 bar (g) suction pressure / inlet pressure
Nozzle diameter 50 mm
Standard nominal nozzle diameter DN 50
Max. speed at 1 cPs = 1000 rpm
It is recommended not to use all maximum values at the same time.

Total input power Vitalobe 220 - tri-lobe rotor - clearance: standard

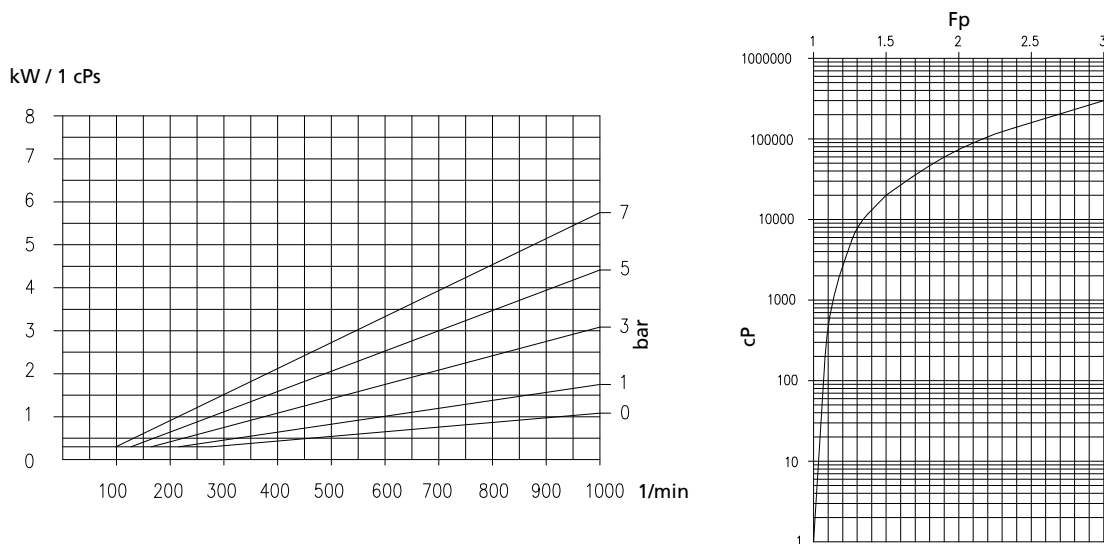


Total power = kW (1 cPs) x Fp

¹⁹⁾ The characteristic curves shown are intended for orientation. Some individual pumps may differ for reasons related to their production, the fluid handled and the system conditions.

Characteristic curve Vitalobe 220 - tri-lobe rotor - clearance: enlarged



Characteristic curve Vitalobe 220 - tri-lobe rotor - clearance: enlarged

Flow rate: 0.39 l/rotation ²⁰⁾

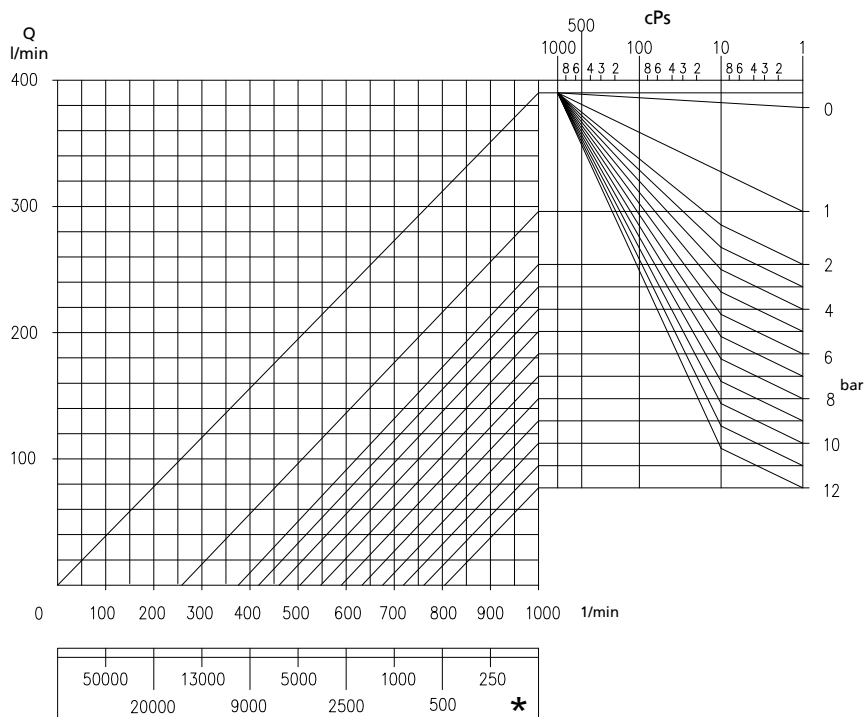

* Max. viscosity (cPs) at 0 bar (g) suction pressure / inlet pressure
Nozzle diameter 50 mm
Standard nominal nozzle diameter DN 50
Max. speed at 1 cPs = 1000 rpm
It is recommended not to use all maximum values at the same time.

Total input power Vitalobe 220 - tri-lobe rotor - clearance: enlarged

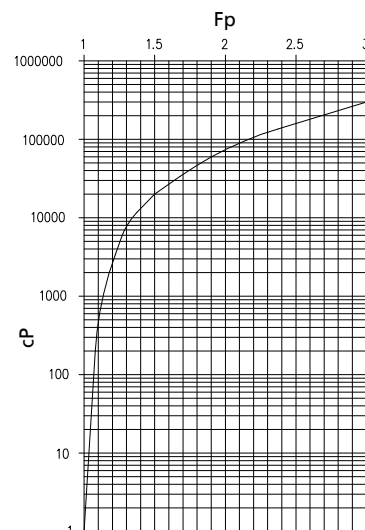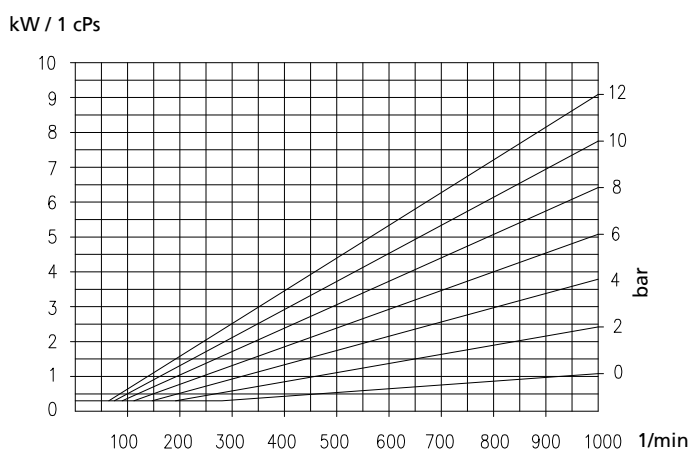


Total power = kW (1 cPs) x Fp

²⁰⁾ The characteristic curves shown are intended for orientation. Some individual pumps may differ for reasons related to their production, the fluid handled and the system conditions.

Characteristic curve Vitalobe 220 - bi-wing rotor - clearance: standard


Characteristic curve Vitalobe 220 - bi-wing rotor - clearance: standard

Flow rate: 0.348 l/rotation ²¹⁾

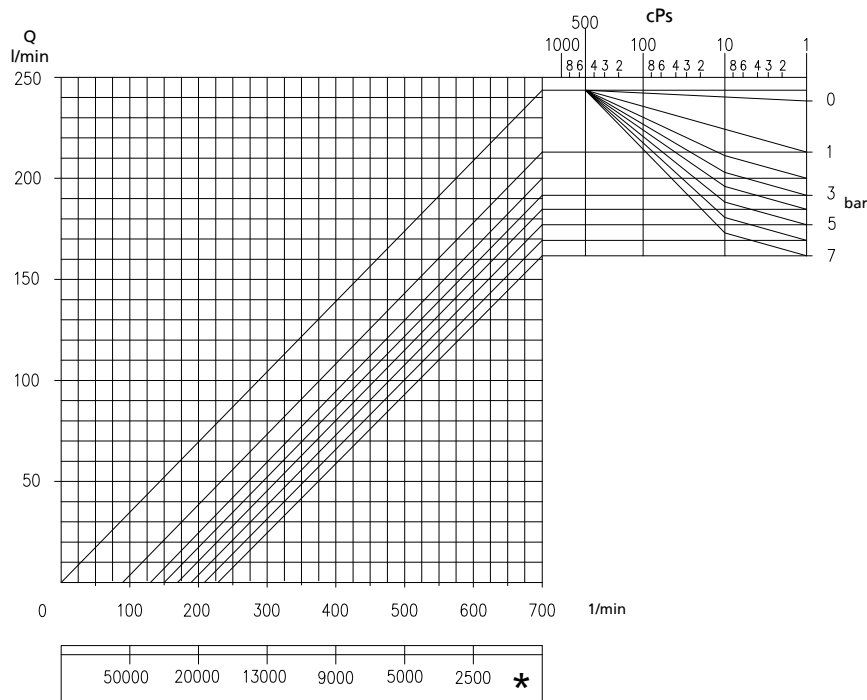

* Max. viscosity (cPs) at 0 bar (g) suction pressure / inlet pressure
Nozzle diameter 50 mm
Standard nominal nozzle diameter DN 50
Max. speed at 1 cPs = 700 rpm
It is recommended not to use all maximum values at the same time.

Total input power Vitalobe 220 - bi-wing rotor - clearance: standard

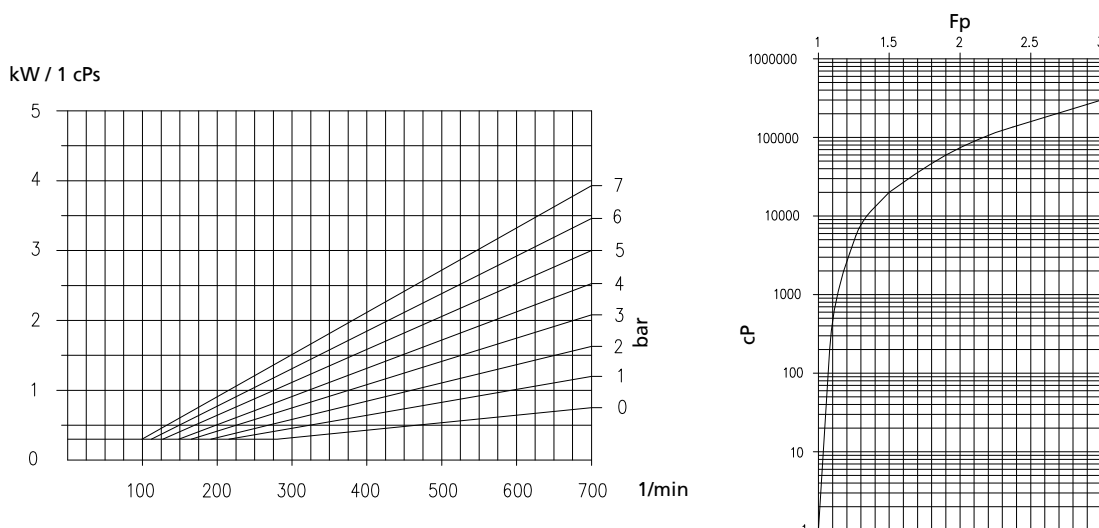


Total power = kW (1 cPs) x Fp

²¹⁾ The characteristic curves shown are intended for orientation. Some individual pumps may differ for reasons related to their production, the fluid handled and the system conditions.

Characteristic curve Vitalobe 220 - bi-wing rotor - clearance: enlarged


Characteristic curve Vitalobe 220 - bi-wing rotor - clearance: enlarged

Flow rate: 0.34 l/rotation ²²⁾

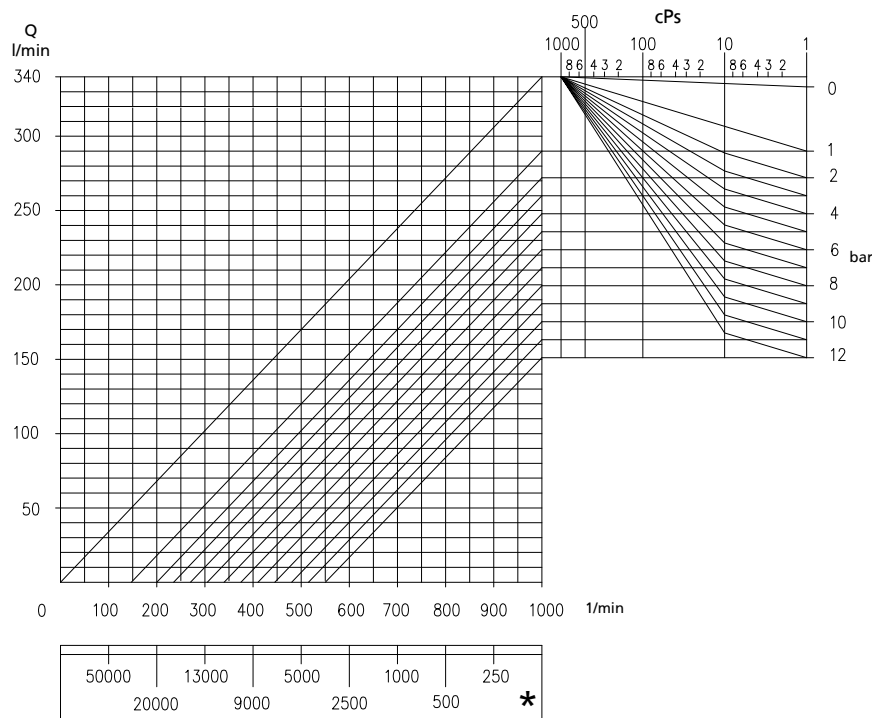

* Max. viscosity (cPs) at 0 bar (g) suction pressure / inlet pressure
Nozzle diameter 50 mm
Standard nominal nozzle diameter DN 50
Max. speed at 1 cPs = 1000 rpm
It is recommended not to use all maximum values at the same time.


Total input power Vitalobe 220 - bi-wing rotor - clearance: enlarged

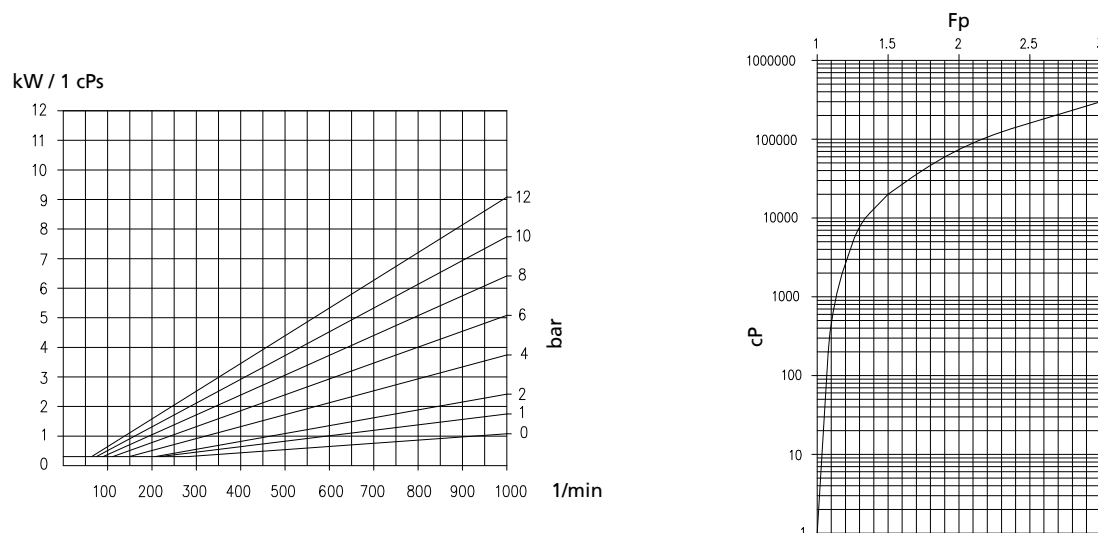

Total power = kW (1 cPs) x Fp

²²⁾ The characteristic curves shown are intended for orientation. Some individual pumps may differ for reasons related to their production, the fluid handled and the system conditions.


NPSH curve Vitalobe 220

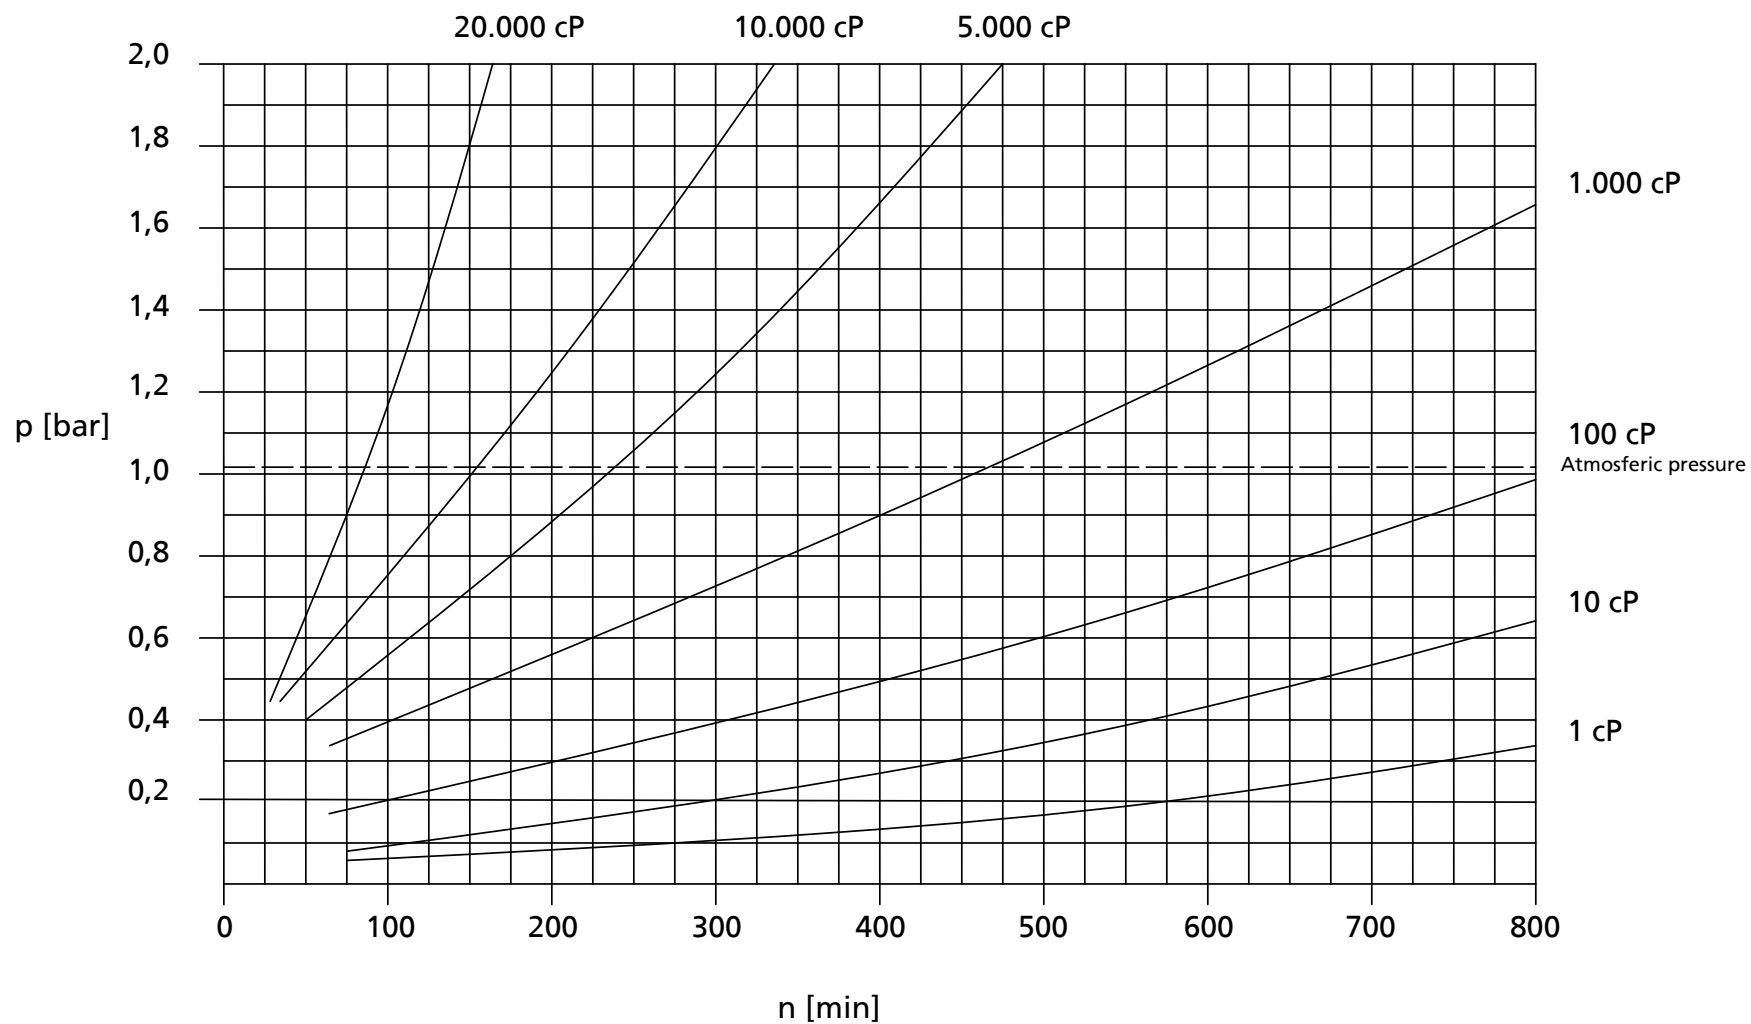

Characteristic curve Vitalobe 325 - bi-lobe rotor - clearance: standard


Characteristic curve Vitalobe 325 - bi-lobe rotor - clearance: standard

Flow rate: 0.62 l/rotation ²³⁾

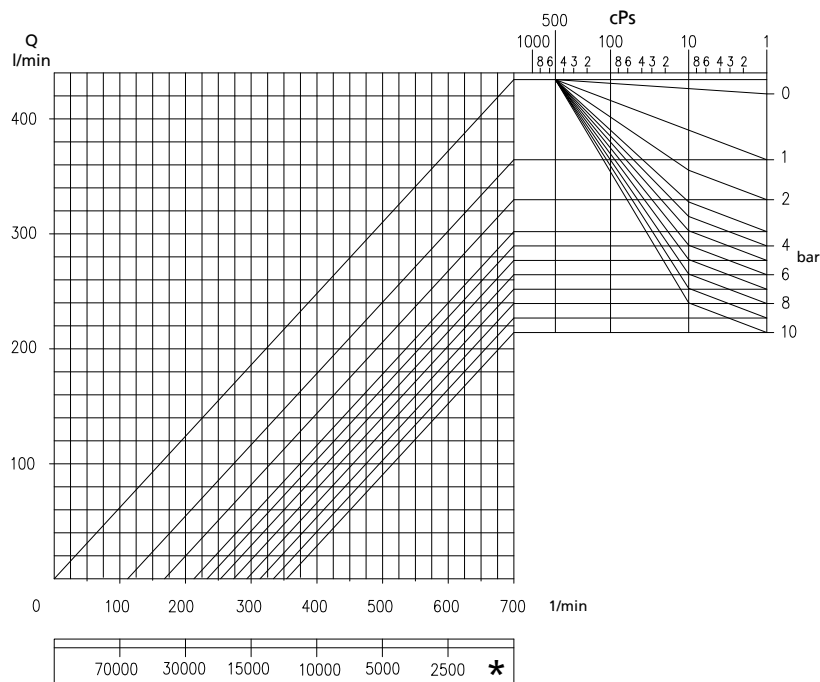

* Max. viscosity (cPs) at 0 bar (g) suction pressure / inlet pressure
Nozzle diameter 57 mm
Standard nominal nozzle diameter DN 65
Max. speed at 1 cPs = 700 rpm
It is recommended not to use all maximum values at the same time.

Total input power Vitalobe 325 - bi-lobe rotor - clearance: standard

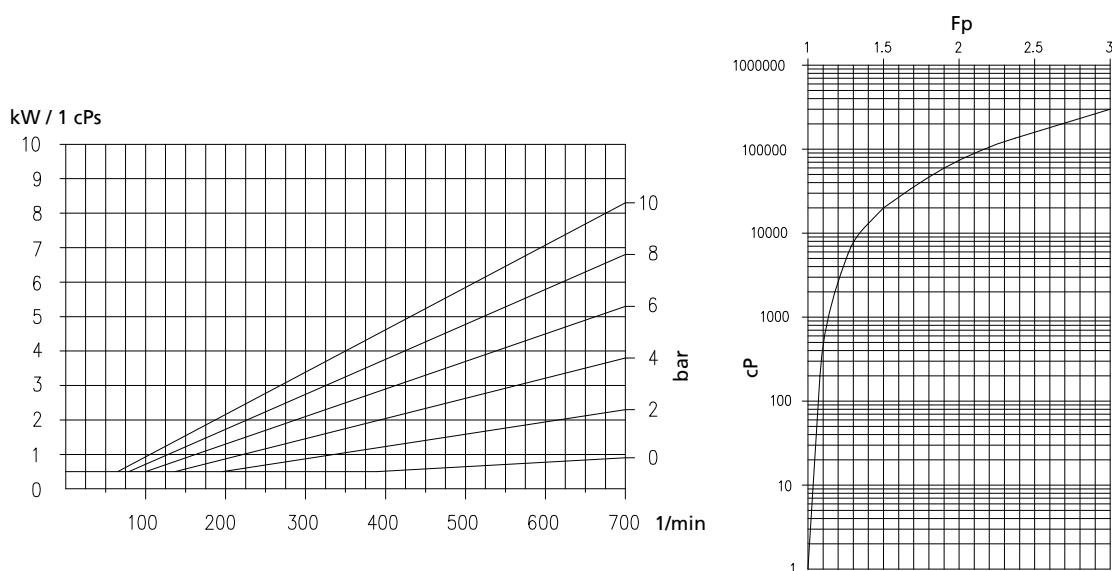


Total power = kW (1 cPs) x Fp

²³⁾ The characteristic curves shown are intended for orientation. Some individual pumps may differ for reasons related to their production, the fluid handled and the system conditions.

Characteristic curve Vitalobe 325 - tri-lobe rotor - clearance: standard


Characteristic curve Vitalobe 325 - tri-lobe rotor - clearance: standard

Flow rate: 0.62 l/rotation ²⁴⁾

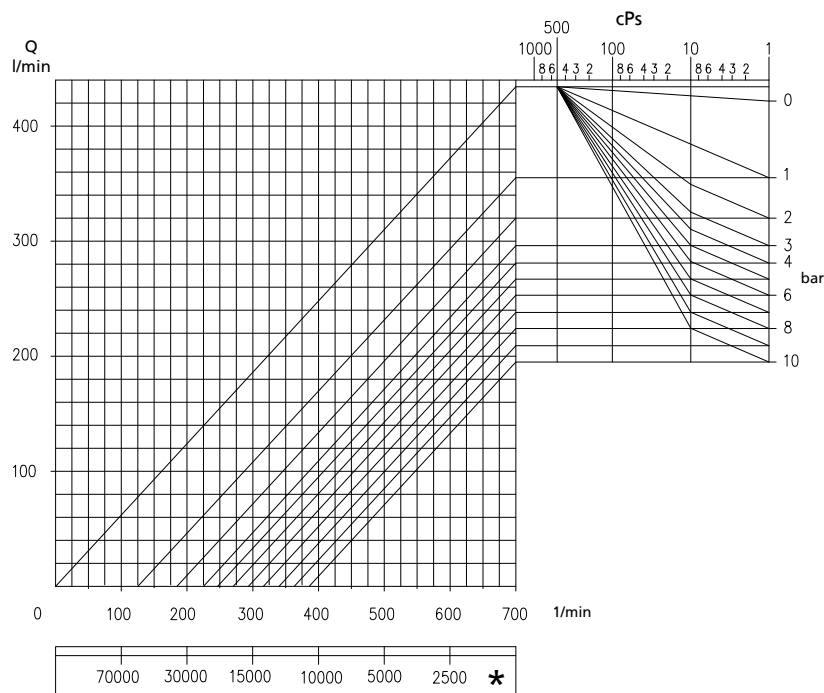

* Max. viscosity (cPs) at 0 bar (g) suction pressure / inlet pressure
Nozzle diameter 57 mm
Standard nominal nozzle diameter DN 65
Max. speed at 1 cPs = 700 rpm
It is recommended not to use all maximum values at the same time.

Total input power Vitalobe 325 - tri-lobe rotor - clearance: standard

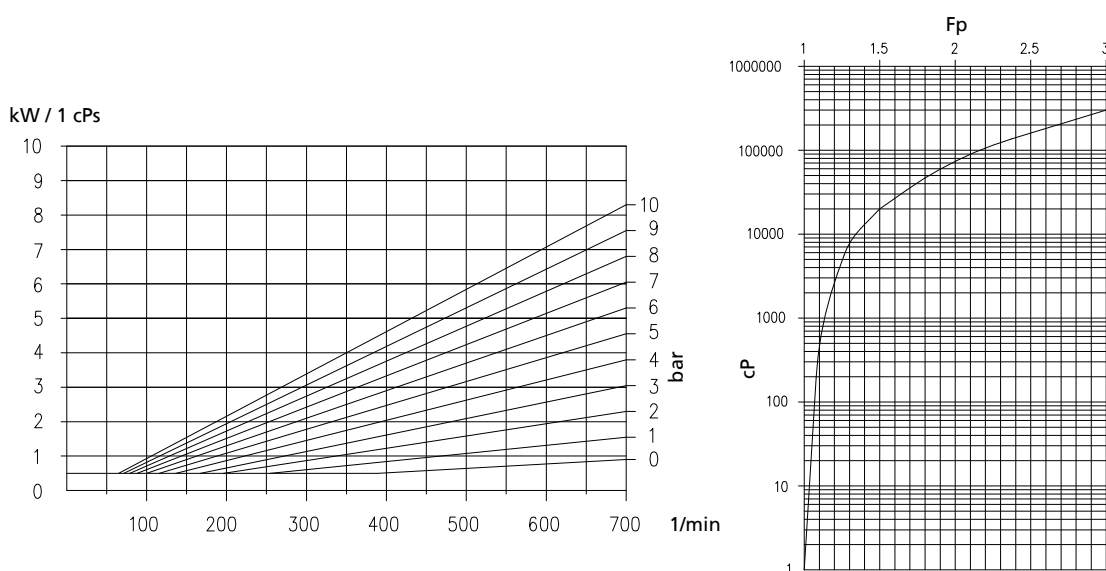


Total power = kW (1 cPs) x Fp

²⁴⁾ The characteristic curves shown are intended for orientation. Some individual pumps may differ for reasons related to their production, the fluid handled and the system conditions.

Characteristic curve Vitalobe 325 - tri-lobe rotor - clearance: enlarged


Characteristic curve Vitalobe 325 - tri-lobe rotor - clearance: enlarged

Flow rate: 0.62 l/rotation ²⁵⁾

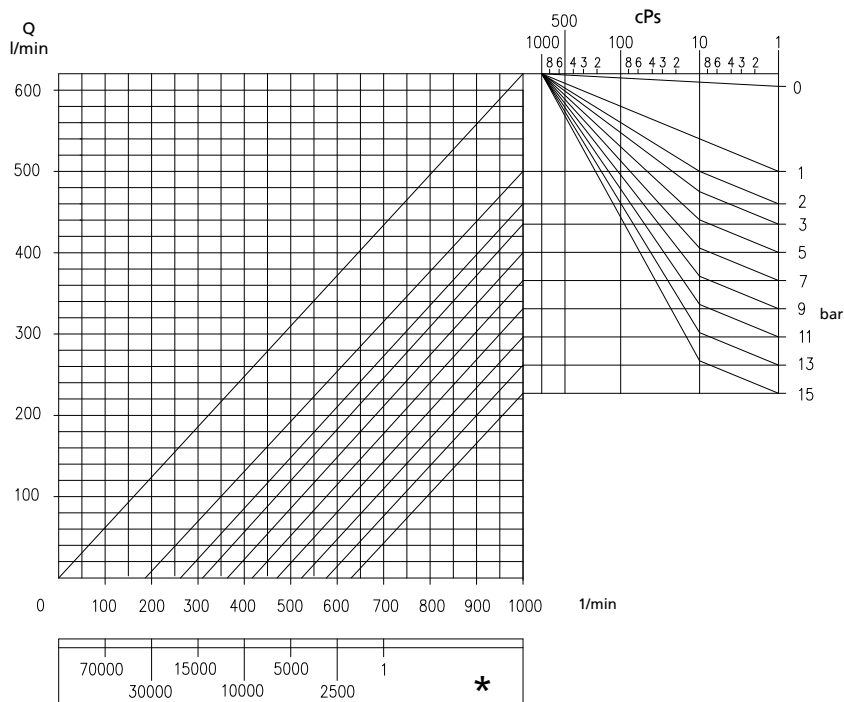

* Max. viscosity (cPs) at 0 bar (g) suction pressure / inlet pressure
Nozzle diameter 57 mm
Standard nominal nozzle diameter DN 65
Max. speed at 1 cPs = 700 rpm
It is recommended not to use all maximum values at the same time.

Total input power Vitalobe 325 - tri-lobe rotor - clearance: enlarged

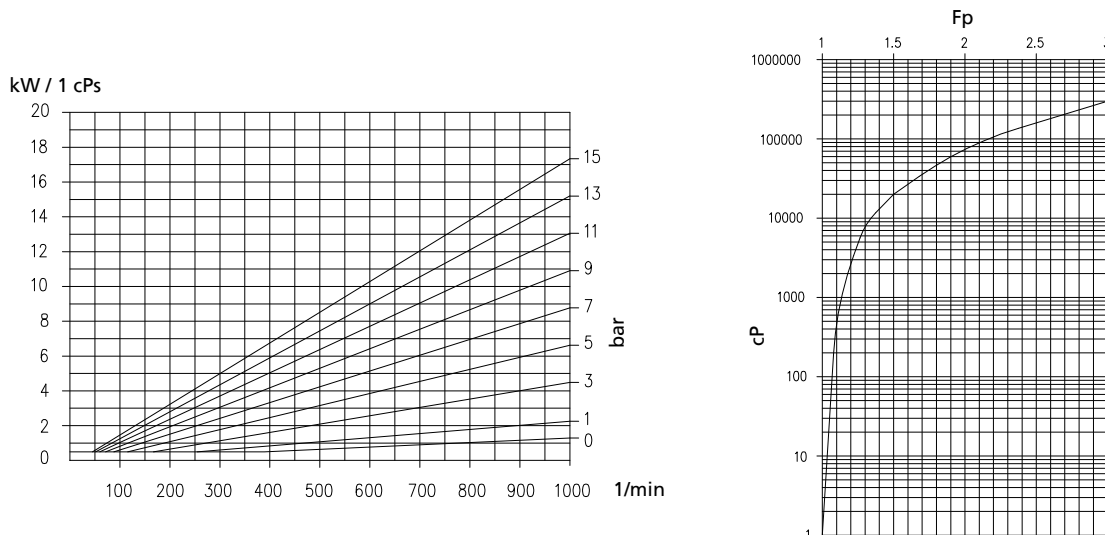


Total power = kW (1 cPs) x Fp

²⁵⁾ The characteristic curves shown are intended for orientation. Some individual pumps may differ for reasons related to their production, the fluid handled and the system conditions.

Characteristic curve Vitalobe 325 - bi-wing rotor - clearance: standard


Characteristic curve Vitalobe 325 - bi-wing rotor - clearance: standard

Flow rate: 0.55 l/rotation ²⁶⁾

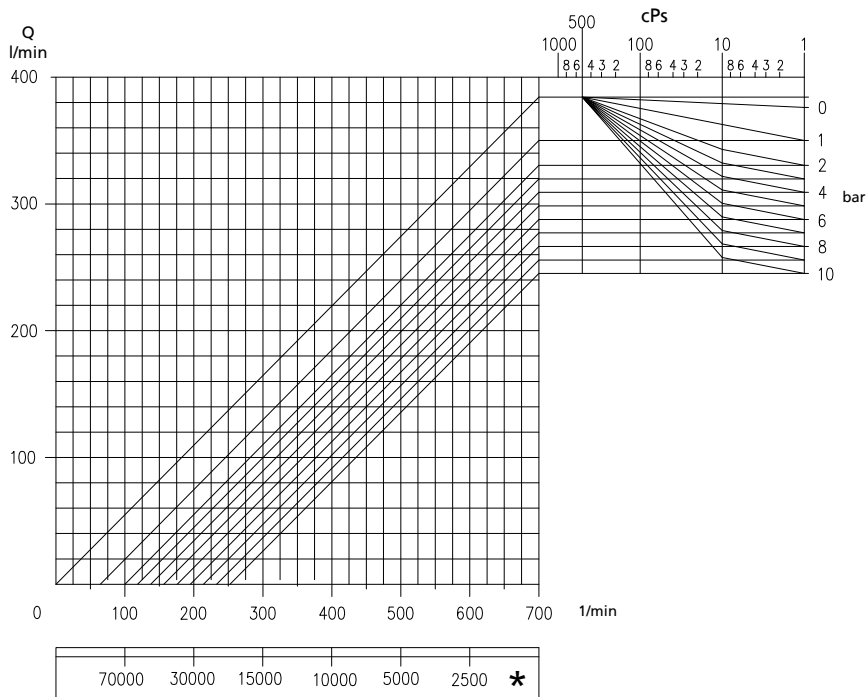

* Max. viscosity (cPs) at 0 bar (g) suction pressure / inlet pressure
Nozzle diameter 57 mm
Standard nominal nozzle diameter DN 65
Max. speed at 1 cPs = 700 rpm
It is recommended not to use all maximum values at the same time.

Total input power Vitalobe 325 - Bi-wing rotor - clearance: standard

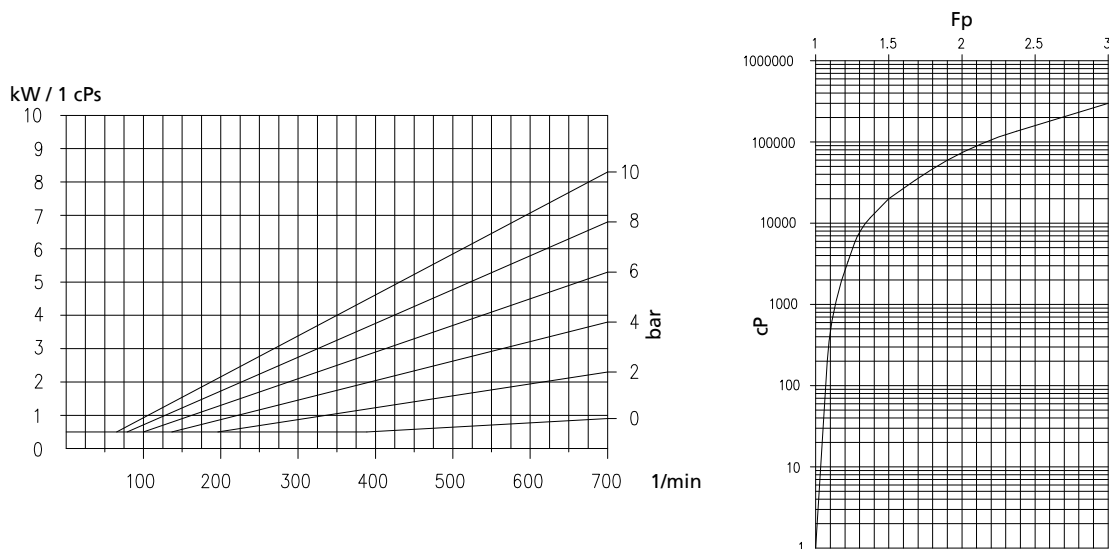


Total power = kW (1 cPs) x Fp

²⁶⁾ The characteristic curves shown are intended for orientation. Some individual pumps may differ for reasons related to their production, the fluid handled and the system conditions.

Characteristic curve Vitalobe 325 - bi-wing rotor - clearance: enlarged


Characteristic curve Vitalobe 325 - bi-wing rotor - clearance: standard

Flow rate: 0.55 l/rotation ²⁷⁾

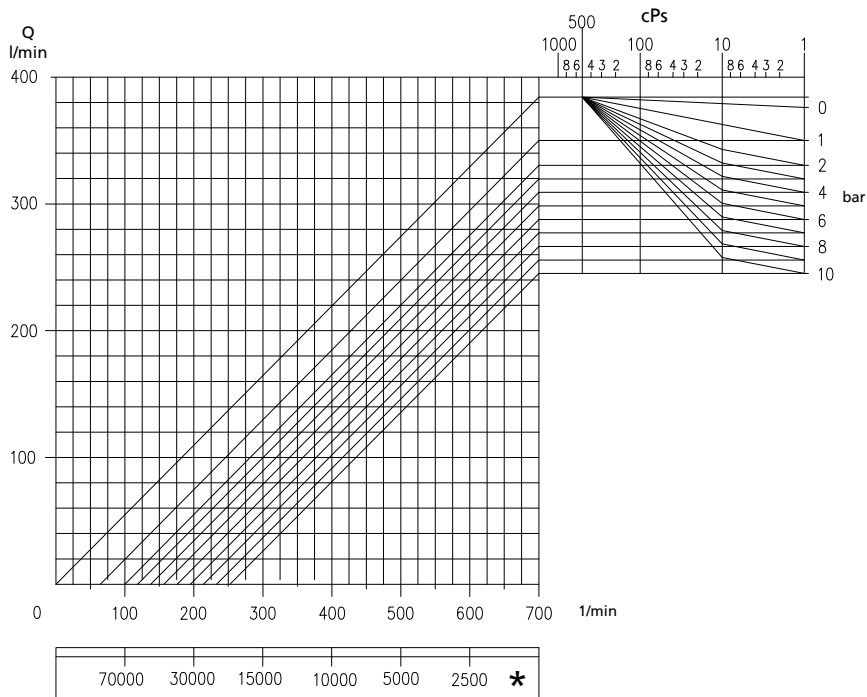

* Max. viscosity (cPs) at 0 bar (g) suction pressure / inlet pressure
Nozzle diameter 57 mm
Standard nominal nozzle diameter DN 65
Max. speed at 1 cPs = 700 rpm
It is recommended not to use all maximum values at the same time.


Total input power Vitalobe 325 - bi-wing rotor - clearance: standard

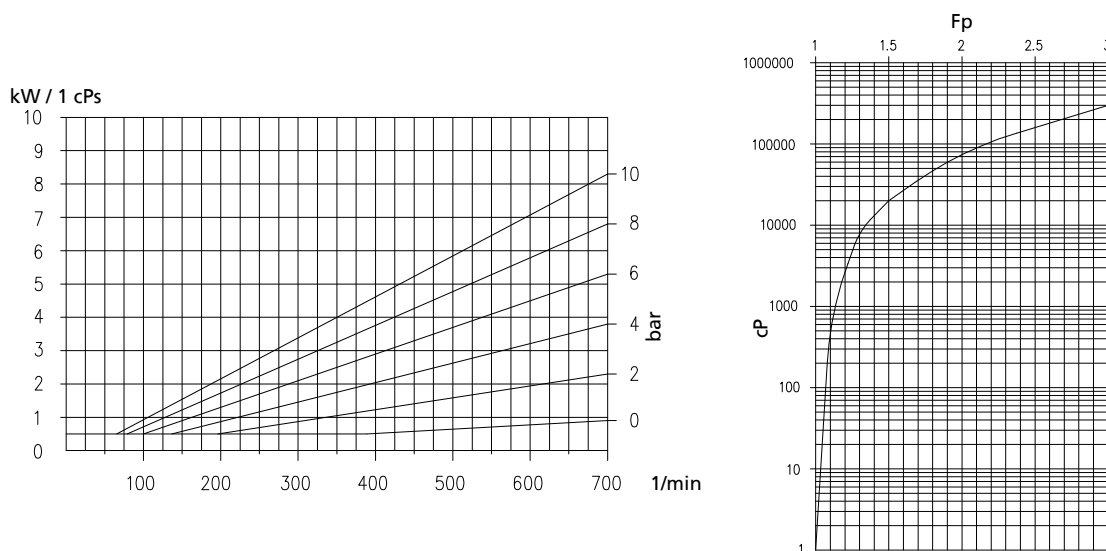

Total power = kW (1 cPs) x Fp

²⁷⁾ The characteristic curves shown are intended for orientation. Some individual pumps may differ for reasons related to their production, the fluid handled and the system conditions.


NPSH curve Vitalobe 325

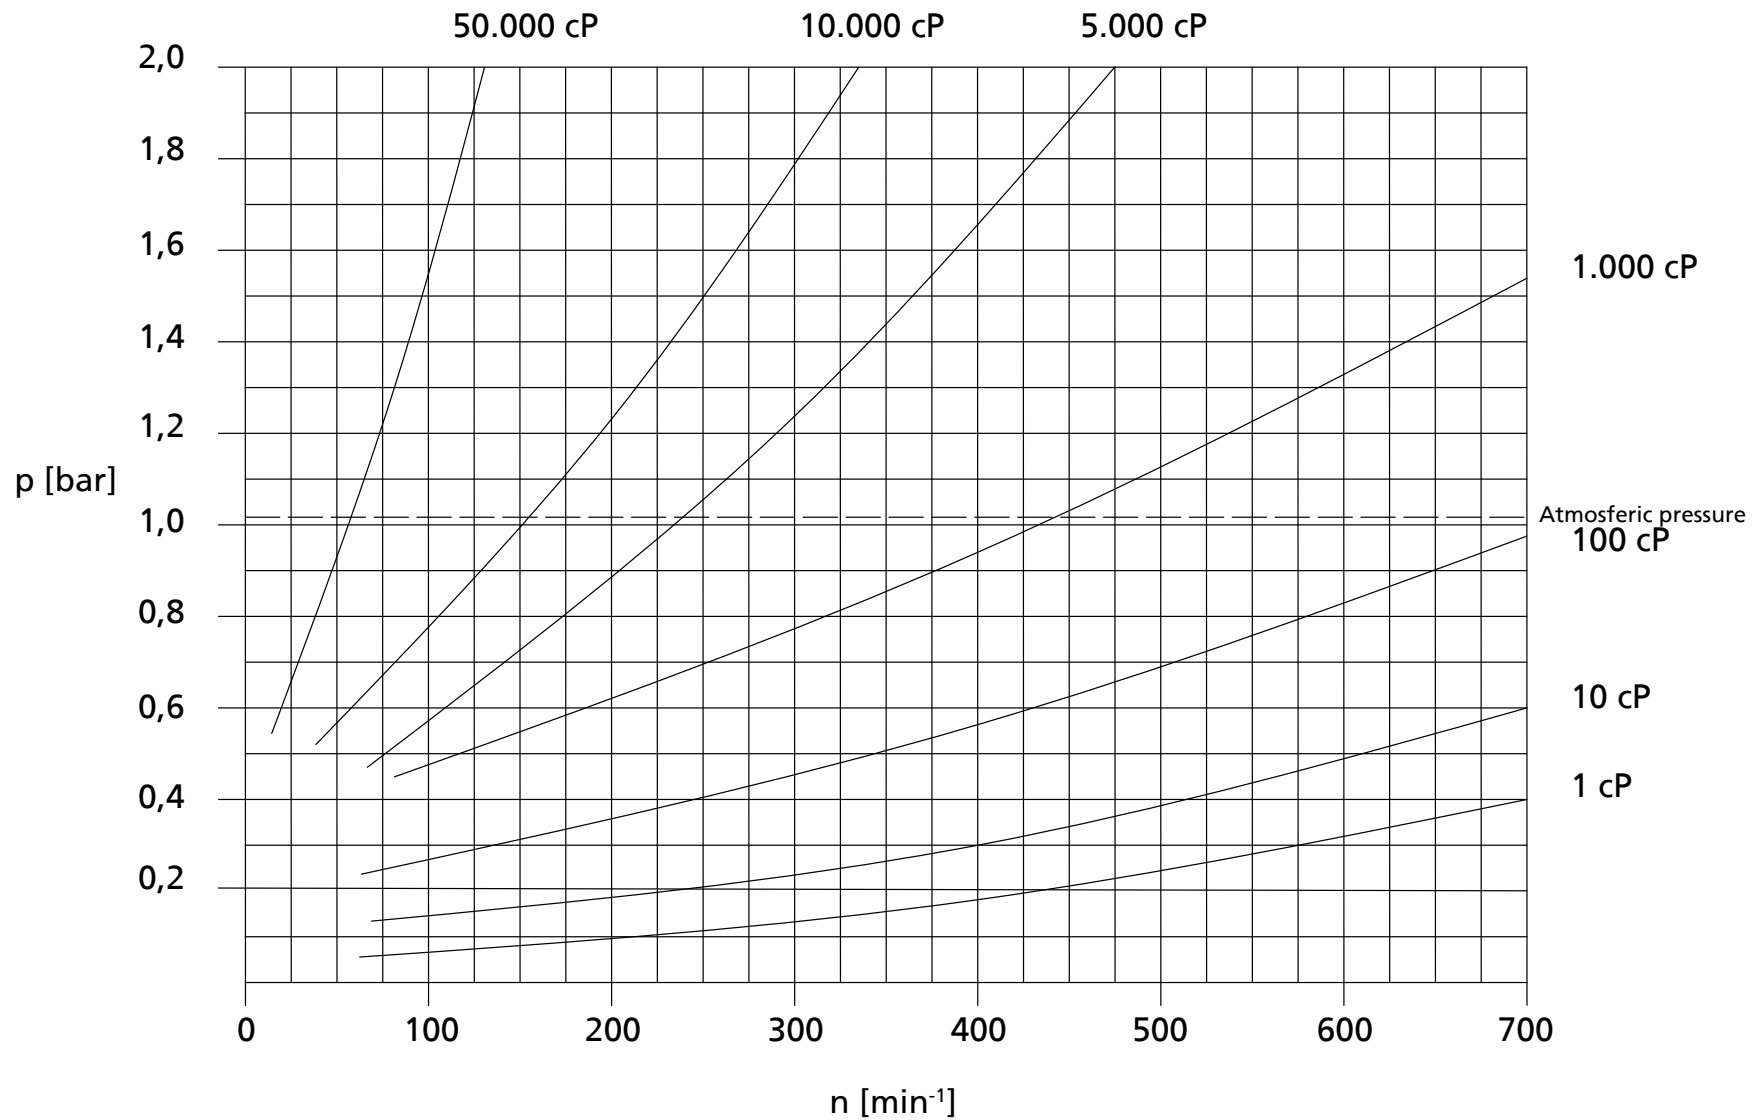

Characteristic curve Vitalobe 330 - bi-lobe rotor - clearance: standard


Characteristic curve Vitalobe 330 - bi-lobe rotor - clearance: standard

Flow rate: 0.79 l/rotation ²⁸⁾

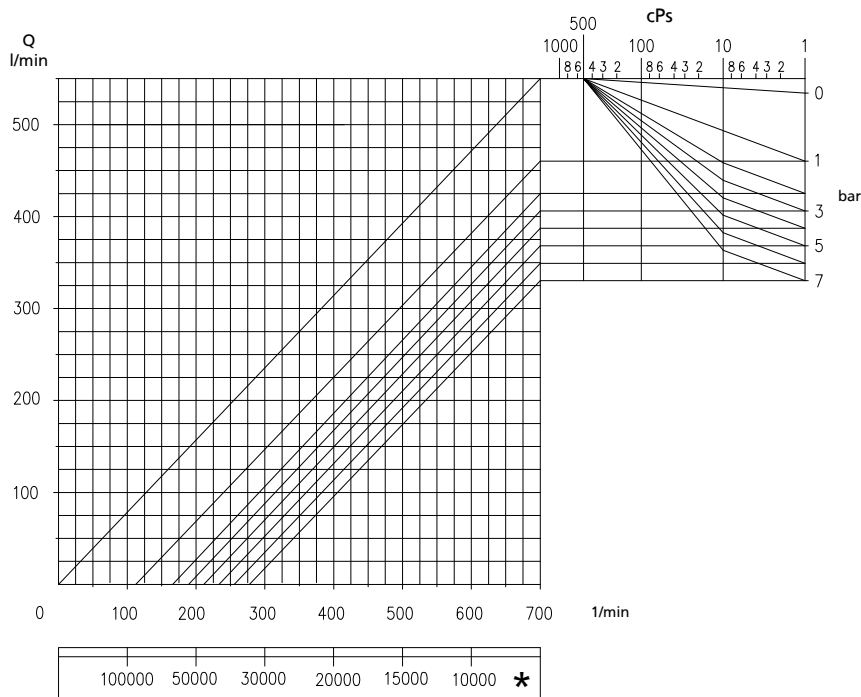

* Max. viscosity (cPs) at 0 bar (g) suction pressure / inlet pressure
Nozzle diameter 75 mm
Standard nominal nozzle diameter DN 80
Max. speed at 1 cPs = 700 rpm
It is recommended not to use all maximum values at the same time.

Total input power Vitalobe 330 - bi-lobe rotor - clearance: standard

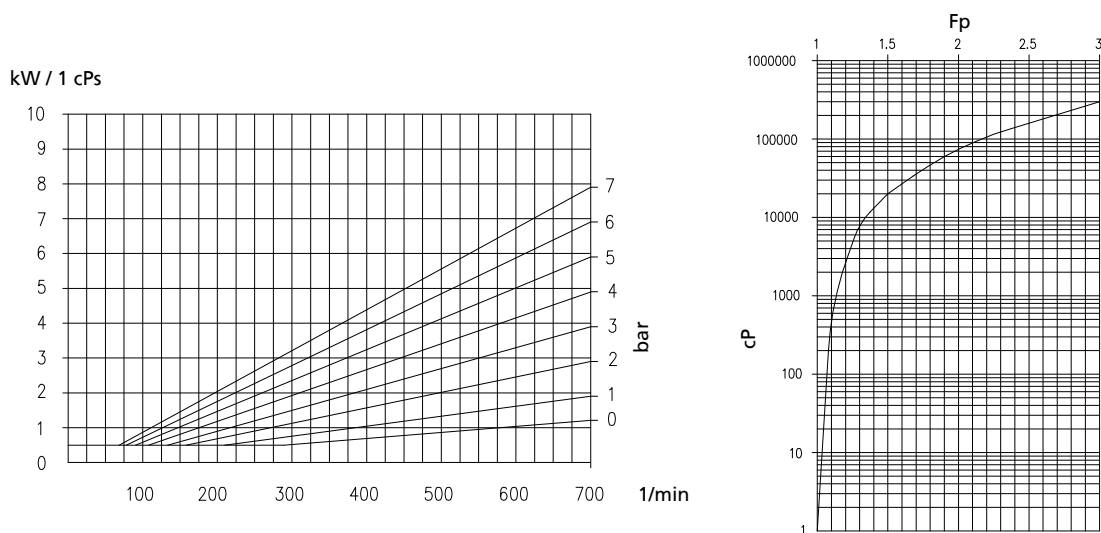


Total power = $kW (1 \text{ cPs}) \times Fp$

²⁸⁾ The characteristic curves shown are intended for orientation. Some individual pumps may differ for reasons related to their production, the fluid handled and the system conditions.

Characteristic curve Vitalobe 330 - bi-lobe rotor - clearance: enlarged


Characteristic curve Vitalobe 330 - bi-lobe rotor - clearance: enlarged

Flow rate: 0.79 l/rotation ²⁹⁾

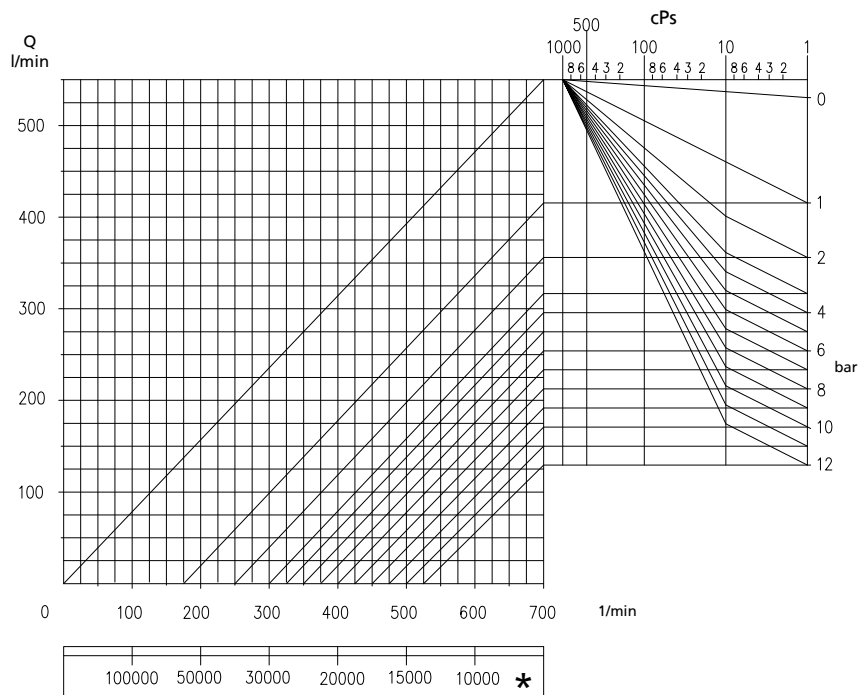

* Max. viscosity (cPs) at 0 bar (g) suction pressure / inlet pressure
Nozzle diameter 75 mm
Standard nominal nozzle diameter DN 80
Max. speed at 1 cPs = 700 rpm
It is recommended not to use all maximum values at the same time.

Total input power Vitalobe 330 - bi-lobe rotor - clearance: enlarged

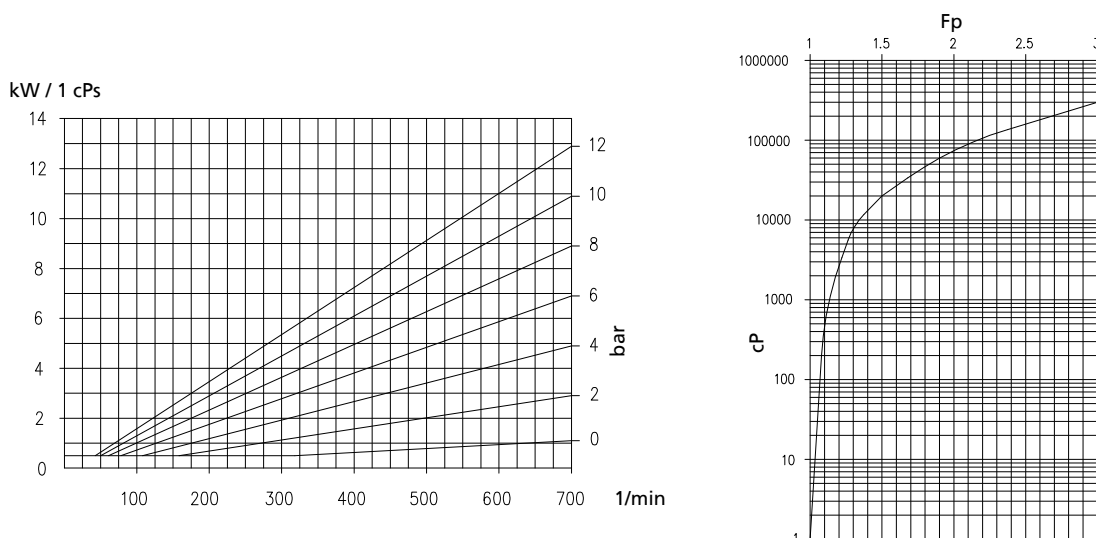


Total power = kW (1 cPs) x Fp

²⁹⁾ The characteristic curves shown are intended for orientation. Some individual pumps may differ for reasons related to their production, the fluid handled and the system conditions.

Characteristic curve Vitalobe 330 - tri-lobe rotor - clearance: standard



Characteristic curve Vitalobe 330 - tri-lobe rotor - clearance: standard

Flow rate: 0.79 l/rotation ³⁰⁾

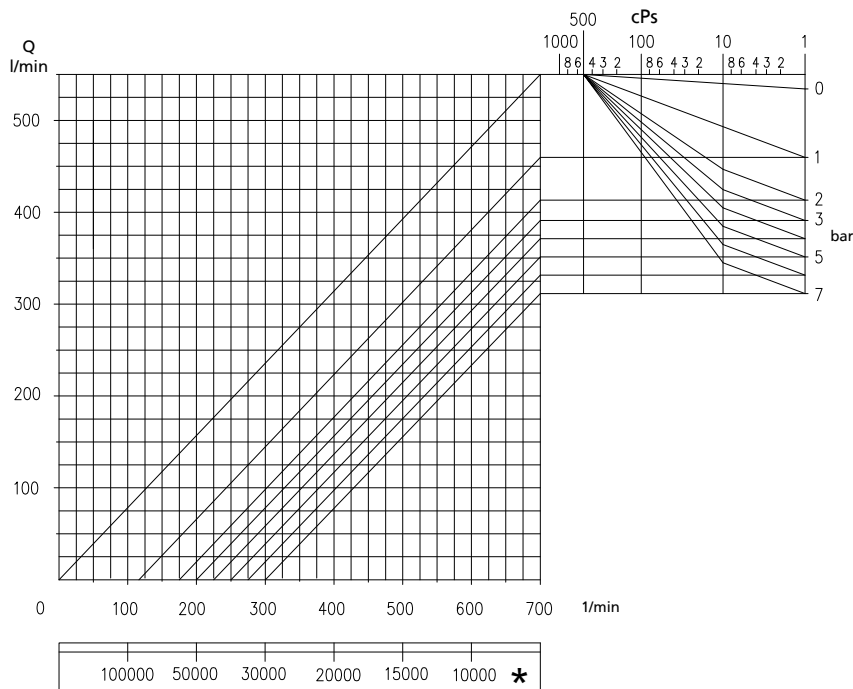

* Max. viscosity (cPs) at 0 bar (g) suction pressure / inlet pressure
Nozzle diameter 75 mm
Standard nominal nozzle diameter DN 80
Max. speed at 1 cPs = 700 rpm
It is recommended not to use all maximum values at the same time.

Total input power Vitalobe 330 - tri-lobe rotor - clearance: standard

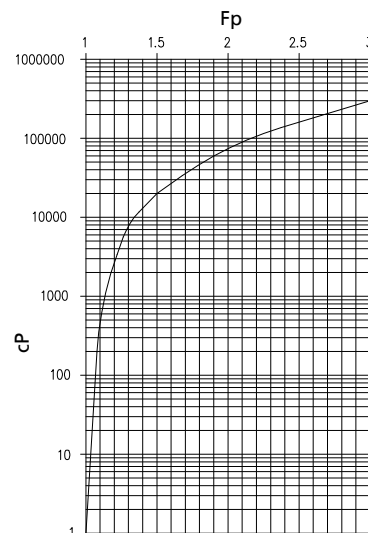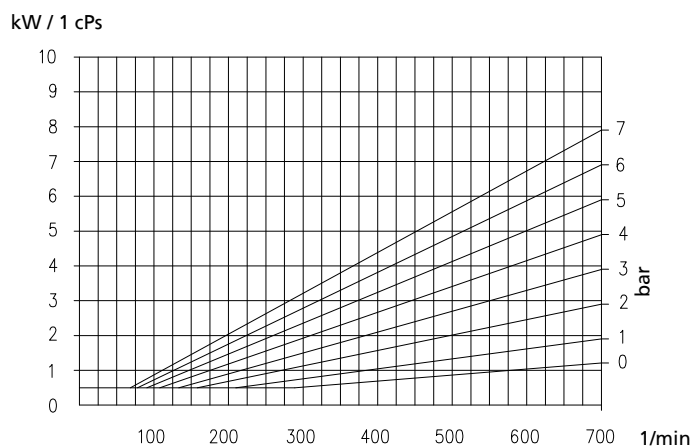


Total power = kW (1 cPs) x Fp

³⁰⁾ The characteristic curves shown are intended for orientation. Some individual pumps may differ for reasons related to their production, the fluid handled and the system conditions.

Characteristic curve Vitalobe 330 - tri-lobe rotor - clearance: enlarged


Characteristic curve Vitalobe 330 - tri-lobe rotor - clearance: enlarged

Flow rate: 0.79 l/rotation ³¹⁾

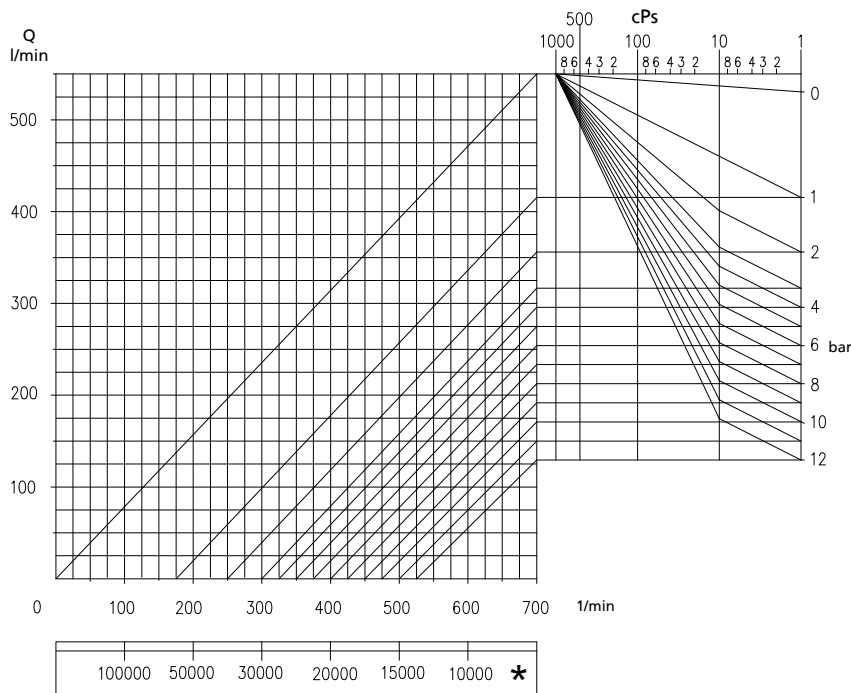

* Max. viscosity (cPs) at 0 bar (g) suction pressure / inlet pressure
Nozzle diameter 75 mm
Standard nominal nozzle diameter DN 80
Max. speed at 1 cPs = 700 rpm
It is recommended not to use all maximum values at the same time.

Total input power Vitalobe 330 - tri-lobe rotor - clearance: enlarged

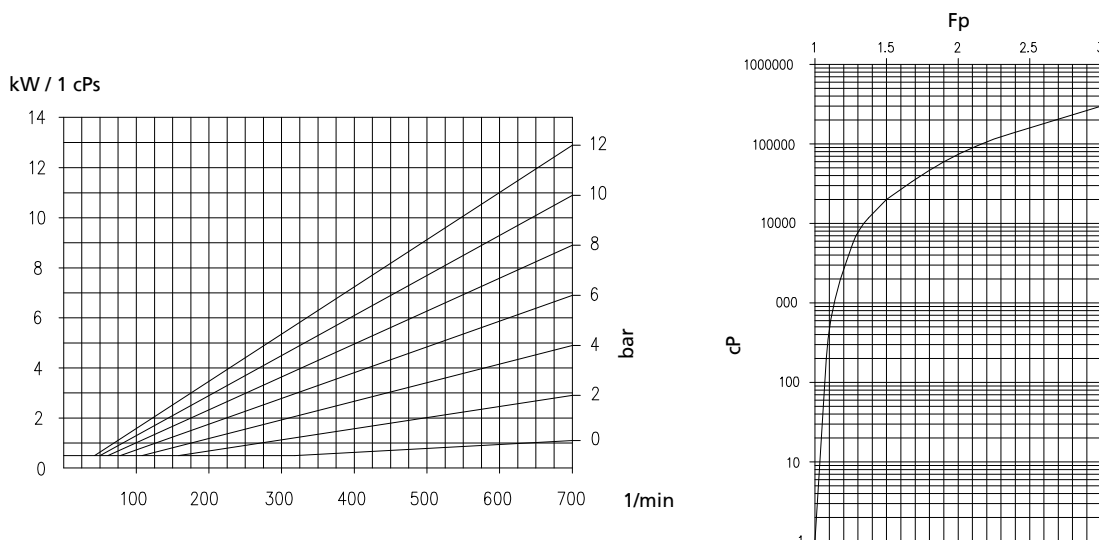


Total power = kW (1 cPs) x Fp

³¹⁾ The characteristic curves shown are intended for orientation. Some individual pumps may differ for reasons related to their production, the fluid handled and the system conditions.

Characteristic curve Vitalobe 330 - bi-wing rotor - clearance: standard


Characteristic curve Vitalobe 330 - bi-wing rotor - clearance: standard

Flow rate: 0.7 l/rotation ³²⁾

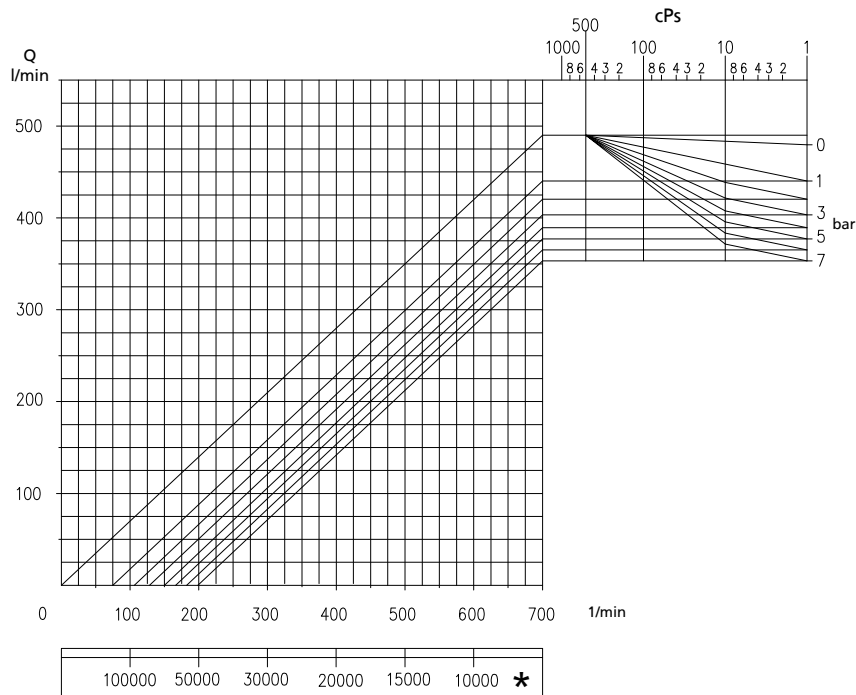

* Max. viscosity (cPs) at 0 bar (g) suction pressure / inlet pressure
Nozzle diameter 75 mm
Standard nominal nozzle diameter DN 80
Max. speed at 1 cPs = 700 rpm
It is recommended not to use all maximum values at the same time.

Total input power Vitalobe 330 - bi-wing rotor - clearance: standard

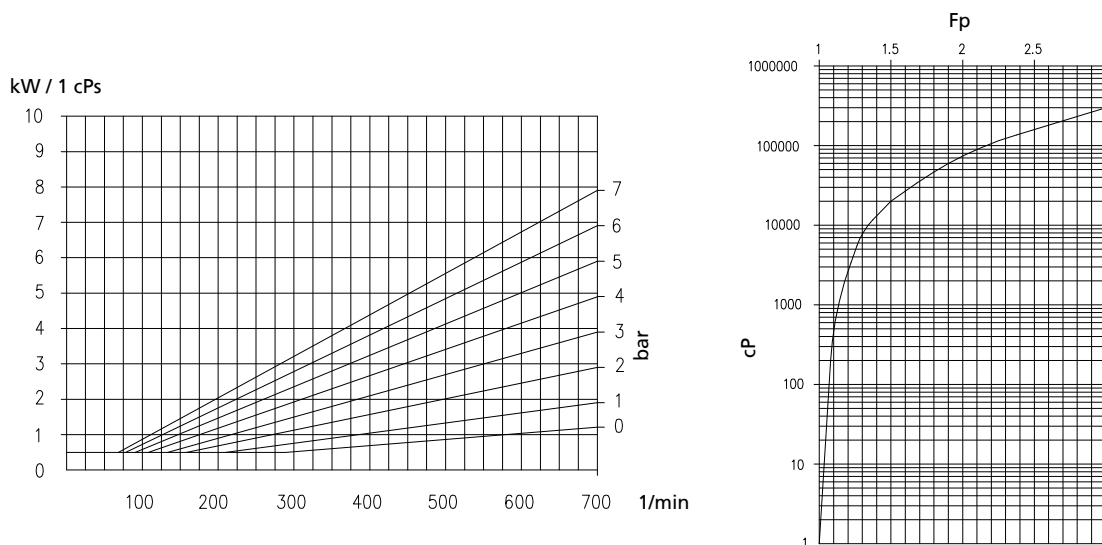


Total power = kW (1 cPs) x Fp

³²⁾ The characteristic curves shown are intended for orientation. Some individual pumps may differ for reasons related to their production, the fluid handled and the system conditions.

Characteristic curve Vitalobe 330 - bi-wing rotor - clearance: enlarged


Characteristic curve Vitalobe 330 - bi-wing rotor - clearance: enlarged

Flow rate: 0.7 l/rotation ³³⁾

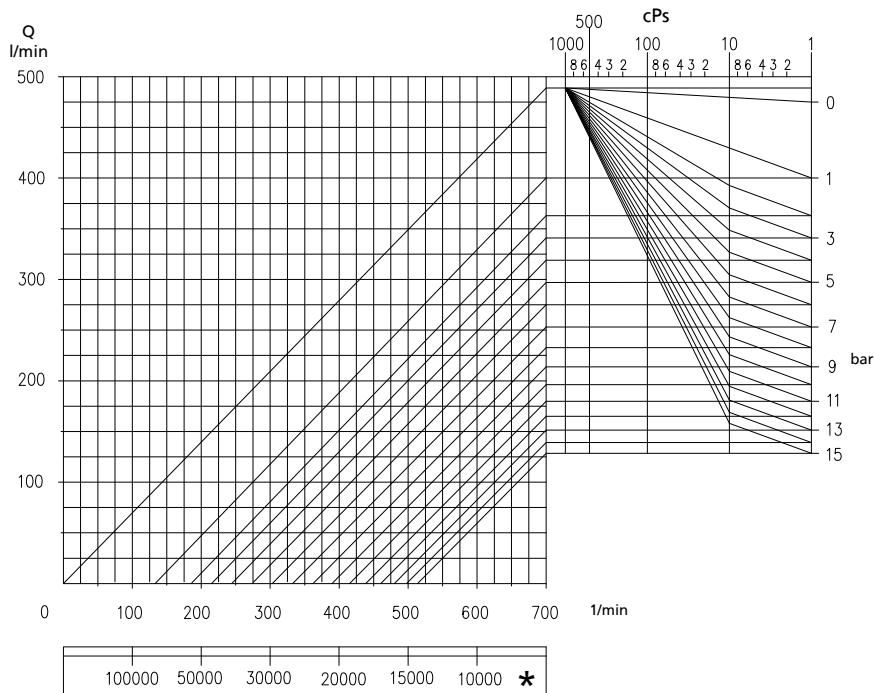

* Max. viscosity (cPs) at 0 bar (g) suction pressure / inlet pressure
Nozzle diameter 75 mm
Standard nominal nozzle diameter DN 80
Max. speed at 1 cPs = 700 rpm
It is recommended not to use all maximum values at the same time.


Total input power Vitalobe 330 - bi-wing rotor - clearance: enlarged

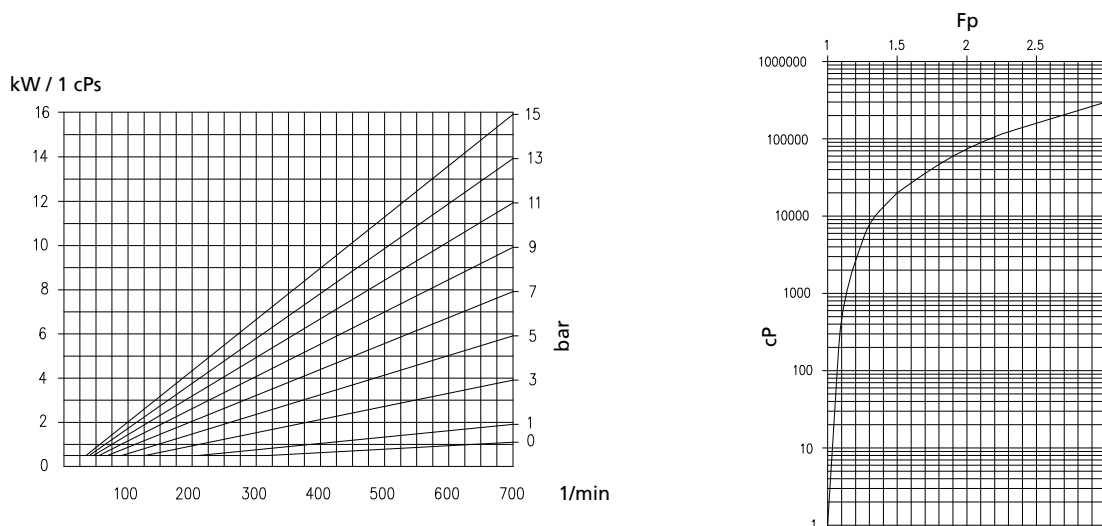

Total power = kW (1 cPs) x Fp

³³⁾ The characteristic curves shown are intended for orientation. Some individual pumps may differ for reasons related to their production, the fluid handled and the system conditions.


NPSH curve Vitalobe 330

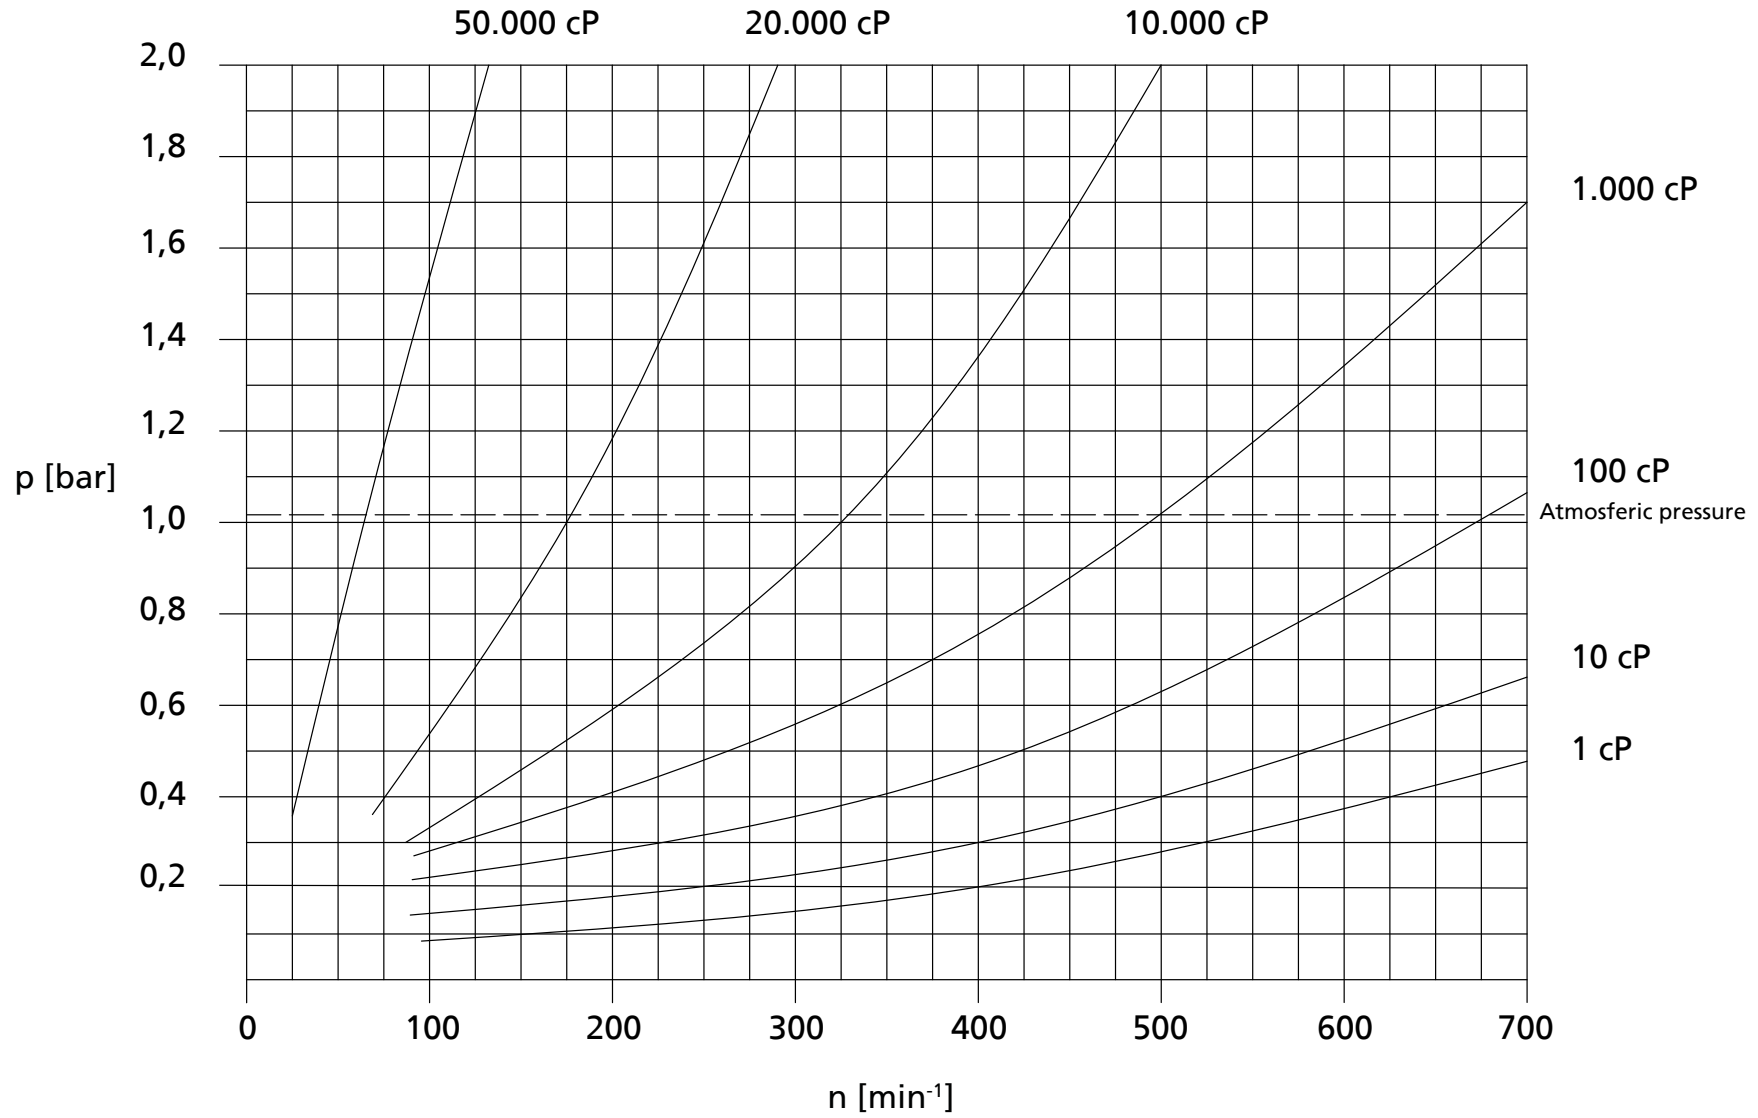

Characteristic curve Vitalobe 390 - bi-lobe rotor - clearance: standard



Characteristic curve Vitalobe 390 - bi-lobe rotor - clearance: standard

Flow rate: 1.0 l/rotation ³⁴⁾

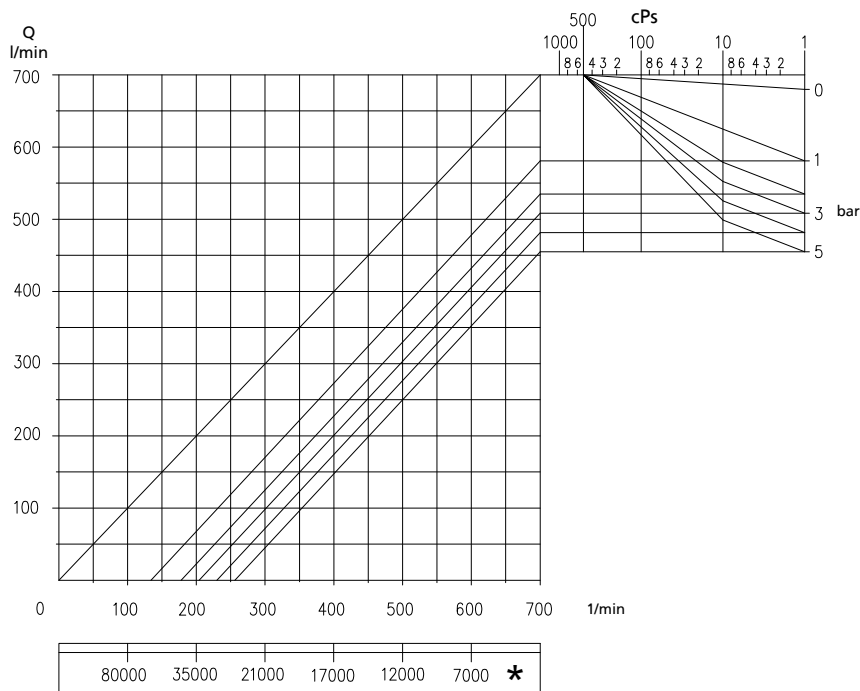

* Max. viscosity (cPs) at 0 bar (g) suction pressure / inlet pressure
Nozzle diameter 75 mm
Standard nominal nozzle diameter DN 80
Max. speed at 1 cPs = 700 rpm
It is recommended not to use all maximum values at the same time.

Total input power Vitalobe 390 - bi-lobe rotor - clearance: standard

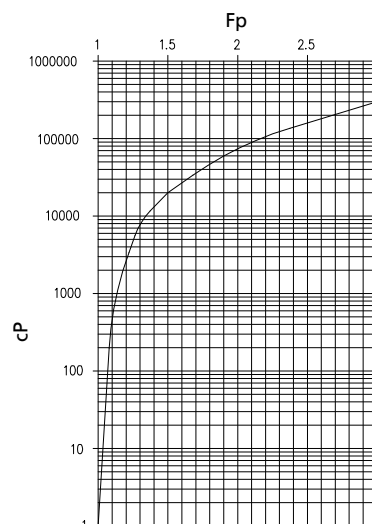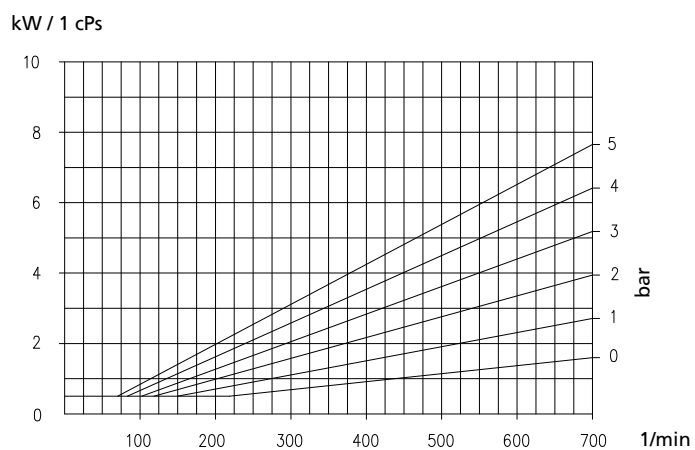


Total power = kW (1 cPs) x Fp

³⁴⁾ The characteristic curves shown are intended for orientation. Some individual pumps may differ for reasons related to their production, the fluid handled and the system conditions.

Characteristic curve Vitalobe 390 - tri-lobe rotor - clearance: standard


Characteristic curve Vitalobe 390 - tri-lobe rotor - clearance: standard

Flow rate: 1.0 l/rotation ³⁵⁾

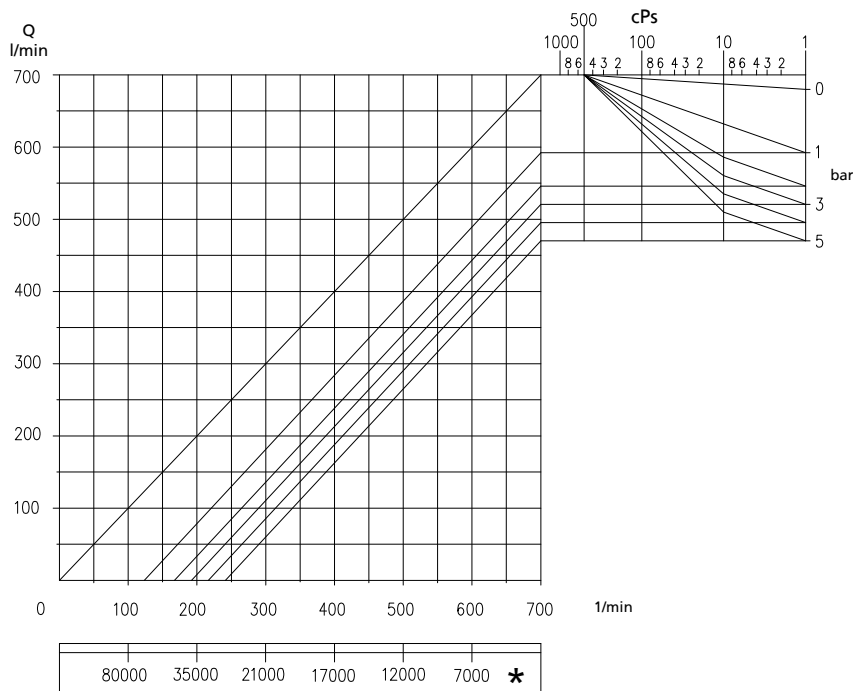

* Max. viscosity (cPs) at 0 bar (g) suction pressure / inlet pressure
Nozzle diameter 75 mm
Standard nominal nozzle diameter DN 80
Max. speed at 1 cPs = 700 rpm
It is recommended not to use all maximum values at the same time.

Total input power Vitalobe 390 - tri-lobe rotor - clearance: standard

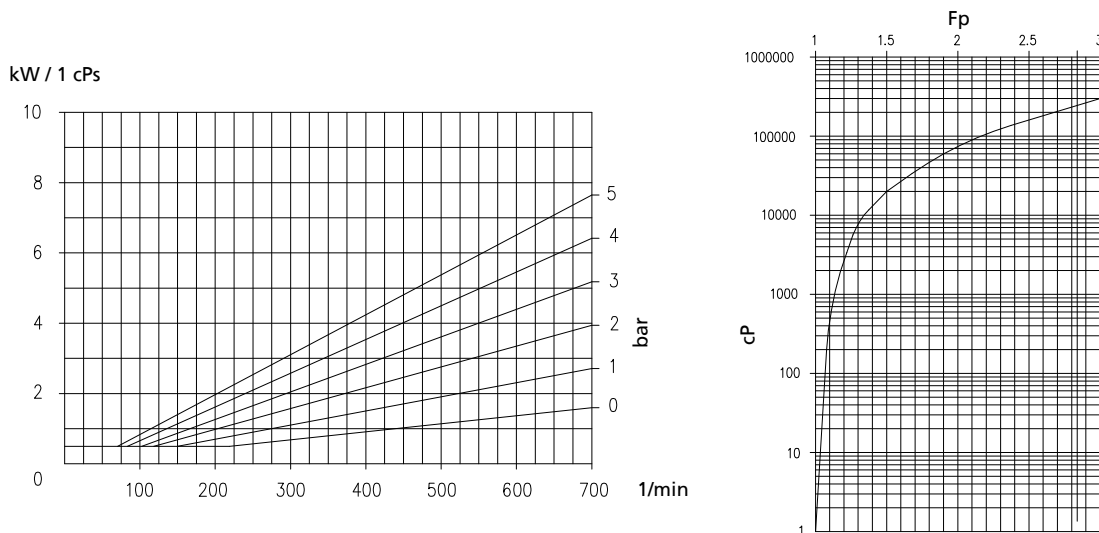


Total power = kW (1 cPs) x Fp

³⁵⁾ The characteristic curves shown are intended for orientation. Some individual pumps may differ for reasons related to their production, the fluid handled and the system conditions.

Characteristic curve Vitalobe 390 - tri-lobe rotor - clearance: enlarged


Characteristic curve Vitalobe 390 - tri-lobe rotor - clearance: enlarged

Flow rate: 1.0 l/rotation ³⁶⁾

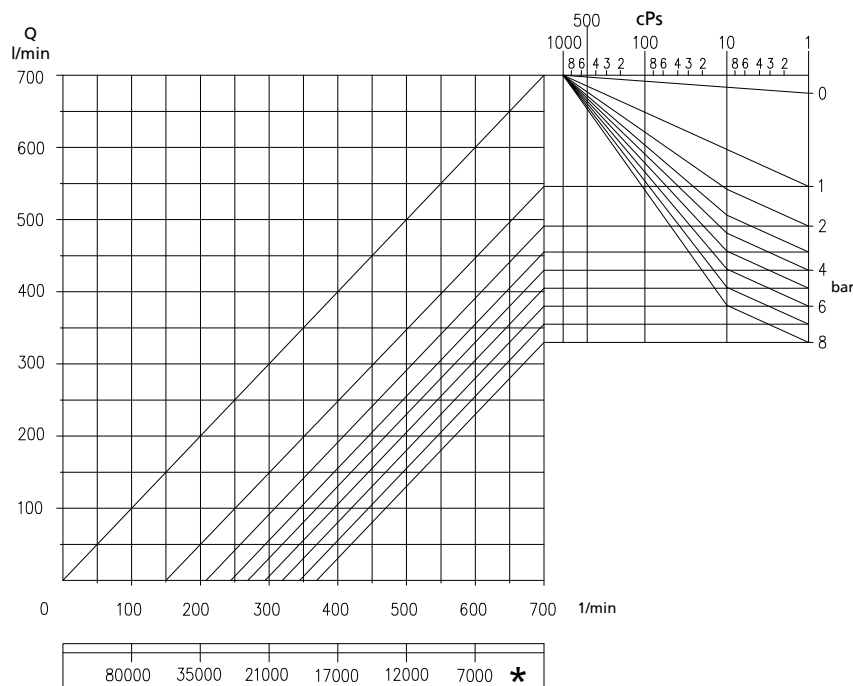

* Max. viscosity (cPs) at 0 bar (g) suction pressure / inlet pressure
Nozzle diameter 75 mm
Standard nominal nozzle diameter DN 80
Max. speed at 1 cPs = 700 rpm
It is recommended not to use all maximum values at the same time.

Total input power Vitalobe 390 - tri-lobe rotor - clearance: enlarged

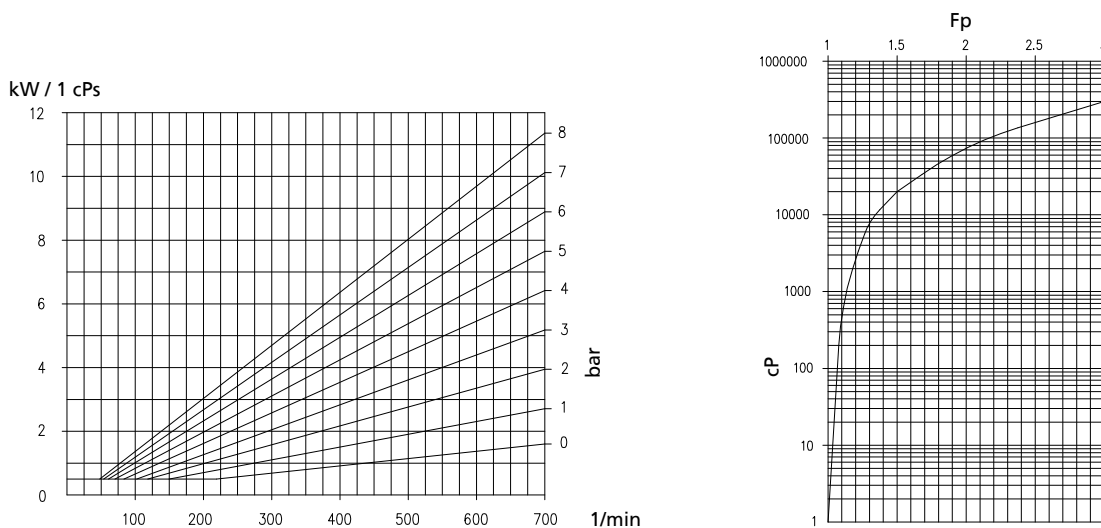


Total power = kW (1 cPs) x Fp

³⁶⁾ The characteristic curves shown are intended for orientation. Some individual pumps may differ for reasons related to their production, the fluid handled and the system conditions.

Characteristic curve Vitalobe 390 - bi-wing rotor - clearance: standard


Characteristic curve Vitalobe 390 - bi-wing rotor - clearance: standard

Flow rate: 0.9 l/rotation ³⁷⁾

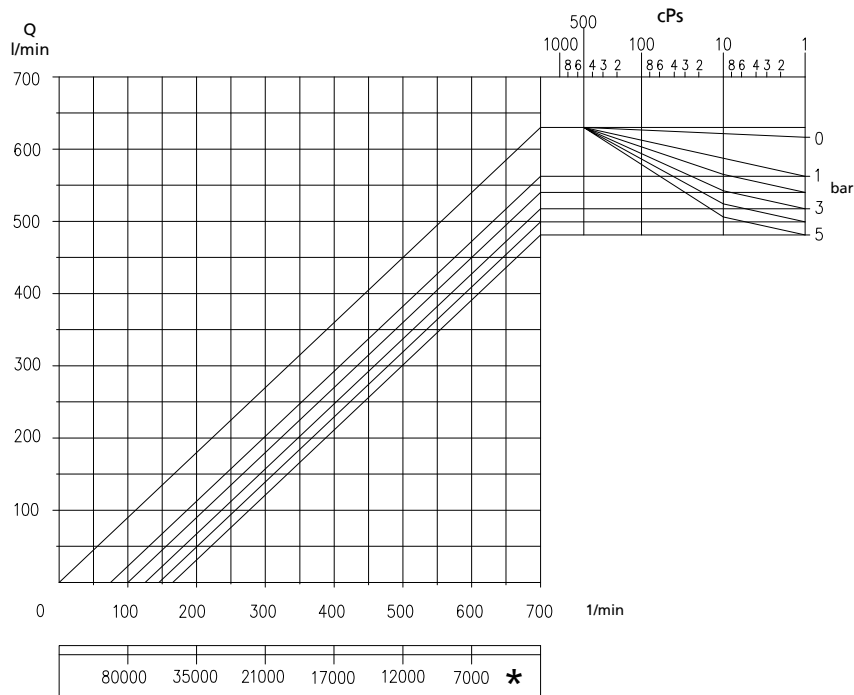

* Max. viscosity (cPs) at 0 bar (g) suction pressure / inlet pressure
Nozzle diameter 75 mm
Standard nominal nozzle diameter DN 80
Max. speed at 1 cPs = 700 rpm
It is recommended not to use all maximum values at the same time.


Total input power Vitalobe 390 - bi-wing rotor - clearance: standard

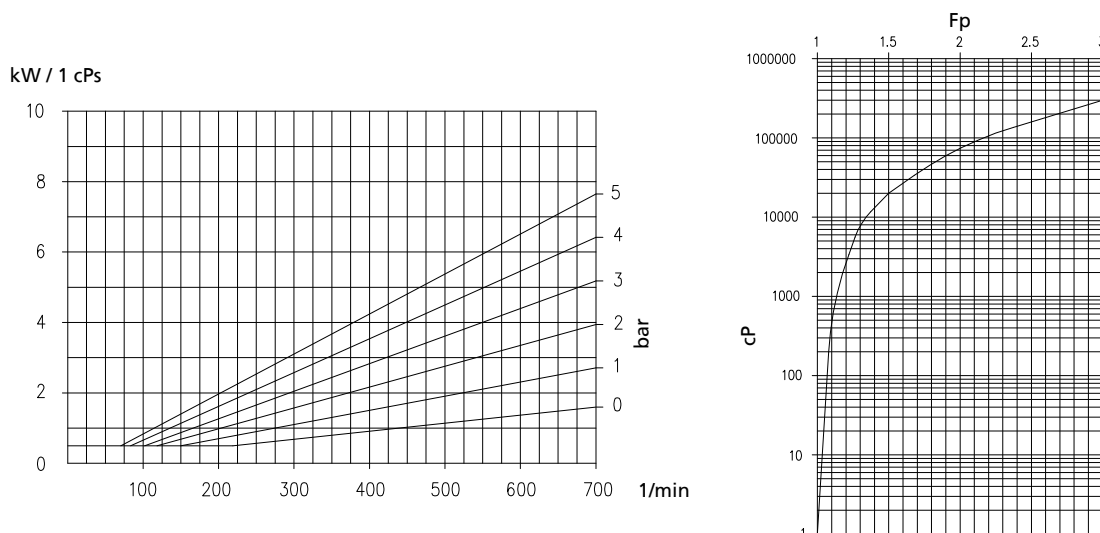

Total power = kW (1 cPs) x Fp

³⁷⁾ The characteristic curves shown are intended for orientation. Some individual pumps may differ for reasons related to their production, the fluid handled and the system conditions.


NPSH curve Vitalobe 390

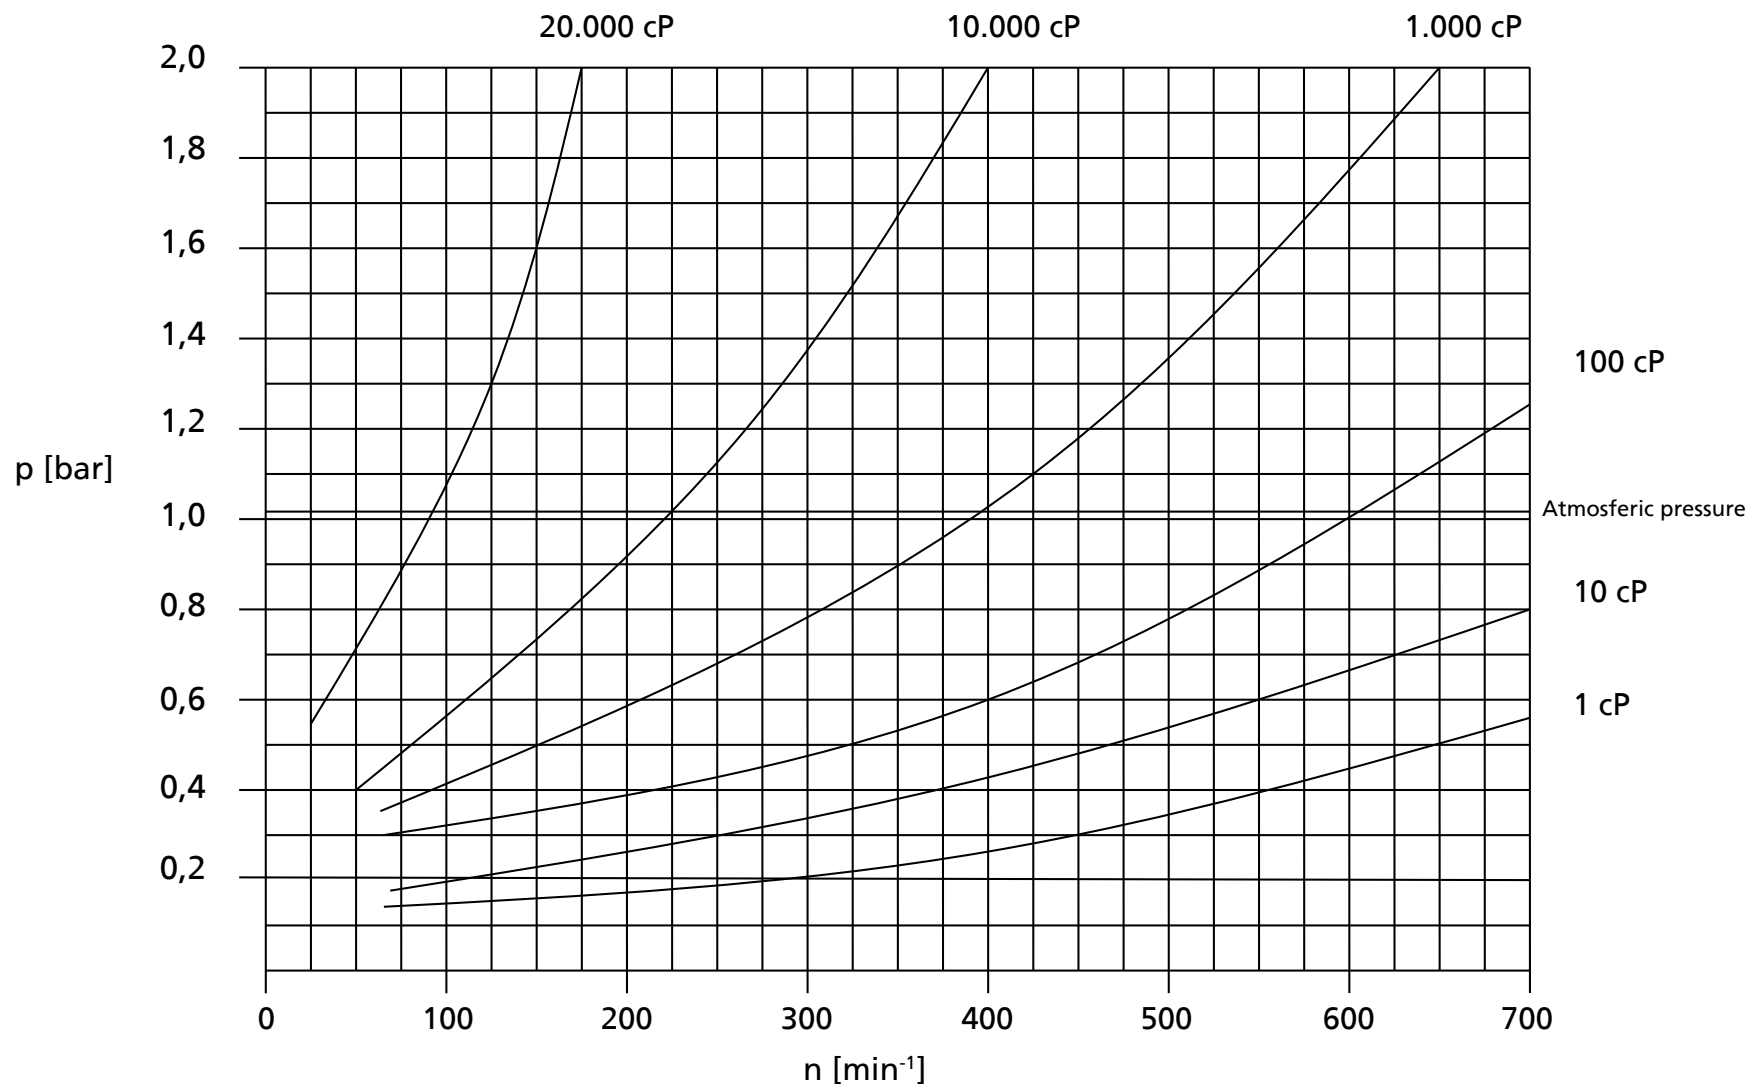

Characteristic curve Vitalobe 430 - bi-lobe rotor - clearance: standard


Characteristic curve Vitalobe 430 - bi-lobe rotor - clearance: standard

Flow rate: 1.3 l/rotation ³⁸⁾

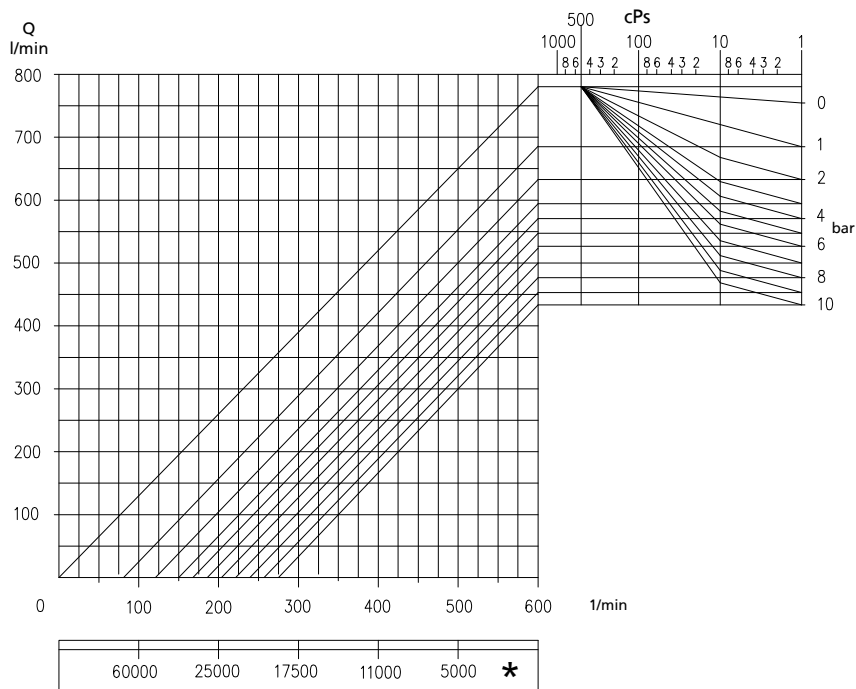

* Max. viscosity (cPs) at 0 bar (g) suction pressure / inlet pressure
Nozzle diameter 75 mm
Standard nominal nozzle diameter DN 80
Max. speed at 1 cPs = 600 rpm
It is recommended not to use all maximum values at the same time.

Total input power Vitalobe 430 - bi-lobe rotor - clearance: standard

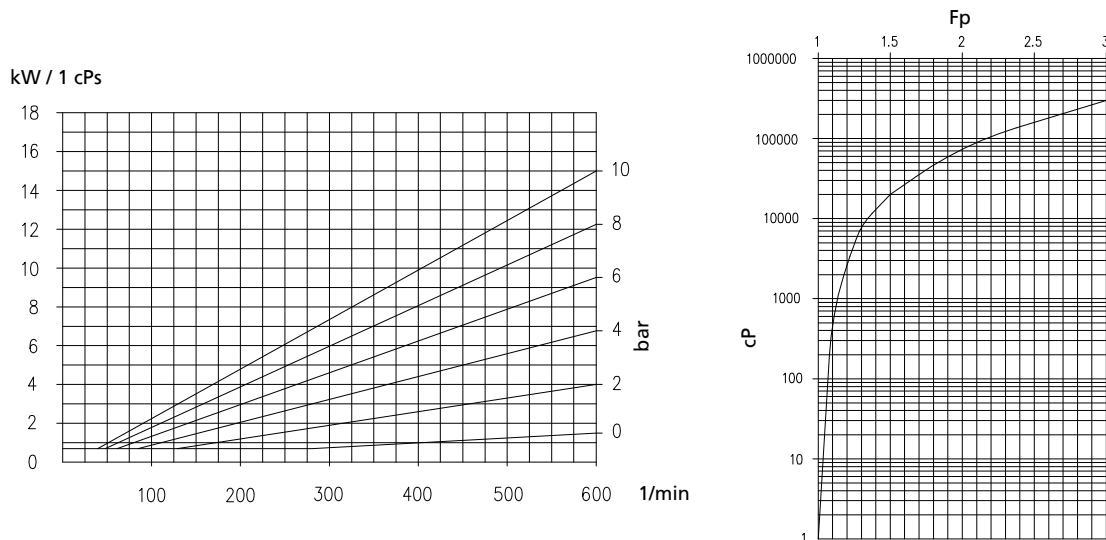


Total power = $kW (1 \text{ cPs}) \times Fp$

³⁸⁾ The characteristic curves shown are intended for orientation. Some individual pumps may differ for reasons related to their production, the fluid handled and the system conditions.

Characteristic curve Vitalobe 430 - tri-lobe rotor - clearance: standard


Characteristic curve Vitalobe 430 - tri-lobe rotor - clearance: standard

Flow rate: 1.31 l/rotation ³⁹⁾

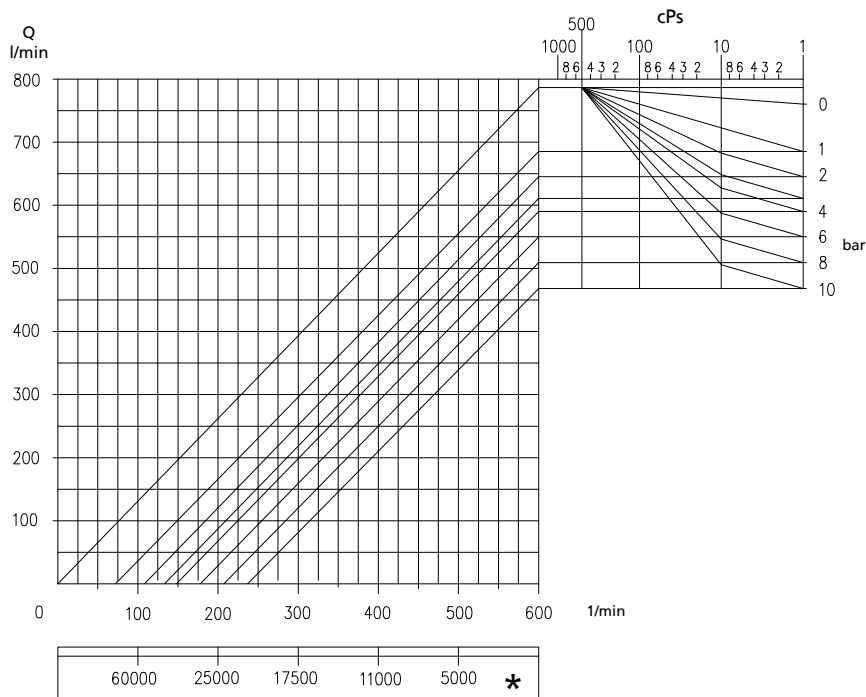

* Max. viscosity (cPs) at 0 bar (g) suction pressure / inlet pressure
Nozzle diameter 75 mm
Standard nominal nozzle diameter DN 80
Max. speed at 1 cPs = 600 rpm
It is recommended not to use all maximum values at the same time.

Total input power Vitalobe 430 - tri-lobe rotor - clearance: standard

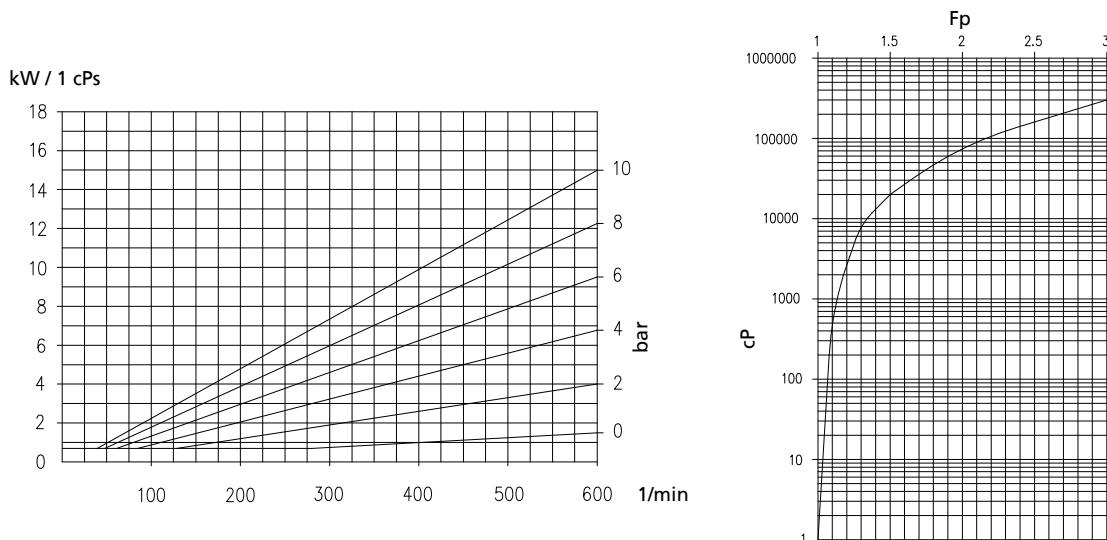


Total power = kW (1 cPs) x Fp

³⁹⁾ The characteristic curves shown are intended for orientation. Some individual pumps may differ for reasons related to their production, the fluid handled and the system conditions.

Characteristic curve Vitalobe 430 - tri-lobe rotor - clearance: enlarged



Characteristic curve Vitalobe 430 - tri-lobe rotor - clearance: enlarged

Flow rate: 1.31 l/rotation ⁴⁰⁾

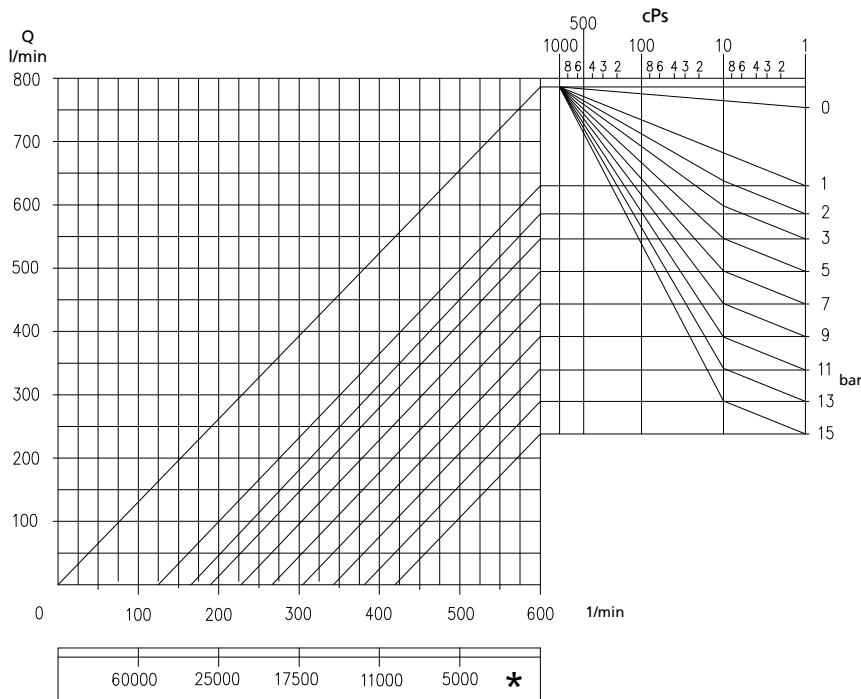

* Max. viscosity (cPs) at 0 bar (g) suction pressure / inlet pressure
Nozzle diameter 75 mm
Standard nominal nozzle diameter DN 80
Max. speed at 1 cPs = 600 rpm
It is recommended not to use all maximum values at the same time.

Total input power Vitalobe 430 - tri-lobe rotor - clearance: enlarged

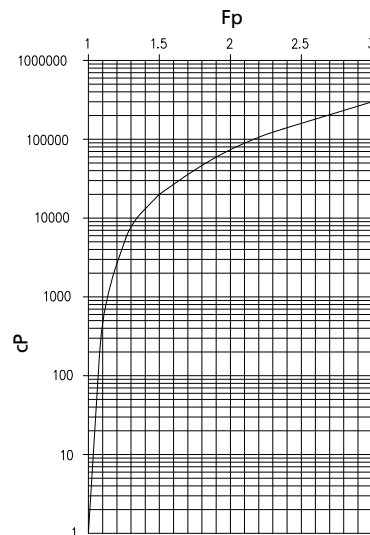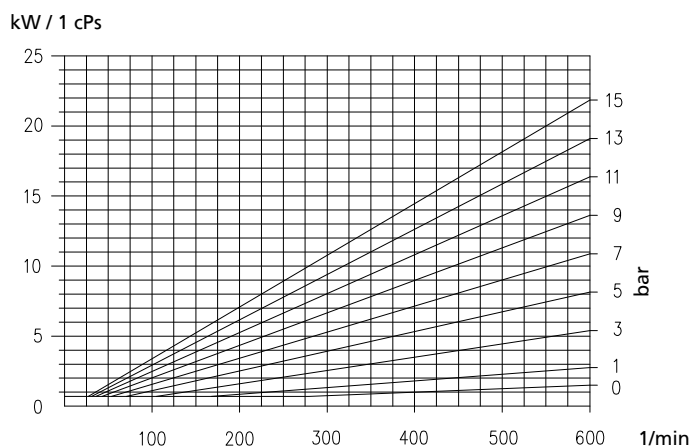


Total power = kW (1 cPs) x Fp

⁴⁰⁾ The characteristic curves shown are intended for orientation. Some individual pumps may differ for reasons related to their production, the fluid handled and the system conditions.

Characteristic curve Vitalobe 430 - bi-wing rotor - clearance: standard


Characteristic curve Vitalobe 430 - bi-wing rotor - clearance: standard

Flow rate: 1.17 l/rotation ⁴¹⁾

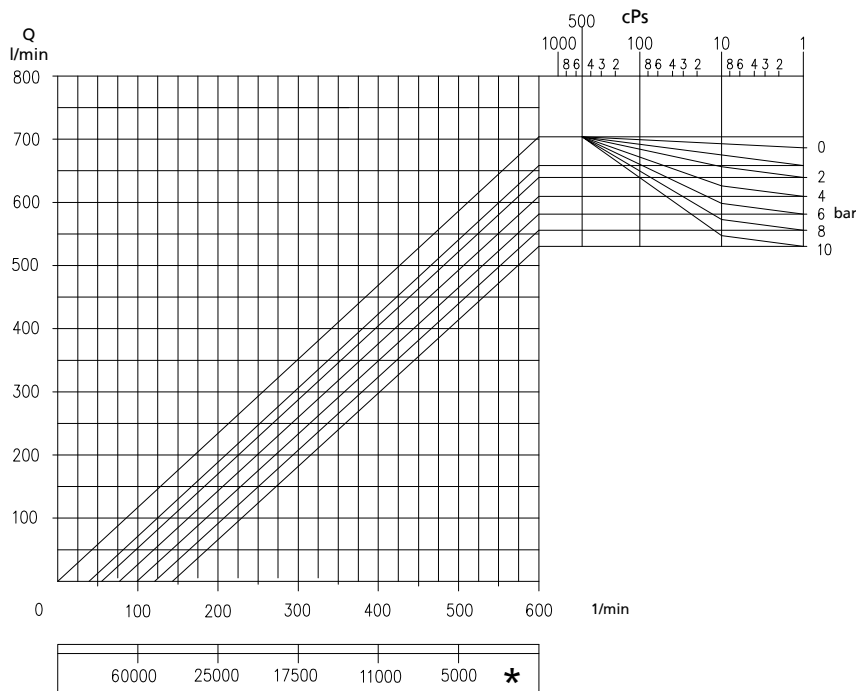

* Max. viscosity (cPs) at 0 bar (g) suction pressure / inlet pressure
Nozzle diameter 75 mm
Standard nominal nozzle diameter DN 80
Max. speed at 1 cPs = 600 rpm
It is recommended not to use all maximum values at the same time.

Total input power Vitalobe 430 - bi-wing rotor - clearance: standard

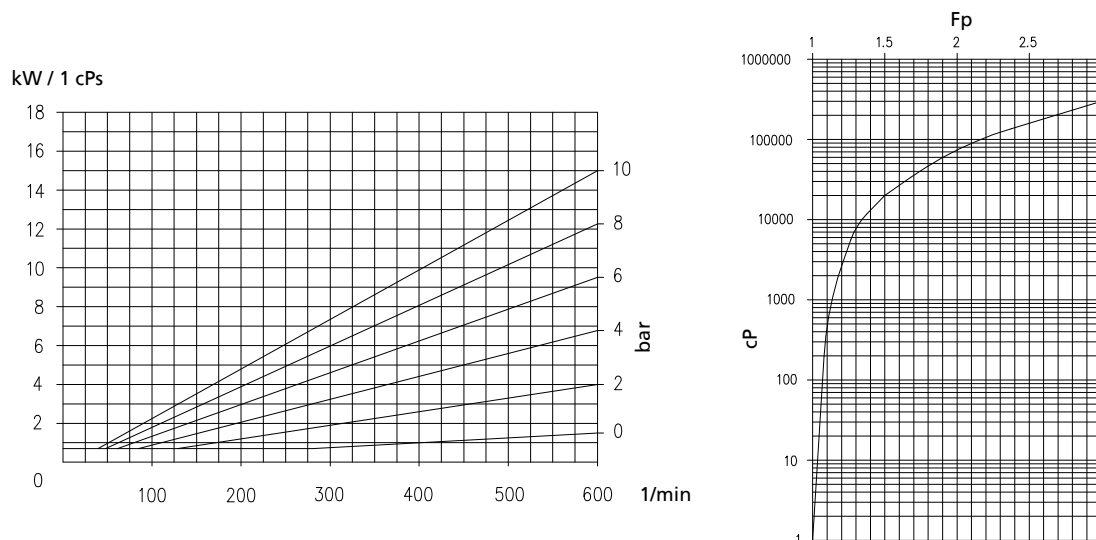


Total power = kW (1 cPs) x F_p

⁴¹⁾ The characteristic curves shown are intended for orientation. Some individual pumps may differ for reasons related to their production, the fluid handled and the system conditions.

Characteristic curve Vitalobe 430 - bi-wing rotor - clearance: enlarged


Characteristic curve Vitalobe 430 - bi-wing rotor - clearance: enlarged

Flow rate: 1.17 l/rotation ⁴²⁾

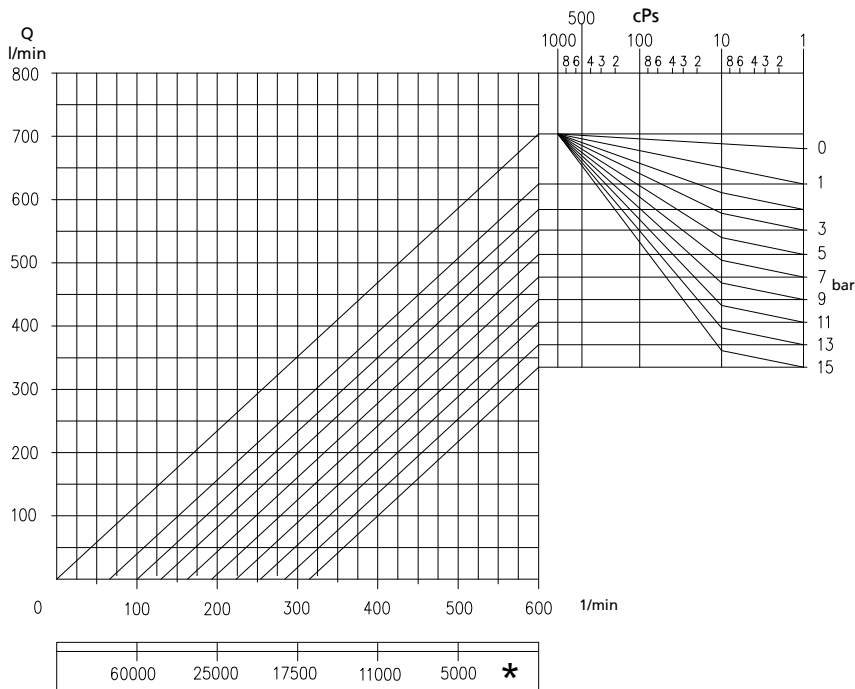

* Max. viscosity (cPs) at 0 bar (g) suction pressure / inlet pressure
Nozzle diameter 75 mm
Standard nominal nozzle diameter DN 80
Max. speed at 1 cPs = 600 rpm
It is recommended not to use all maximum values at the same time.


Total input power Vitalobe 430 - bi-wing rotor - clearance: enlarged

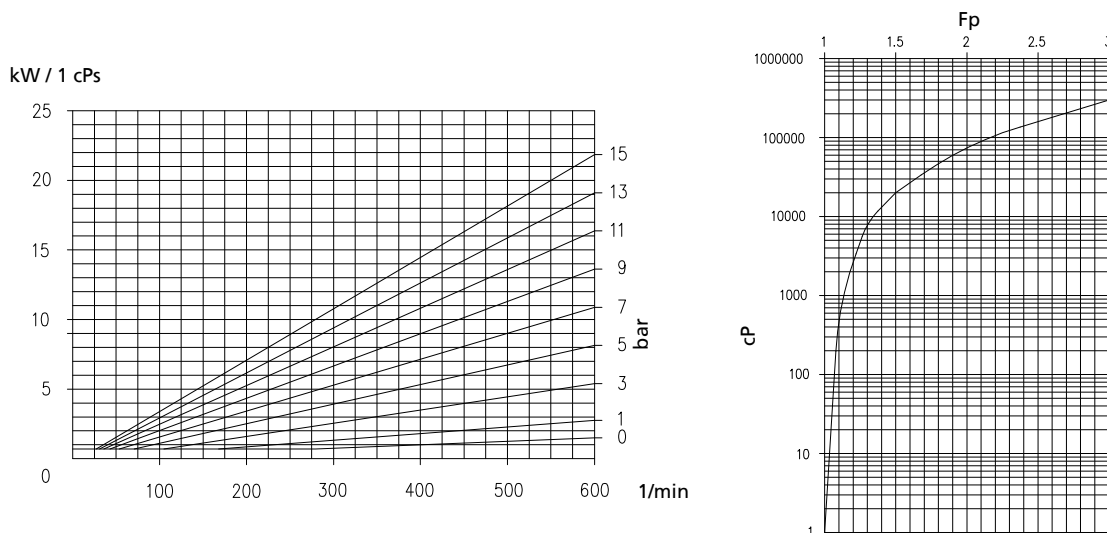

Total power = kW (1 cPs) x F_p

⁴²⁾ The characteristic curves shown are intended for orientation. Some individual pumps may differ for reasons related to their production, the fluid handled and the system conditions.


NPSH curve Vitalobe 430

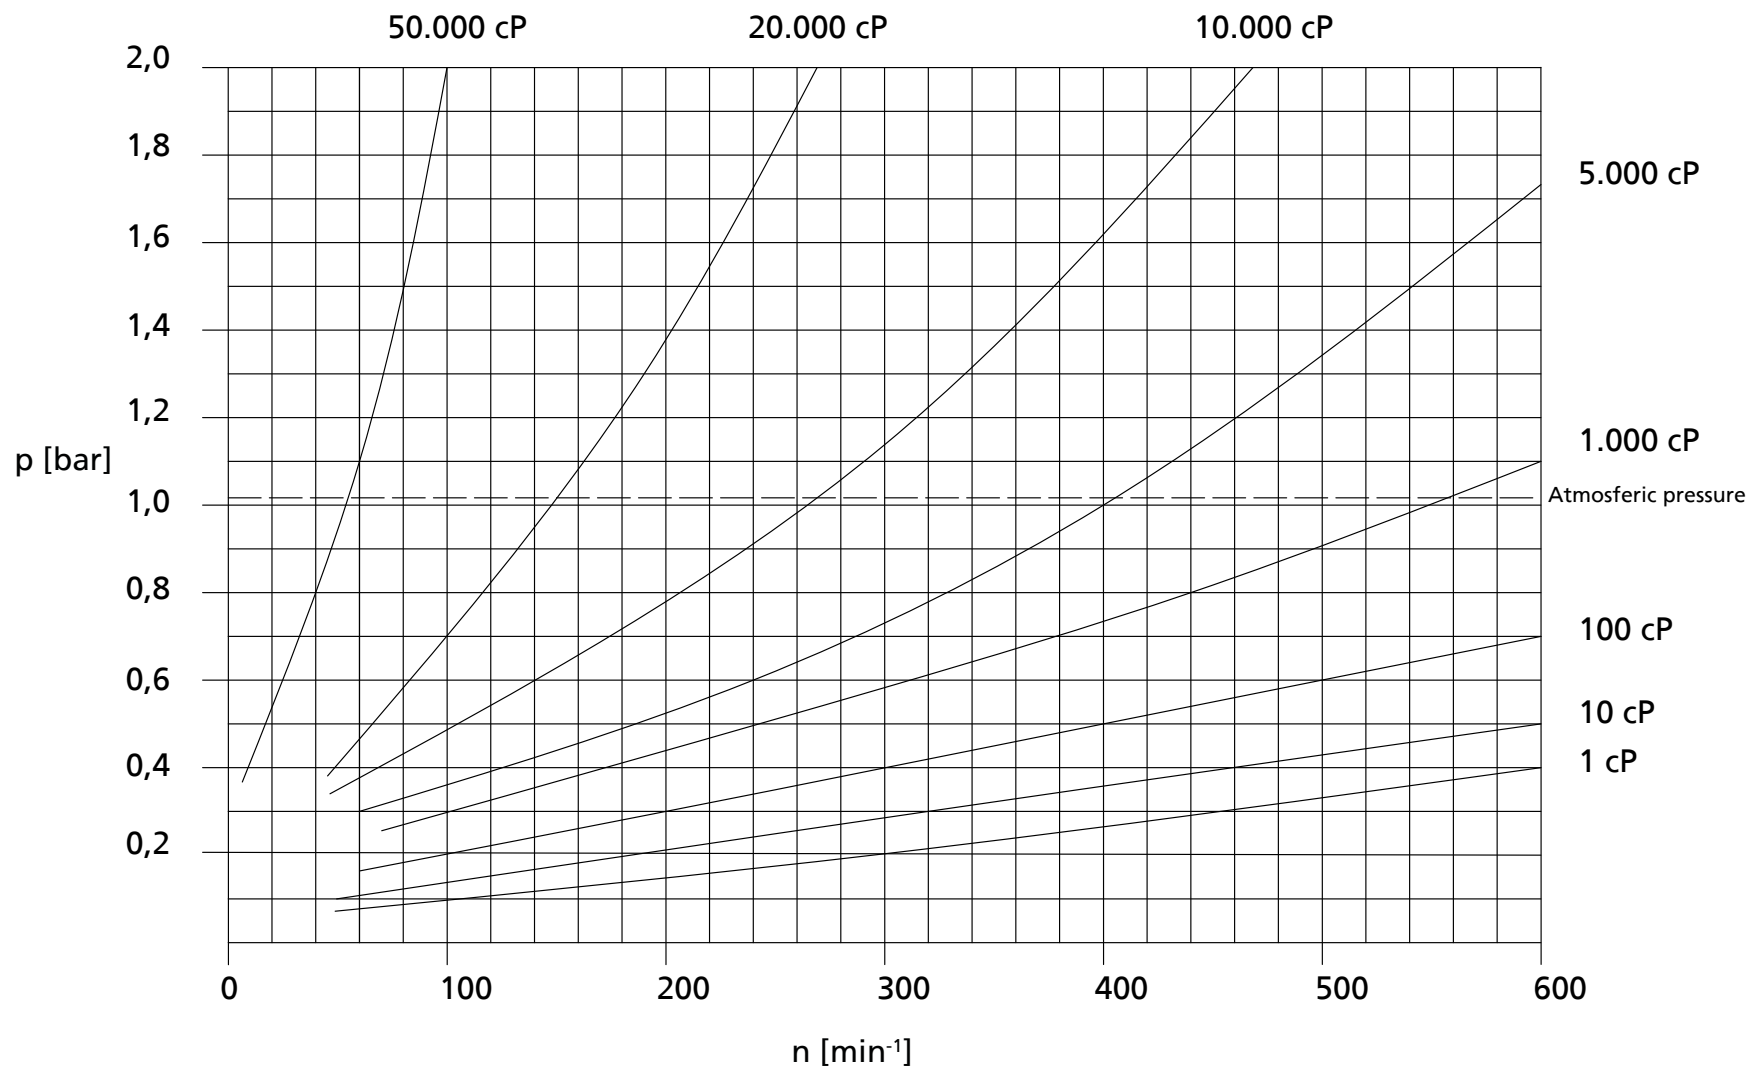

Characteristic curve Vitalobe 440 - bi-lobe rotor - clearance: standard


Characteristic curve Vitalobe 440 - bi-lobe rotor - clearance: standard

Flow rate: 1.74 l/rotation ⁴³⁾

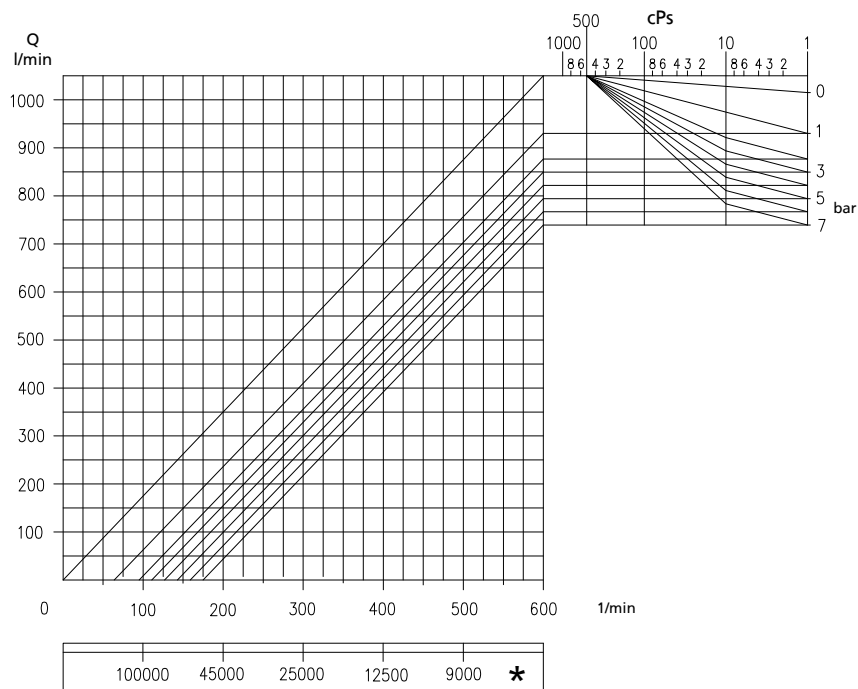

* Max. viscosity (cPs) at 0 bar (g) suction pressure / inlet pressure
Nozzle diameter 98 mm
Standard nominal nozzle diameter DN 100
Max. speed at 1 cPs = 600 rpm
It is recommended not to use all maximum values at the same time.

Total input power Vitalobe 440 - bi-lobe rotor - clearance: standard

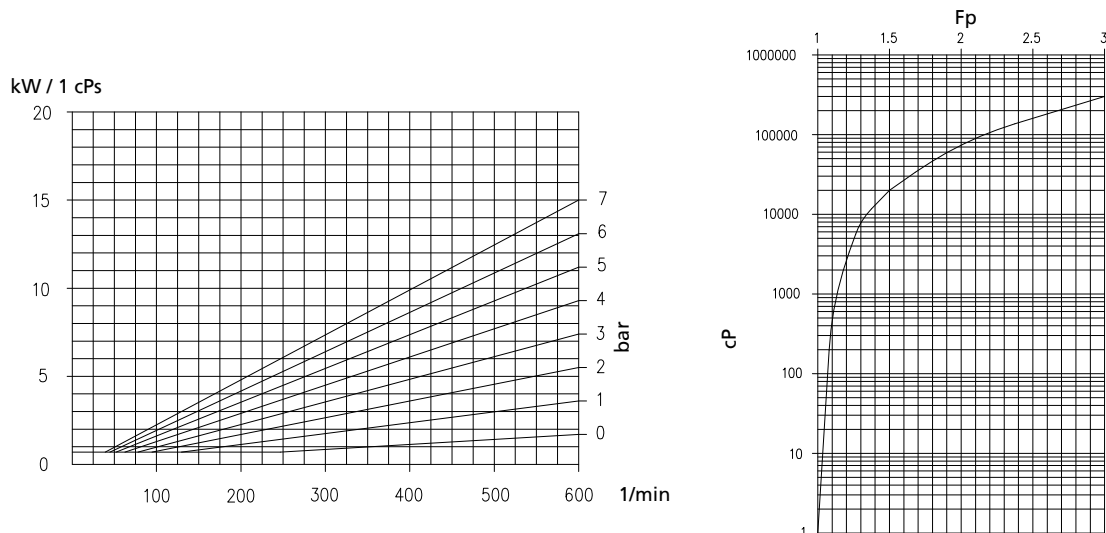


Total power = kW (1 cPs) x Fp

⁴³⁾ The characteristic curves shown are intended for orientation. Some individual pumps may differ for reasons related to their production, the fluid handled and the system conditions.

Characteristic curve Vitalobe 440 - tri-lobe rotor - clearance: standard


Characteristic curve Vitalobe 440 - tri-lobe rotor - clearance: standard

Flow rate: 1.75 l/rotation ⁴⁴⁾

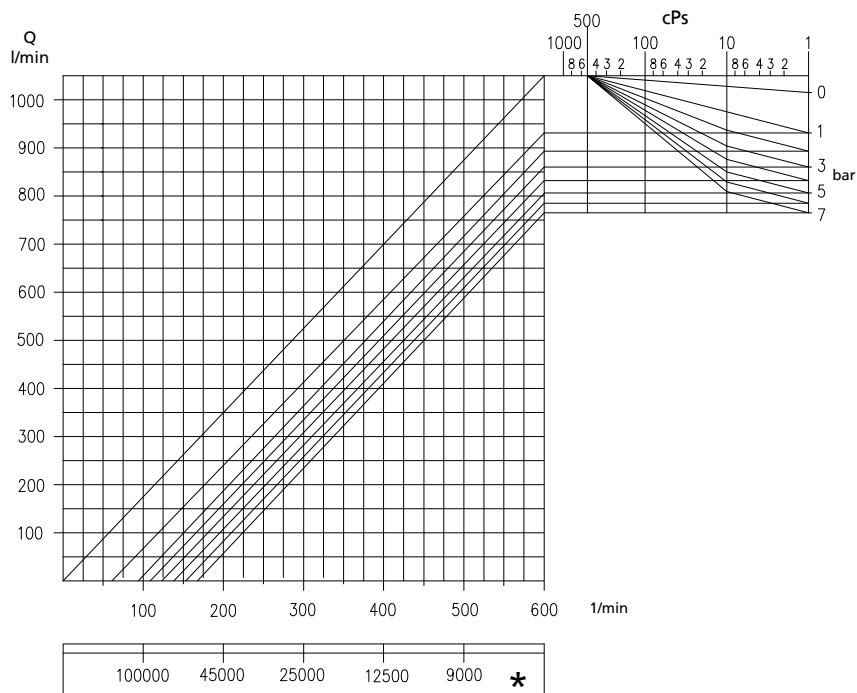

* Max. viscosity (cPs) at 0 bar (g) suction pressure / inlet pressure
Nozzle diameter 98 mm
Standard nominal nozzle diameter DN 100
Max. speed at 1 cPs = 600 rpm
It is recommended not to use all maximum values at the same time.

Total input power Vitalobe 440 - tri-lobe rotor - clearance: standard

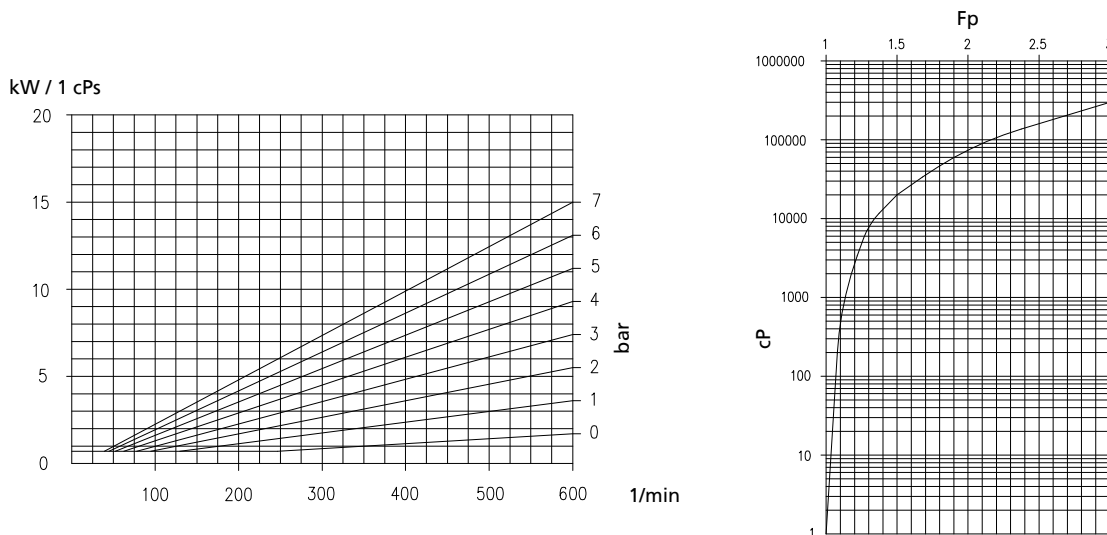


Total power = $kW (1 \text{ cPs}) \times Fp$

⁴⁴⁾ The characteristic curves shown are intended for orientation. Some individual pumps may differ for reasons related to their production, the fluid handled and the system conditions.

Characteristic curve Vitalobe 440 - tri-lobe rotor - clearance: enlarged

Characteristic curve Vitalobe 440 - tri-lobe rotor - clearance: enlarged



Flow rate: 1.75 l/rotation ⁴⁵⁾

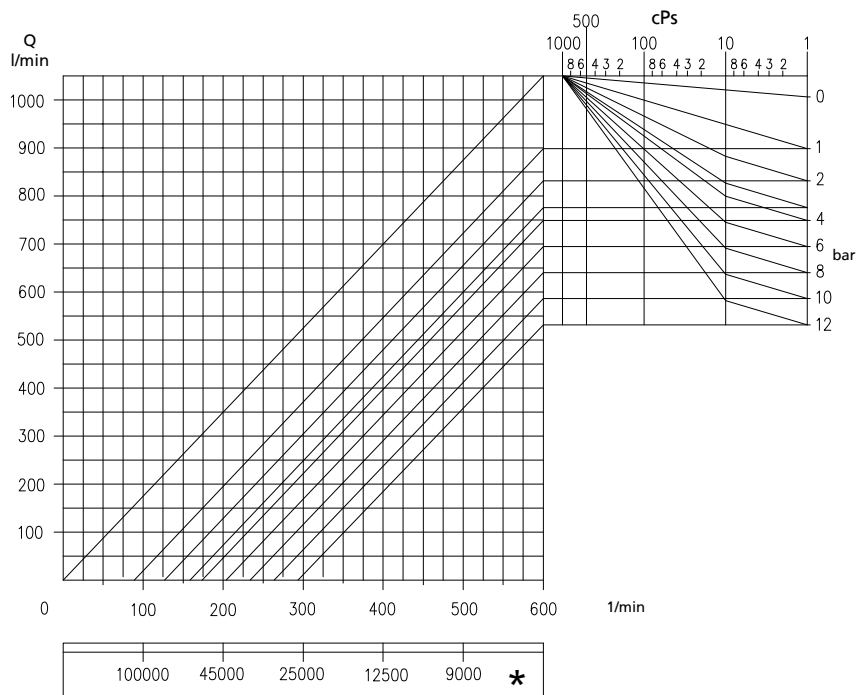

* Max. viscosity (cPs) at 0 bar (g) suction pressure / inlet pressure
Nozzle diameter 98 mm
Standard nominal nozzle diameter DN 100
Max. speed at 1 cPs = 600 rpm
It is recommended not to use all maximum values at the same time.

Total input power Vitalobe 440 - tri-lobe rotor - clearance: enlarged

kW / 1 cPs

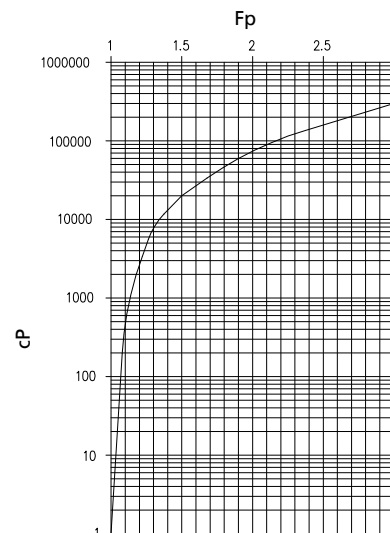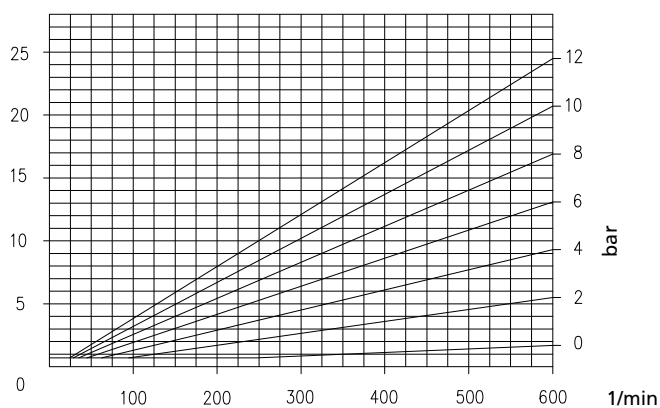


Total power = kW (1 cPs) x Fp

⁴⁵⁾ The characteristic curves shown are intended for orientation. Some individual pumps may differ for reasons related to their production, the fluid handled and the system conditions.

Characteristic curve Vitalobe 440 - bi-wing rotor - clearance: standard

Characteristic curve Vitalobe 440 - bi-wing rotor - clearance: standard



Flow rate: 1.56 l/rotation ⁴⁶⁾

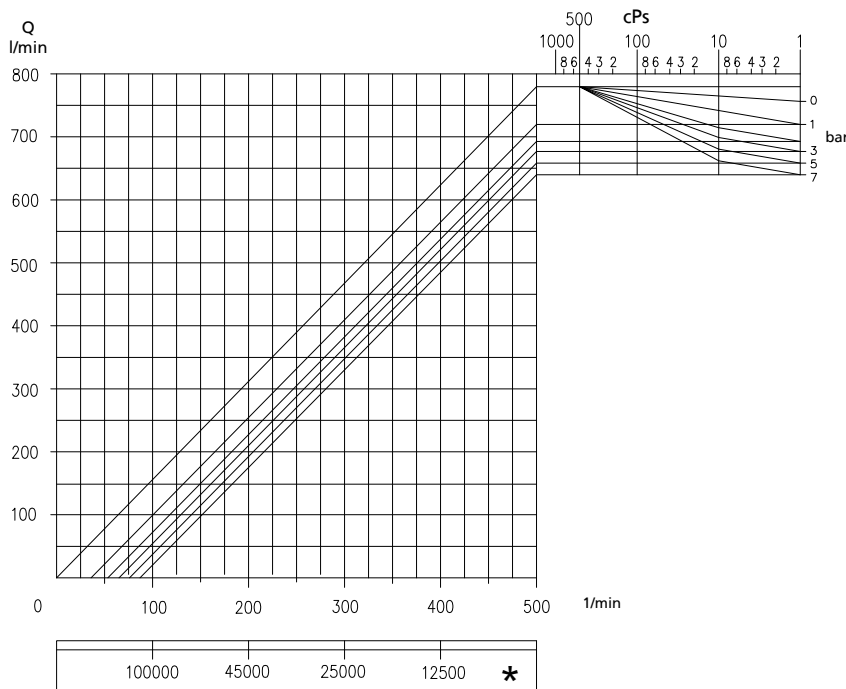

* Max. viscosity (cPs) at 0 bar (g) suction pressure / inlet pressure
Nozzle diameter 98 mm
Standard nominal nozzle diameter DN 100
Max. speed at 1 cPs = 500 rpm
It is recommended not to use all maximum values at the same time.

Total input power Vitalobe 440 - bi-wing rotor - clearance: standard

kW / 1 cPs

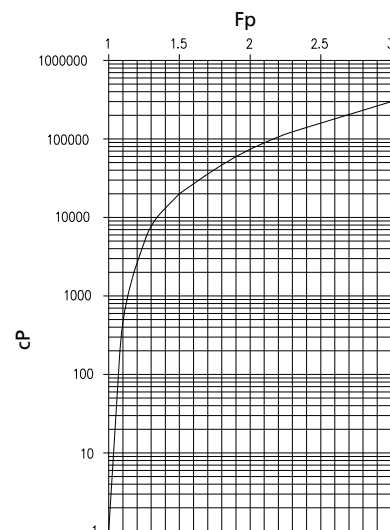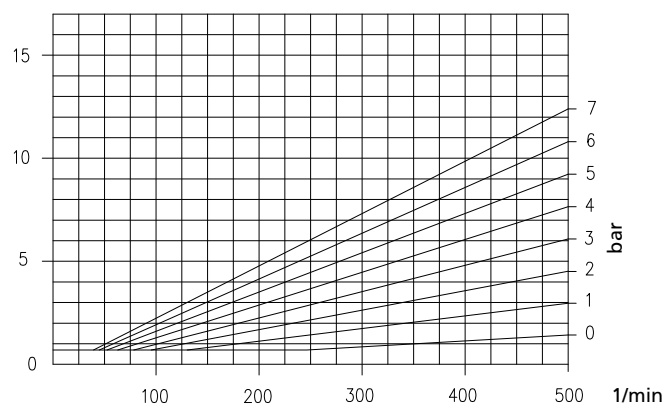


Total power = kW (1 cPs) x Fp

⁴⁶⁾ The characteristic curves shown are intended for orientation. Some individual pumps may differ for reasons related to their production, the fluid handled and the system conditions.

Characteristic curve Vitalobe 440 - bi-wing rotor - clearance: enlarged


Characteristic curve Vitalobe 440 - bi-wing rotor - clearance: enlarged

Flow rate: 1.56 l/rotation ⁴⁷⁾

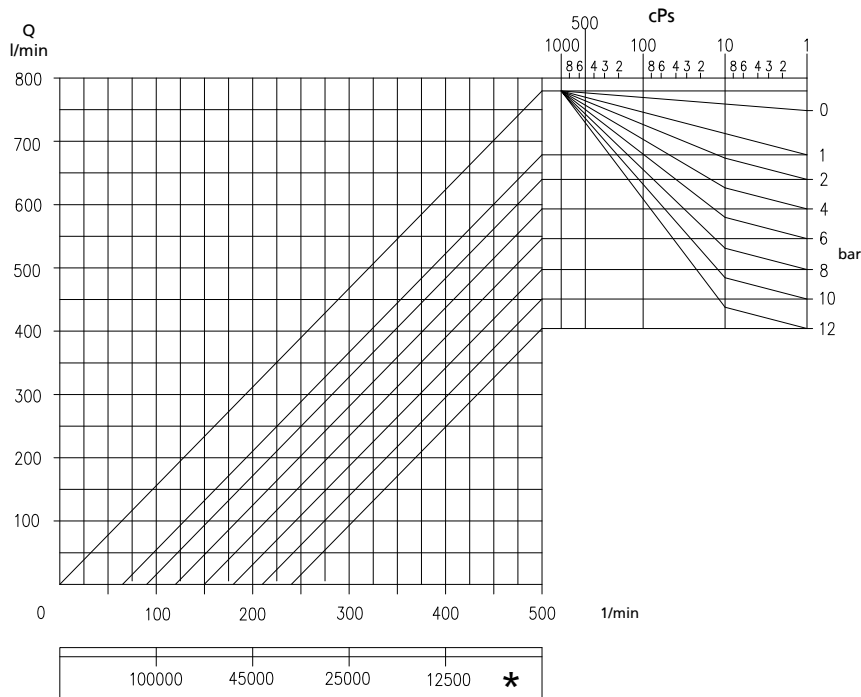

* Max. viscosity (cPs) at 0 bar (g) suction pressure / inlet pressure
Nozzle diameter 98 mm
Standard nominal nozzle diameter DN 100
Max. speed at 1 cPs = 500 rpm
It is recommended not to use all maximum values at the same time.


Total input power Vitalobe 440 - bi-wing rotor - clearance: enlarged

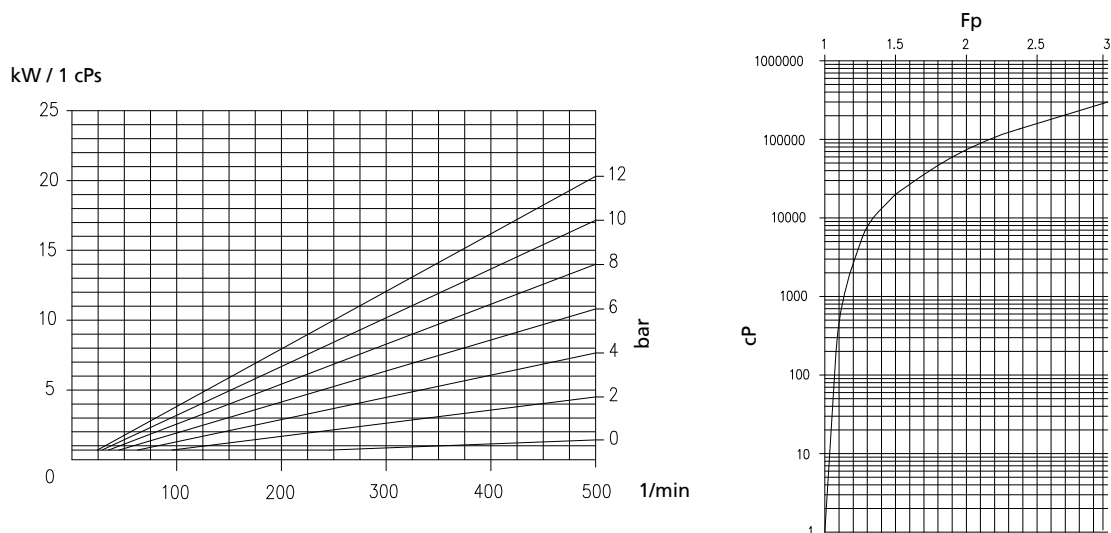

Total power = kW (1 cPs) x F_p

⁴⁷⁾ The characteristic curves shown are intended for orientation. Some individual pumps may differ for reasons related to their production, the fluid handled and the system conditions.


NPSH curve Vitalobe 440

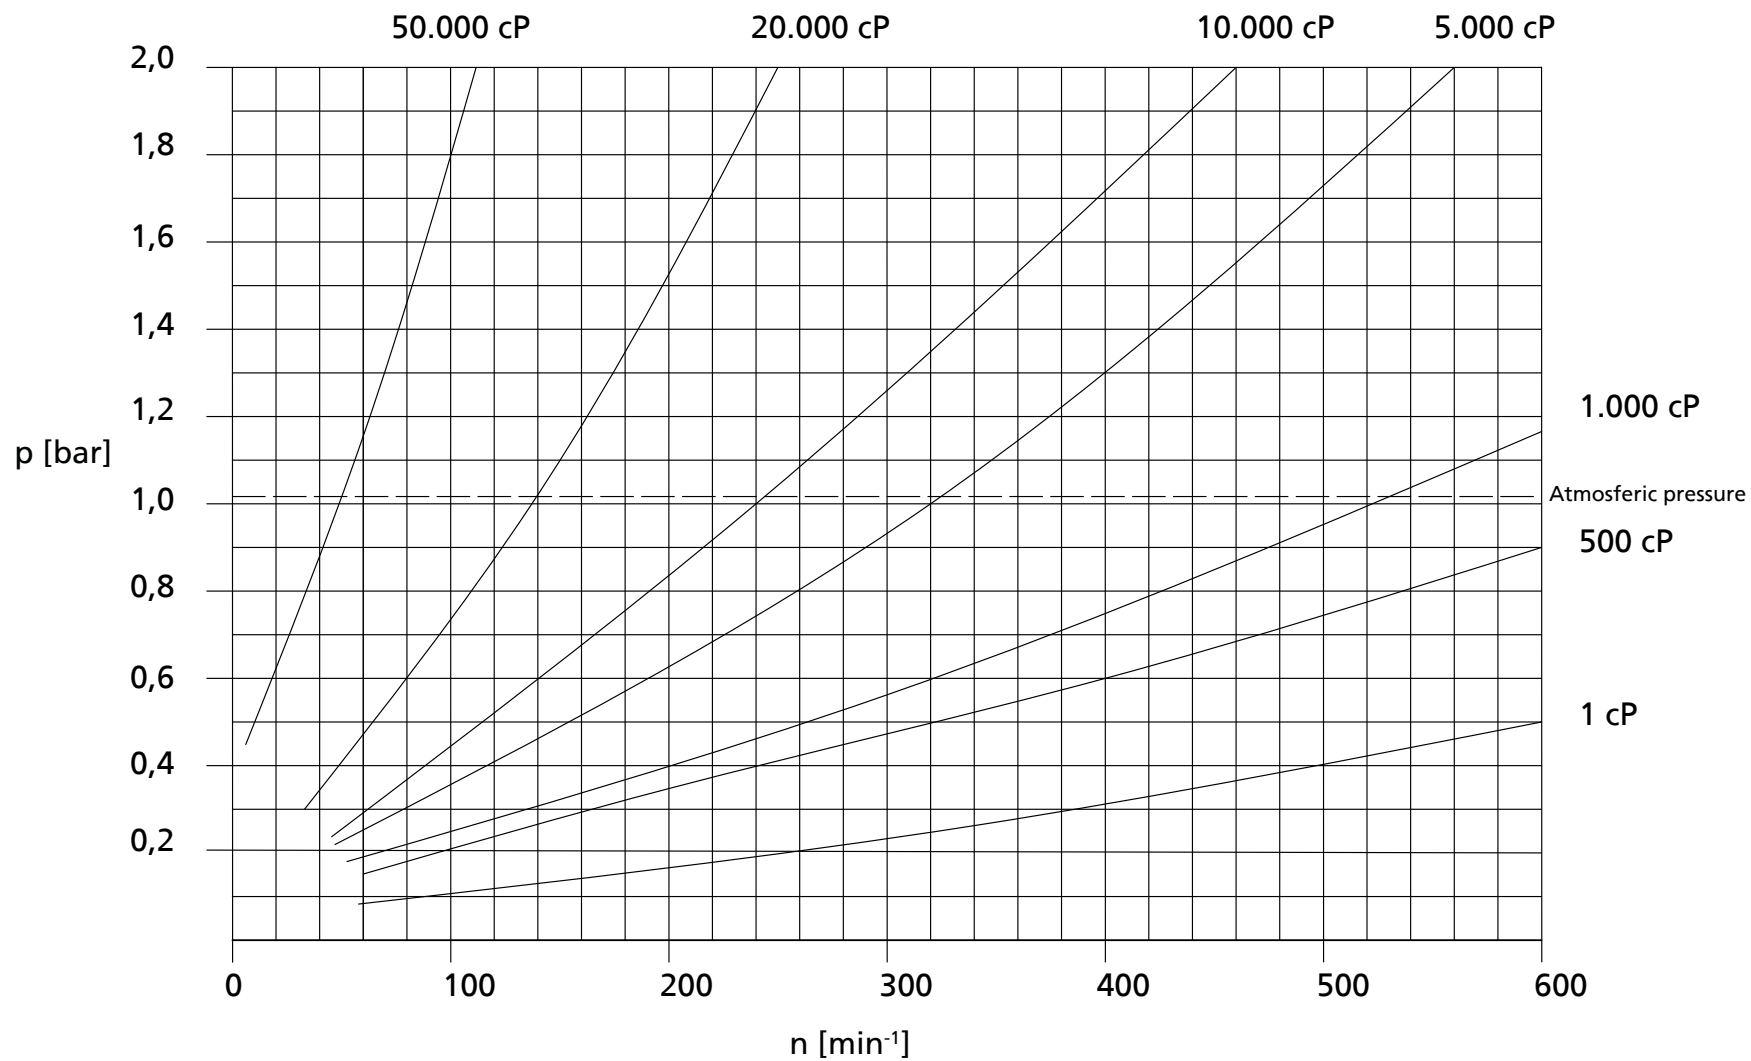

Characteristic curve Vitalobe 470 - bi-lobe rotor - clearance: standard



Characteristic curve Vitalobe 470 - bi-lobe rotor - clearance: standard

Flow rate: 2.36 l/rotation ⁴⁸⁾

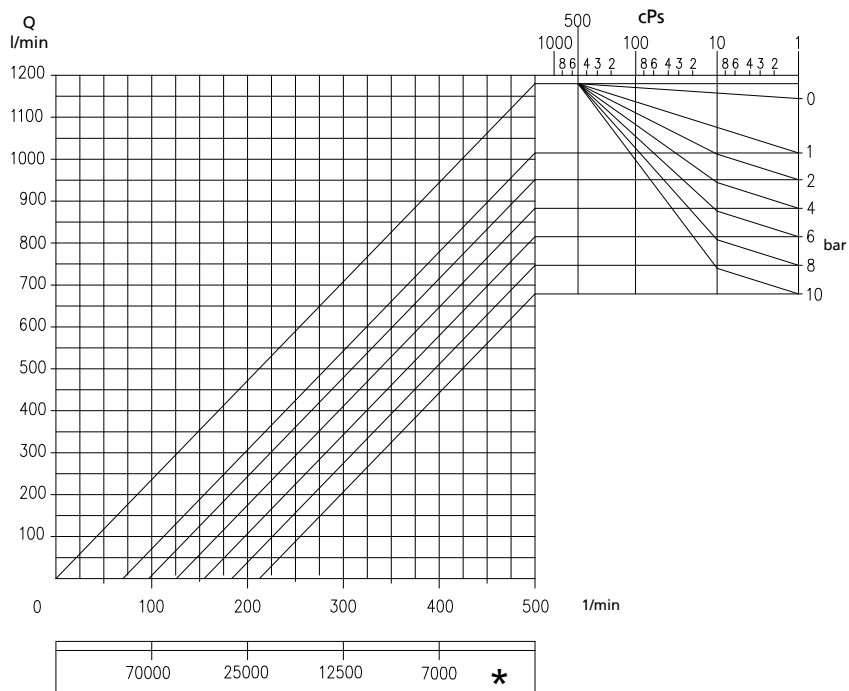

* Max. viscosity (cPs) at 0 bar (g) suction pressure / inlet pressure
Nozzle diameter 98 mm
Standard nominal nozzle diameter DN 100
Max. speed at 1 cPs = 500 rpm
It is recommended not to use all maximum values at the same time.

Total input power Vitalobe 470 - bi-lobe rotor - clearance: standard

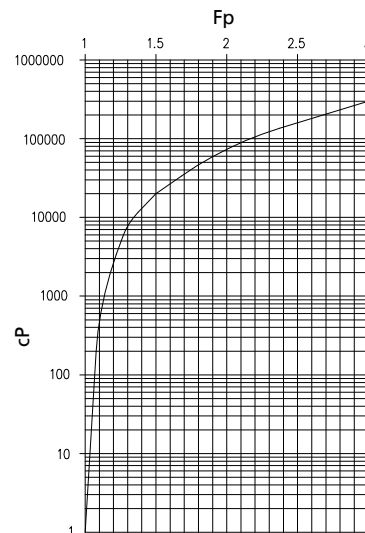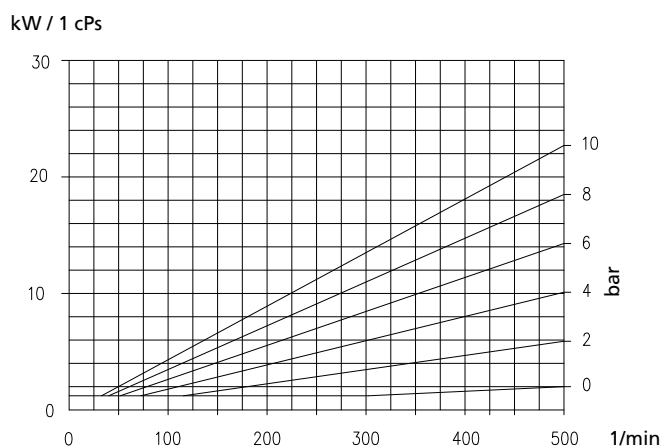


Total power = kW (1 cPs) x Fp

⁴⁸⁾ The characteristic curves shown are intended for orientation. Some individual pumps may differ for reasons related to their production, the fluid handled and the system conditions.

Characteristic curve Vitalobe 470 - tri-lobe rotor - clearance: standard


Characteristic curve Vitalobe 470 - tri-lobe rotor - clearance: standard

Flow rate: 2.38 l/rotation ⁴⁹⁾

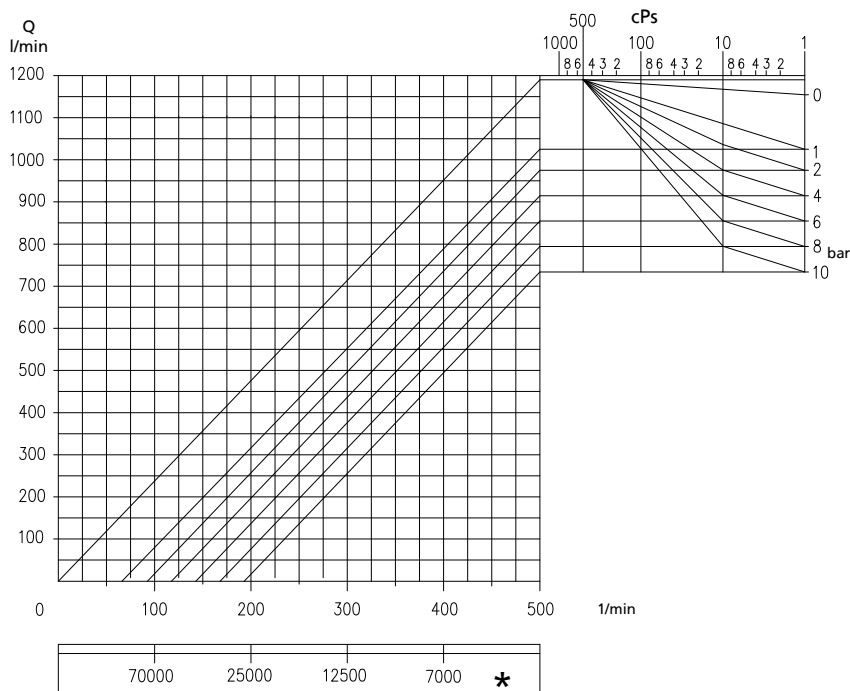

* Max. viscosity (cPs) at 0 bar (g) suction pressure / inlet pressure
Nozzle diameter 98 mm
Standard nominal nozzle diameter DN 100
Max. speed at 1 cPs = 500 rpm
It is recommended not to use all maximum values at the same time.

Total input power Vitalobe 470 - tri-lobe rotor - clearance: standard

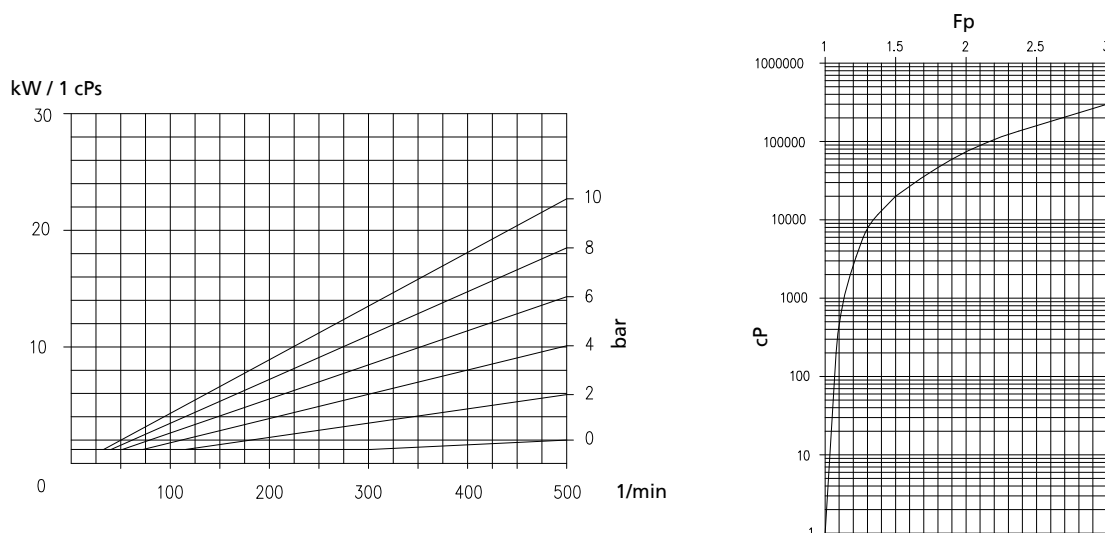


Total power = kW (1 cPs) x Fp

⁴⁹⁾ The characteristic curves shown are intended for orientation. Some individual pumps may differ for reasons related to their production, the fluid handled and the system conditions.

Characteristic curve Vitalobe 470 - tri-lobe rotor - clearance: enlarged


Characteristic curve Vitalobe 470 - tri-lobe rotor - clearance: enlarged

Flow rate: 2.38 l/rotation ⁵⁰⁾

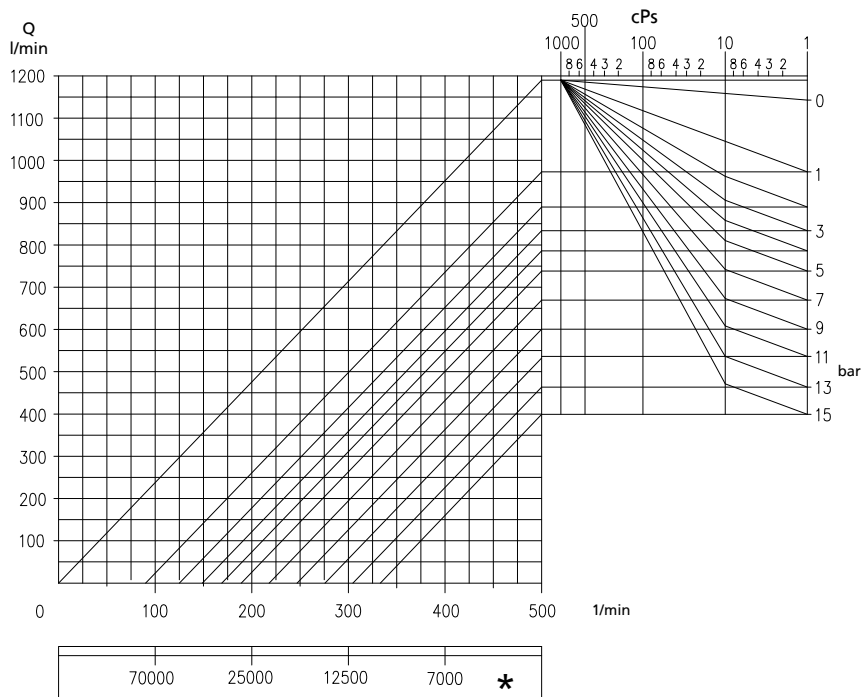

* Max. viscosity (cPs) at 0 bar (g) suction pressure / inlet pressure
Nozzle diameter 98 mm
Standard nominal nozzle diameter DN 100
Max. speed at 1 cPs = 500 rpm
It is recommended not to use all maximum values at the same time.

Total input power Vitalobe 470 - tri-lobe rotor - clearance: enlarged

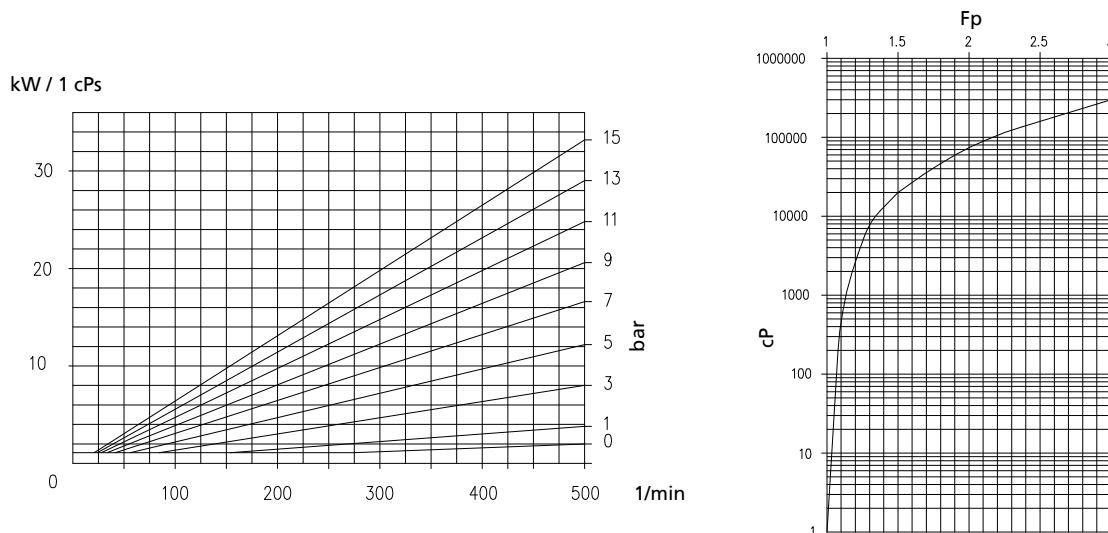


Total power = kW (1 cPs) x Fp

⁵⁰⁾ The characteristic curves shown are intended for orientation. Some individual pumps may differ for reasons related to their production, the fluid handled and the system conditions.

Characteristic curve Vitalobe 470 - bi-wing rotor - clearance: standard


Characteristic curve Vitalobe 470 - bi-wing rotor - clearance: standard

Flow rate: 2.1 l/rotation ⁵¹⁾

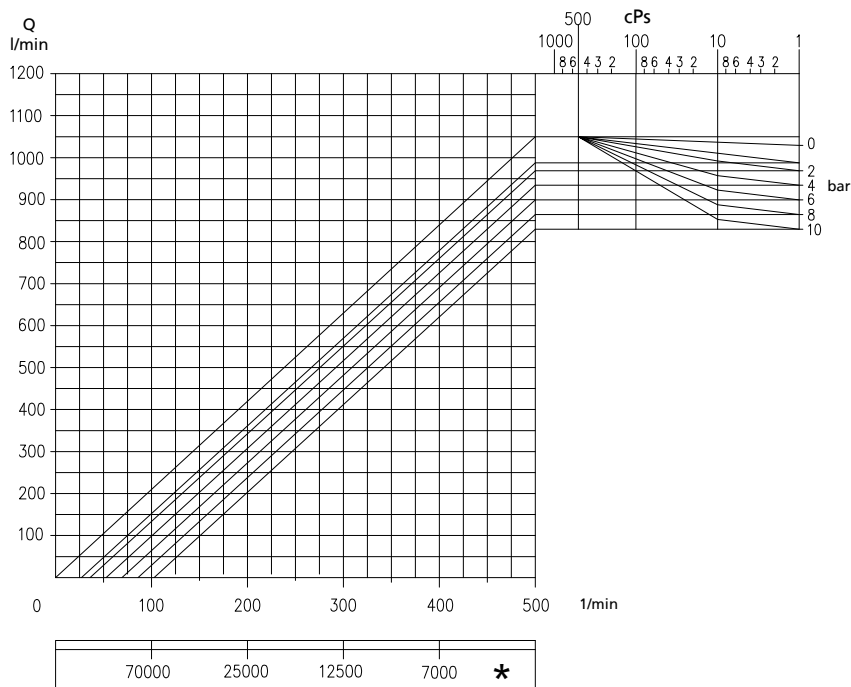

* Max. viscosity (cPs) at 0 bar (g) suction pressure / inlet pressure
Nozzle diameter 98 mm
Standard nominal nozzle diameter DN 100
Max. speed at 1 cPs = 500 rpm
It is recommended not to use all maximum values at the same time.

Total input power Vitalobe 470 - bi-wing rotor - clearance: standard

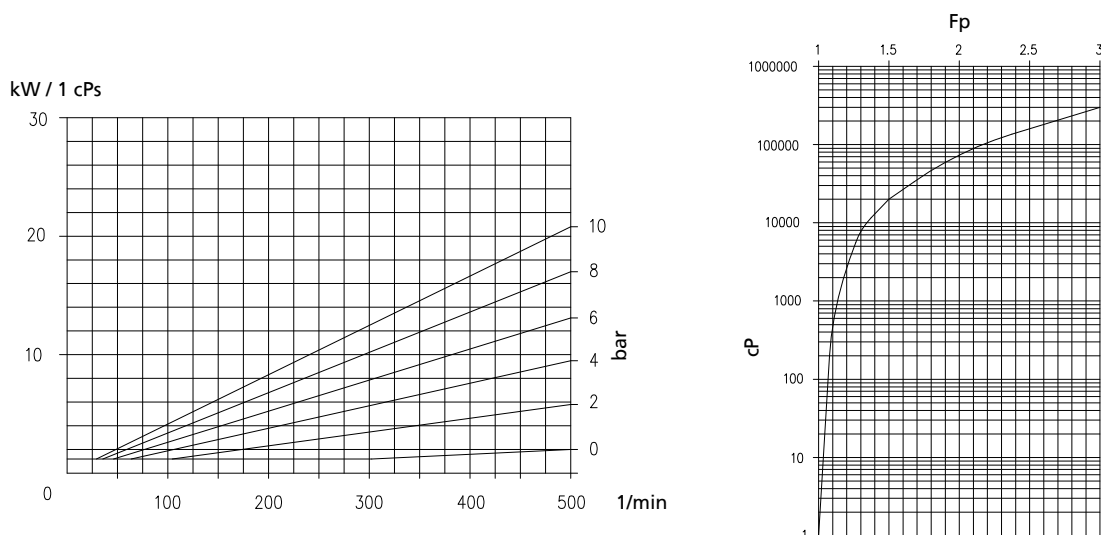


Total power = kW (1 cPs) x Fp

⁵¹⁾ The characteristic curves shown are intended for orientation. Some individual pumps may differ for reasons related to their production, the fluid handled and the system conditions.

Characteristic curve Vitalobe 470 - bi-wing rotor - clearance: enlarged


Characteristic curve Vitalobe 470 - bi-wing rotor - clearance: enlarged

Flow rate: 2.1 l/rotation ⁵²⁾

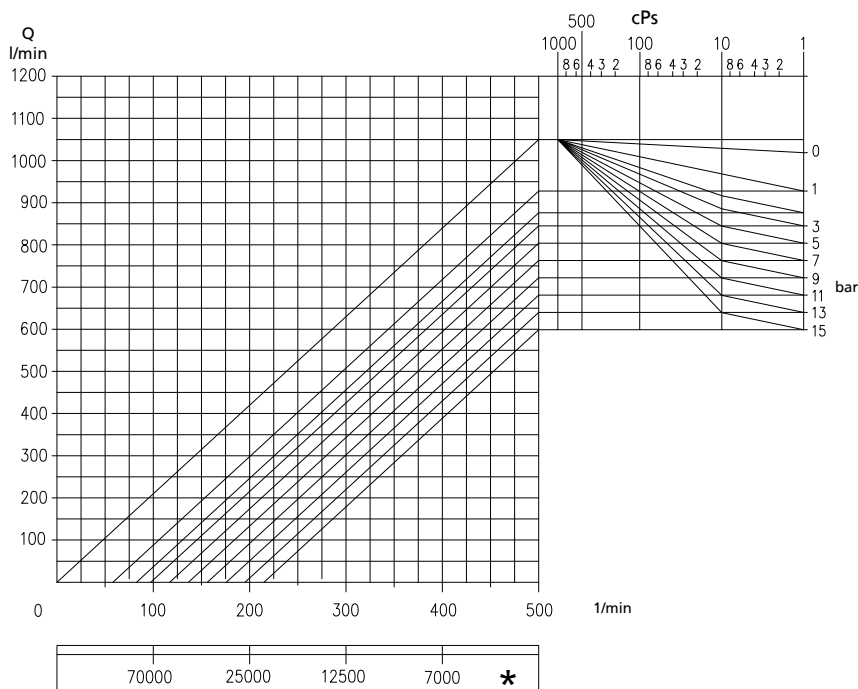

* Max. viscosity (cPs) at 0 bar (g) suction pressure / inlet pressure
Nozzle diameter 98 mm
Standard nominal nozzle diameter DN 100
Max. speed at 1 cPs = 500 rpm
It is recommended not to use all maximum values at the same time.


Total input power Vitalobe 470 - bi-wing rotor - clearance: enlarged

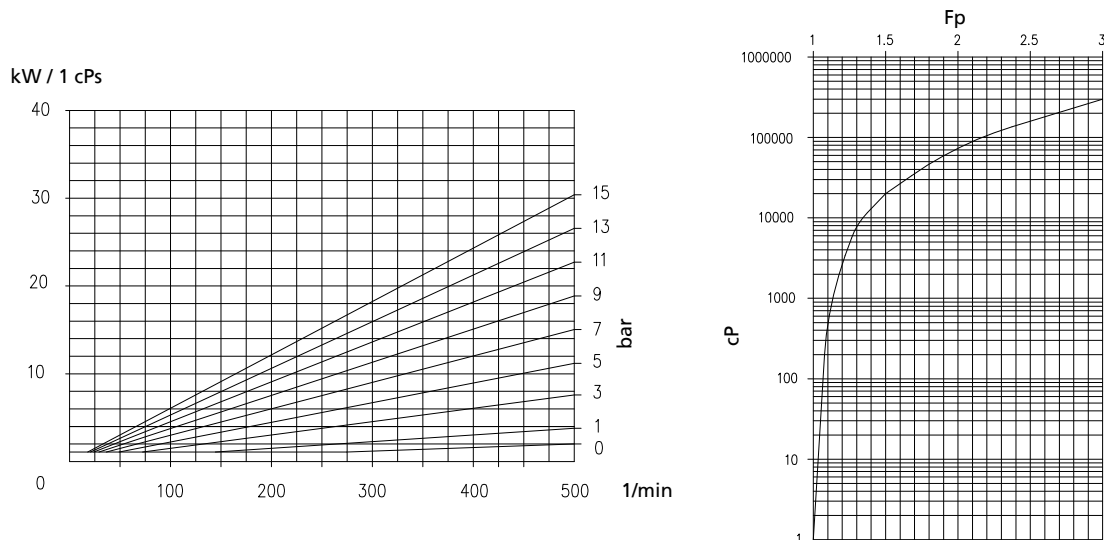

Total power = kW (1 cPs) x Fp

⁵²⁾ The characteristic curves shown are intended for orientation. Some individual pumps may differ for reasons related to their production, the fluid handled and the system conditions.


NPSH curve Vitalobe 470

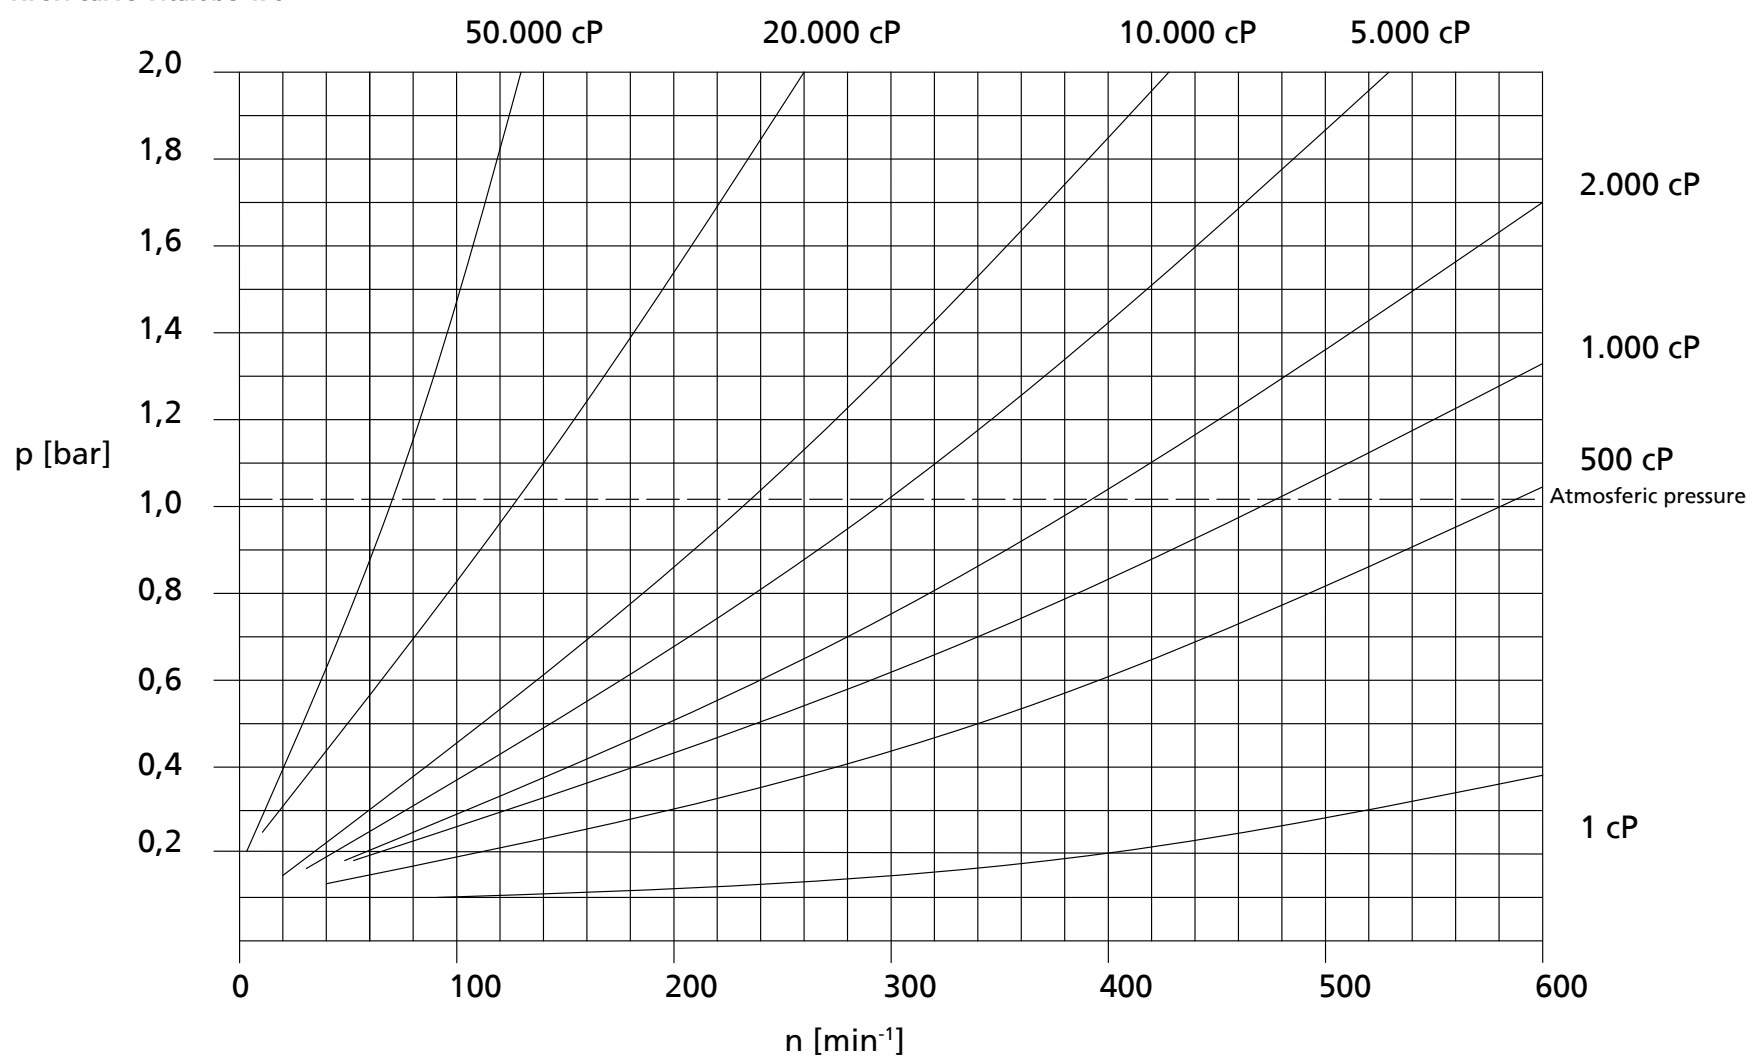

Characteristic curve Vitalobe 490 - bi-lobe rotor - clearance: standard


Characteristic curve Vitalobe 490 - bi-lobe rotor - clearance: standard

Flow rate: 3.24 l/rotation ⁵³⁾

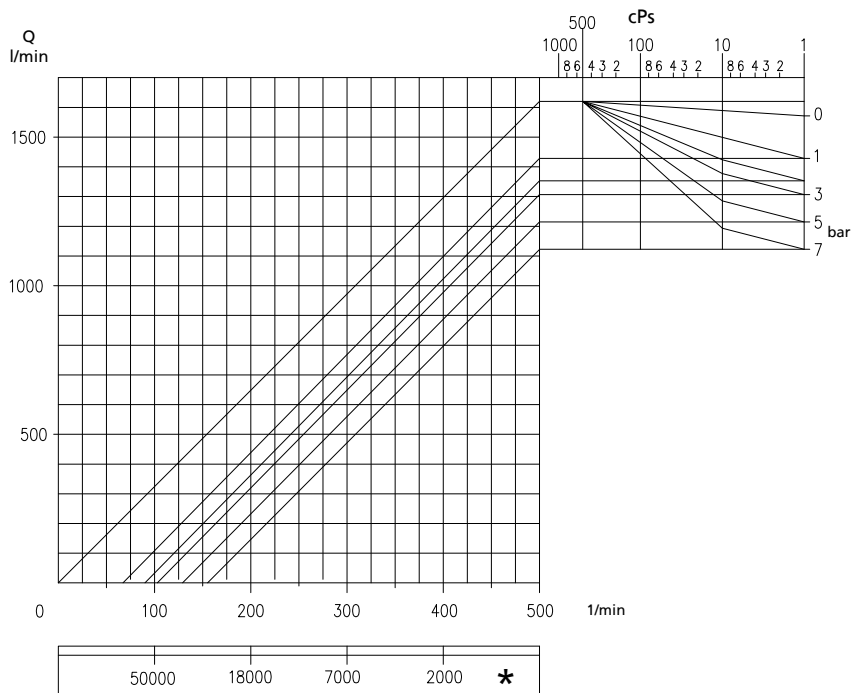

* Max. viscosity (cPs) at 0 bar (g) suction pressure / inlet pressure
Nozzle diameter 98 mm
Standard nominal nozzle diameter DN 100
Max. speed at 1 cPs = 500 rpm
It is recommended not to use all maximum values at the same time.

Total input power Vitalobe 490 - bi-lobe rotor - clearance: standard

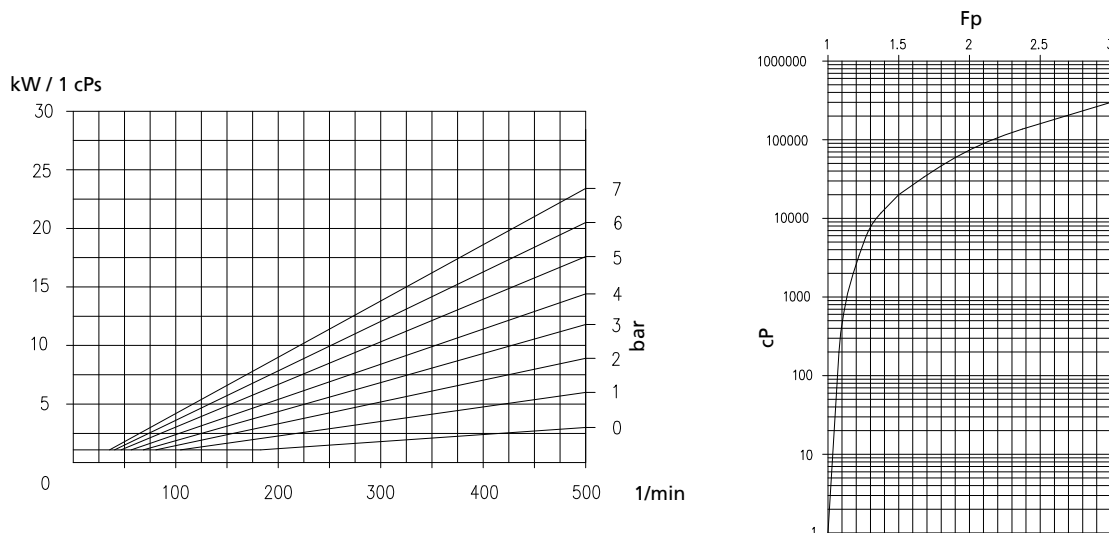


Total power = kW (1 cPs) x F_p

⁵³⁾ The characteristic curves shown are intended for orientation. Some individual pumps may differ for reasons related to their production, the fluid handled and the system conditions.

Characteristic curve Vitalobe 490 - tri-lobe rotor - clearance: standard


Characteristic curve Vitalobe 490 - tri-lobe rotor - clearance: standard

Flow rate: 3.27 l/rotation ⁵⁴⁾

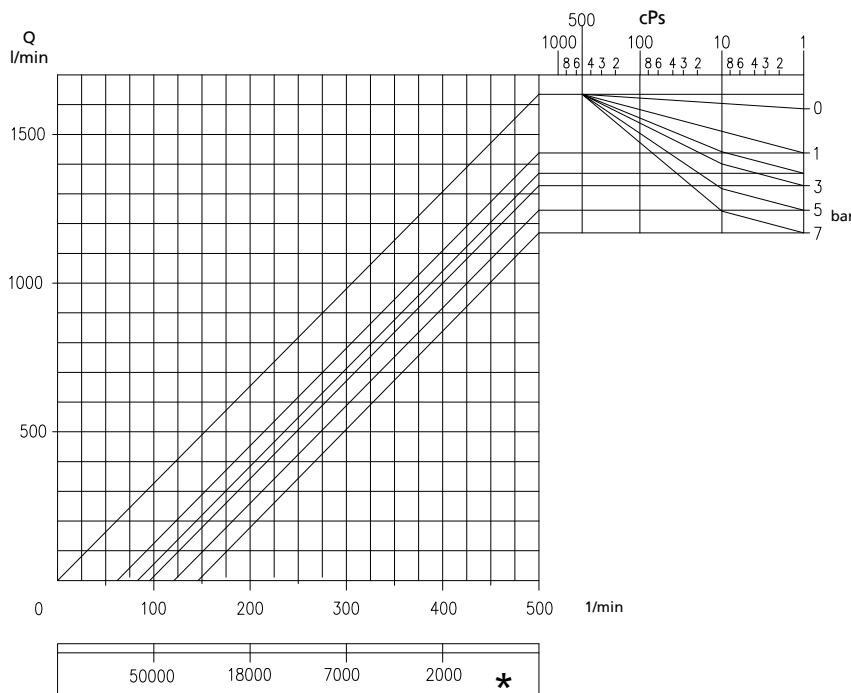

* Max. viscosity (cPs) at 0 bar (g) suction pressure / inlet pressure
Nozzle diameter 98 mm
Standard nominal nozzle diameter DN 100
Max. speed at 1 cPs = 500 rpm
It is recommended not to use all maximum values at the same time.

Total input power Vitalobe 490 - tri-lobe rotor - clearance: standard

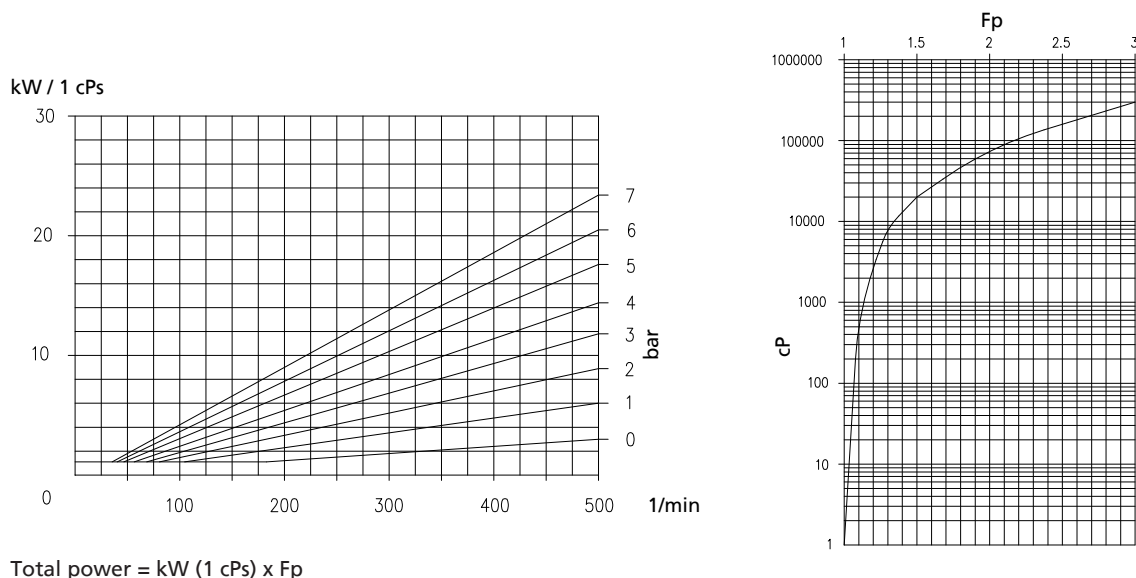


Total power = kW (1 cPs) x Fp

⁵⁴⁾ The characteristic curves shown are intended for orientation. Some individual pumps may differ for reasons related to their production, the fluid handled and the system conditions.

Characteristic curve Vitalobe 490 - tri-lobe rotor - clearance: enlarged


Characteristic curve Vitalobe 490 - tri-lobe rotor - clearance: enlarged

Flow rate: 3.27 l/rotation ⁵⁵⁾

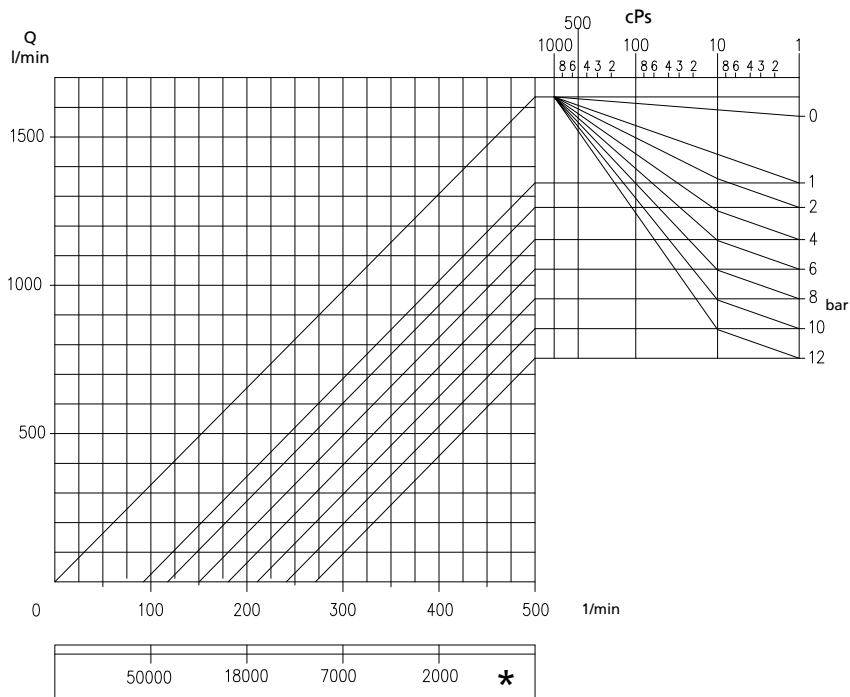

* Max. viscosity (cPs) at 0 bar (g) suction pressure / inlet pressure
Nozzle diameter 98 mm
Standard nominal nozzle diameter DN 100
Max. speed at 1 cPs = 500 rpm
It is recommended not to use all maximum values at the same time.

Total input power Vitalobe 490 - tri-lobe rotor - clearance: enlarged

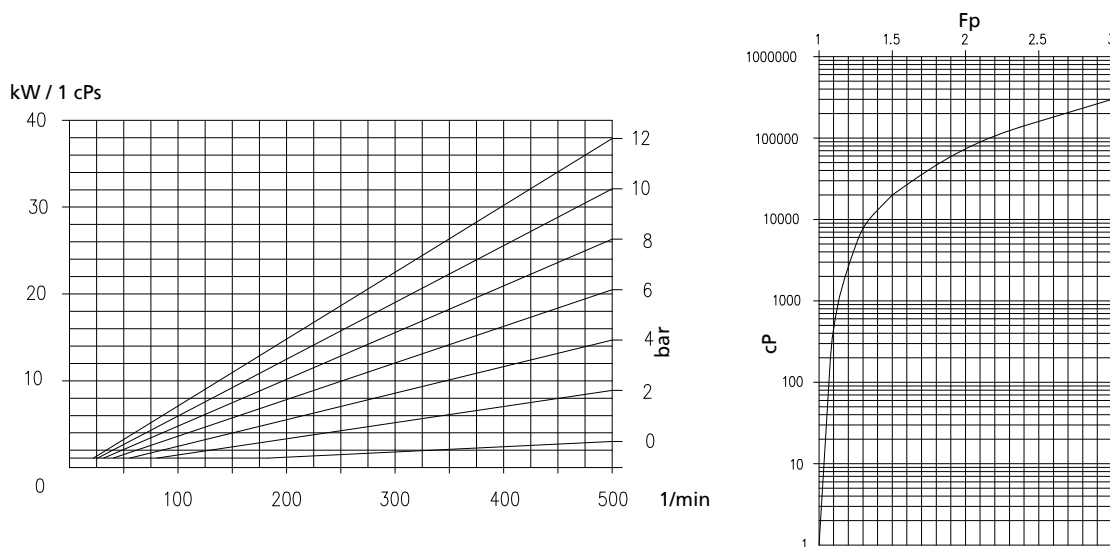


Total power = kW (1 cPs) x Fp

⁵⁵⁾ The characteristic curves shown are intended for orientation. Some individual pumps may differ for reasons related to their production, the fluid handled and the system conditions.

Characteristic curve Vitalobe 490 - bi-wing rotor - clearance: standard


Characteristic curve Vitalobe 490 - bi-wing rotor - clearance: standard

Flow rate: 2.88 l/rotation ⁵⁶⁾

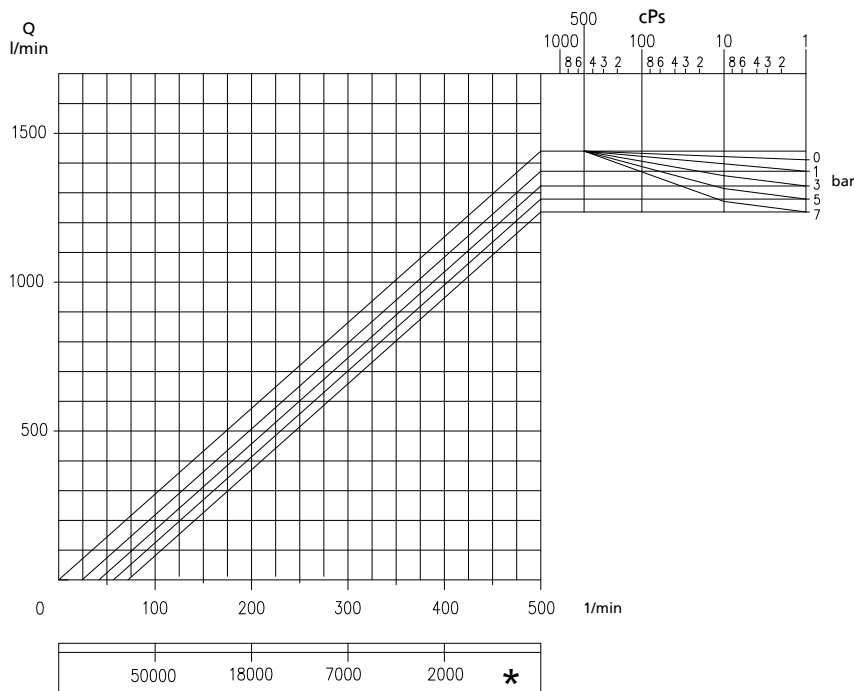

* Max. viscosity (cPs) at 0 bar (g) suction pressure / inlet pressure
Nozzle diameter 98 mm
Standard nominal nozzle diameter DN 100
Max. speed at 1 cPs = 500 rpm
It is recommended not to use all maximum values at the same time.

Total input power Vitalobe 490 - bi-wing rotor - clearance: standard

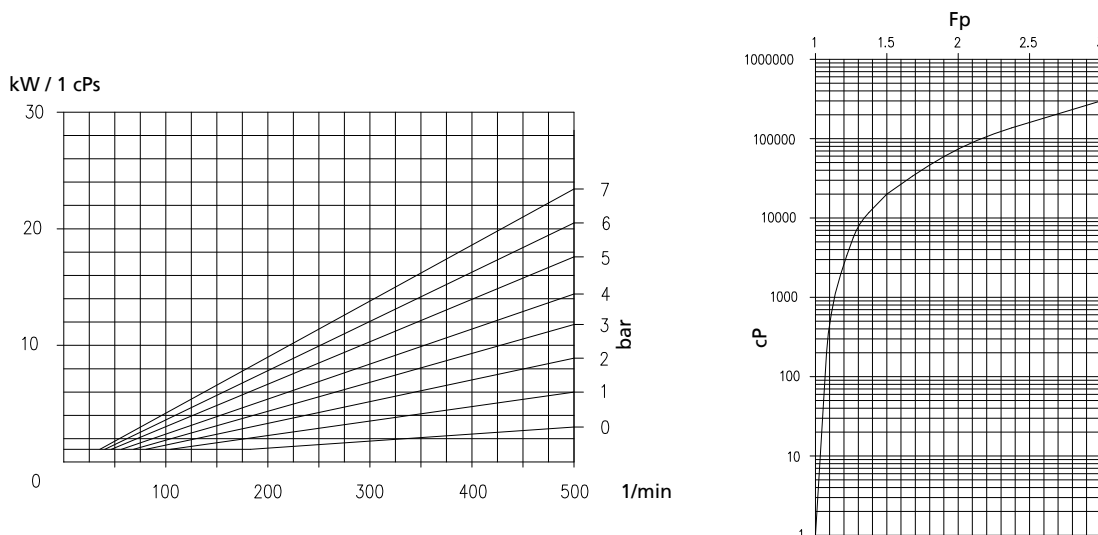


Total power = kW (1 cPs) x Fp

⁵⁶⁾ The characteristic curves shown are intended for orientation. Some individual pumps may differ for reasons related to their production, the fluid handled and the system conditions.

Characteristic curve Vitalobe 490 - bi-wing rotor - clearance: enlarged


Characteristic curve Vitalobe 490 - bi-wing rotor - clearance: enlarged

Flow rate: 2.88 l/rotation ⁵⁷⁾

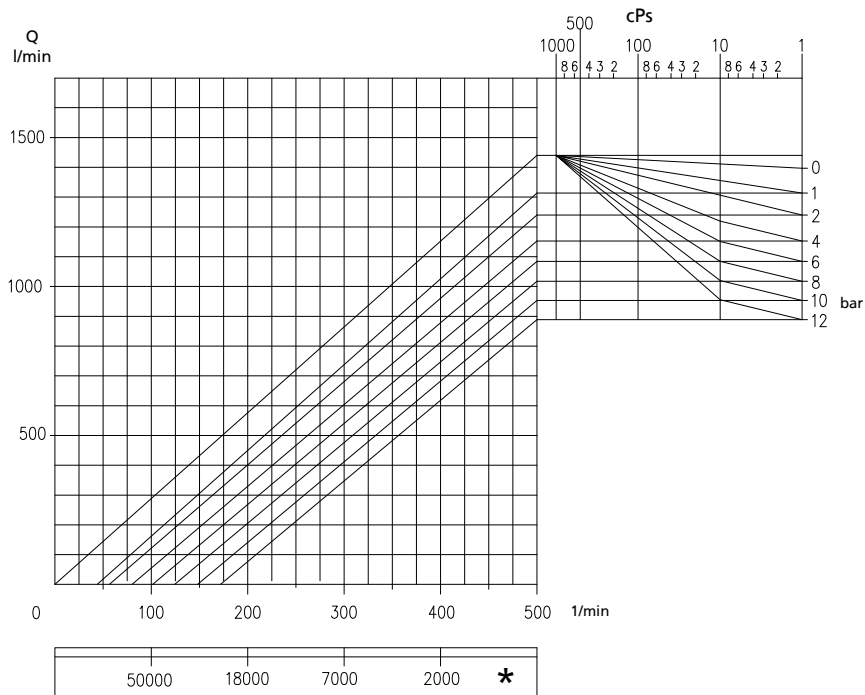

* Max. viscosity (cPs) at 0 bar (g) suction pressure / inlet pressure
Nozzle diameter 98 mm
Standard nominal nozzle diameter DN 100
Max. speed at 1 cPs = 500 rpm
It is recommended not to use all maximum values at the same time.


Total input power Vitalobe 490 - bi-wing rotor - clearance: enlarged

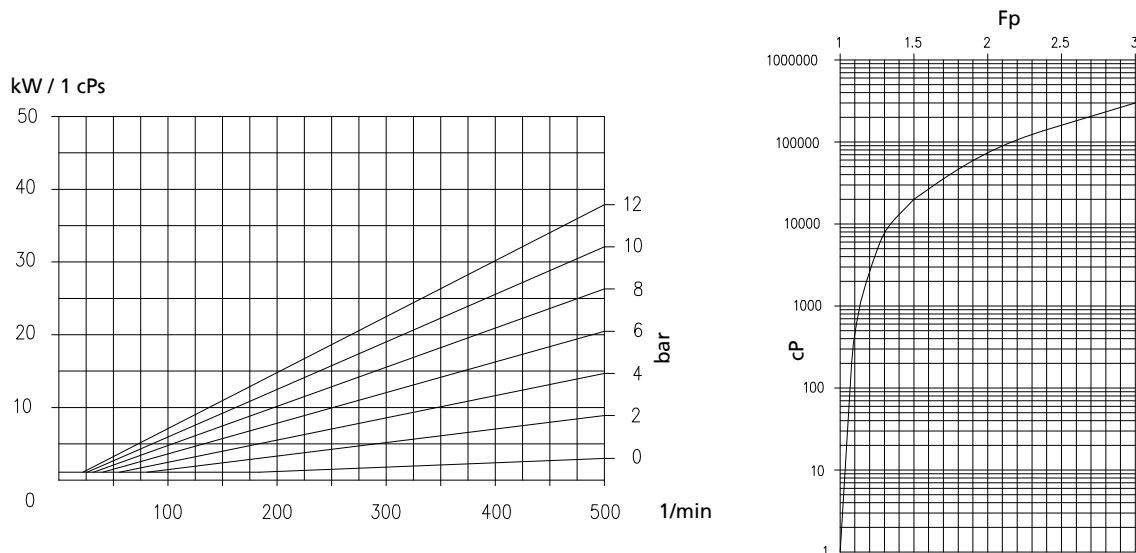

Total power = kW (1 cPs) x F_p

⁵⁷⁾ The characteristic curves shown are intended for orientation. Some individual pumps may differ for reasons related to their production, the fluid handled and the system conditions.


NPSH curve Vitalobe 490

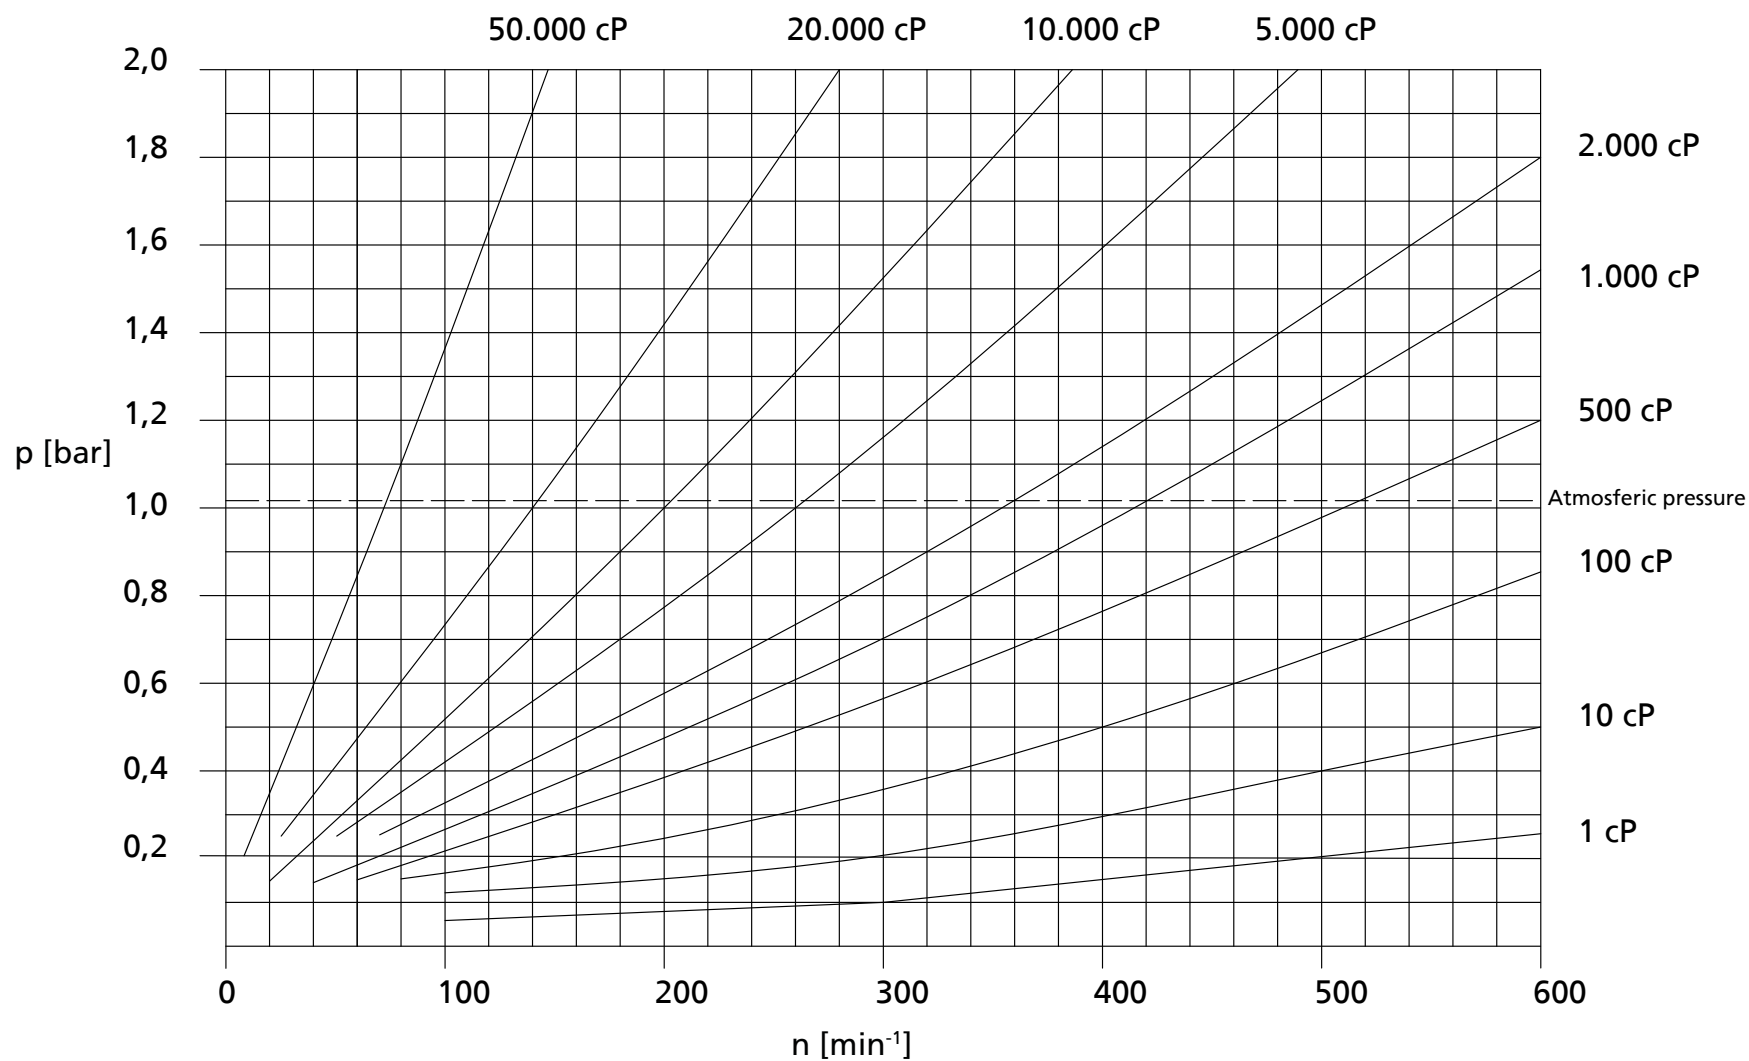

Characteristic curve Vitalobe 550 - bi-lobe rotor - clearance: standard

Characteristic curve Vitalobe 550 - bi-lobe rotor - clearance: standard



Flow rate: 4.0 l/rotation ⁵⁸⁾

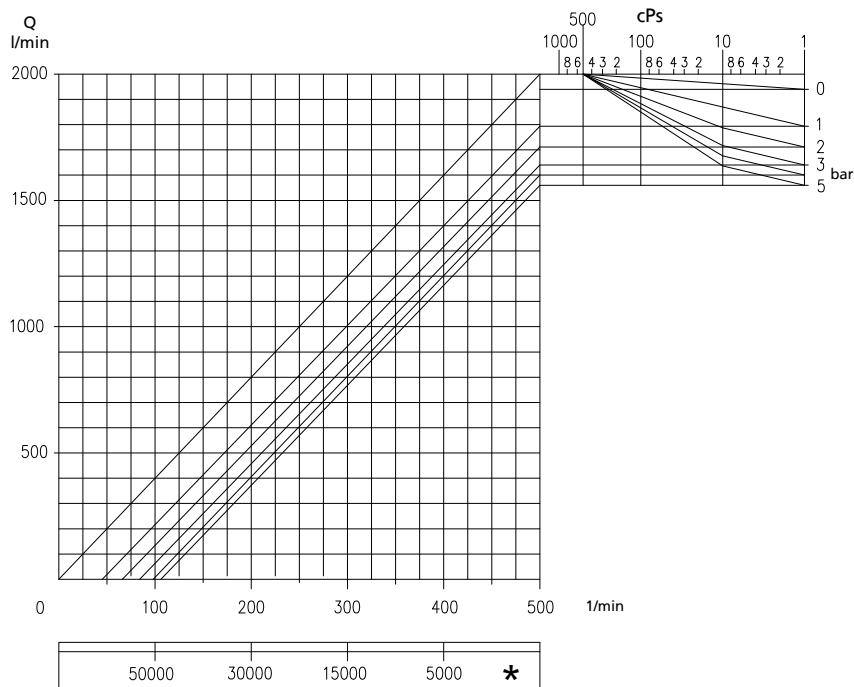

* Max. viscosity (cPs) at 0 bar (g) suction pressure / inlet pressure
Nozzle diameter 125 mm
Standard nominal nozzle diameter DN 125
Max. speed at 1 cPs = 500 rpm
It is recommended not to use all maximum values at the same time.

Total input power Vitalobe 550 - bi-lobe rotor - clearance: standard

kW / 1 cPs

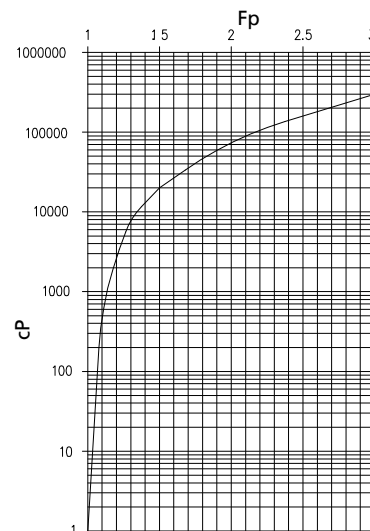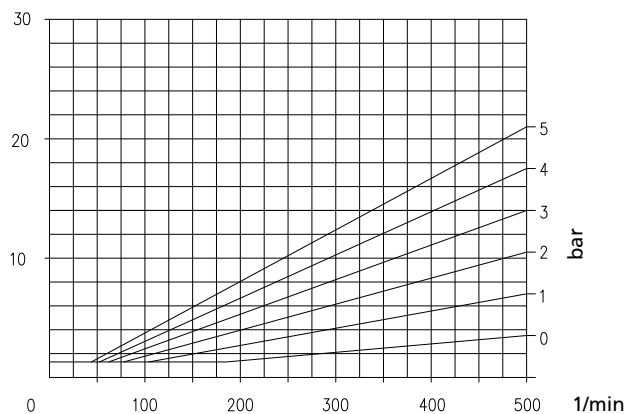


Total power = kW (1 cPs) x Fp

⁵⁸⁾ The characteristic curves shown are intended for orientation. Some individual pumps may differ for reasons related to their production, the fluid handled and the system conditions.

Characteristic curve Vitalobe 550 - tri-lobe rotor - clearance: standard


Characteristic curve Vitalobe 550 - tri-lobe rotor - clearance: standard

Flow rate: 4.0 l/rotation ⁵⁹⁾

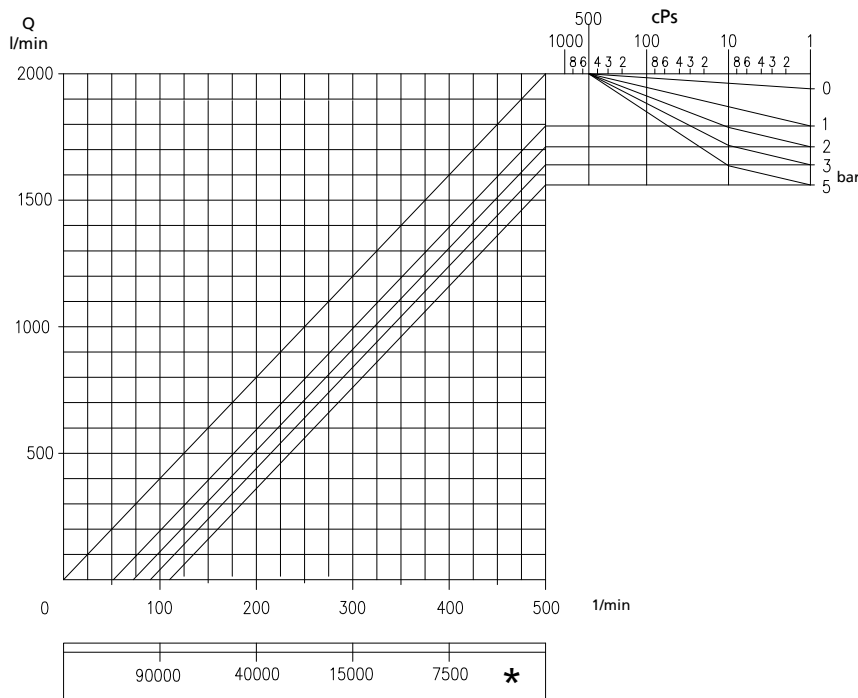

* Max. viscosity (cPs) at 0 bar (g) suction pressure / inlet pressure
Nozzle diameter 125 mm
Standard nominal nozzle diameter DN 125
Max. speed at 1 cPs = 500 rpm
It is recommended not to use all maximum values at the same time.

Total input power Vitalobe 550 - tri-lobe rotor - clearance: standard

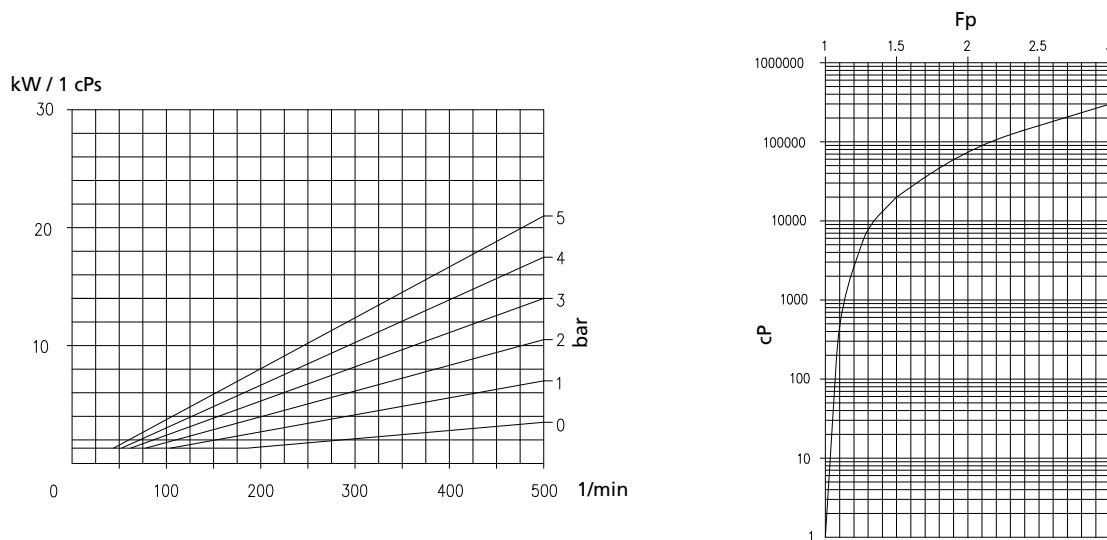


Total power = kW (1 cPs) x Fp

⁵⁹⁾ The characteristic curves shown are intended for orientation. Some individual pumps may differ for reasons related to their production, the fluid handled and the system conditions.

Characteristic curve Vitalobe 550 - tri-lobe rotor - clearance: enlarged


Characteristic curve Vitalobe 550 - tri-lobe rotor - clearance: enlarged

Flow rate: 4.0 l/rotation ⁶⁰⁾

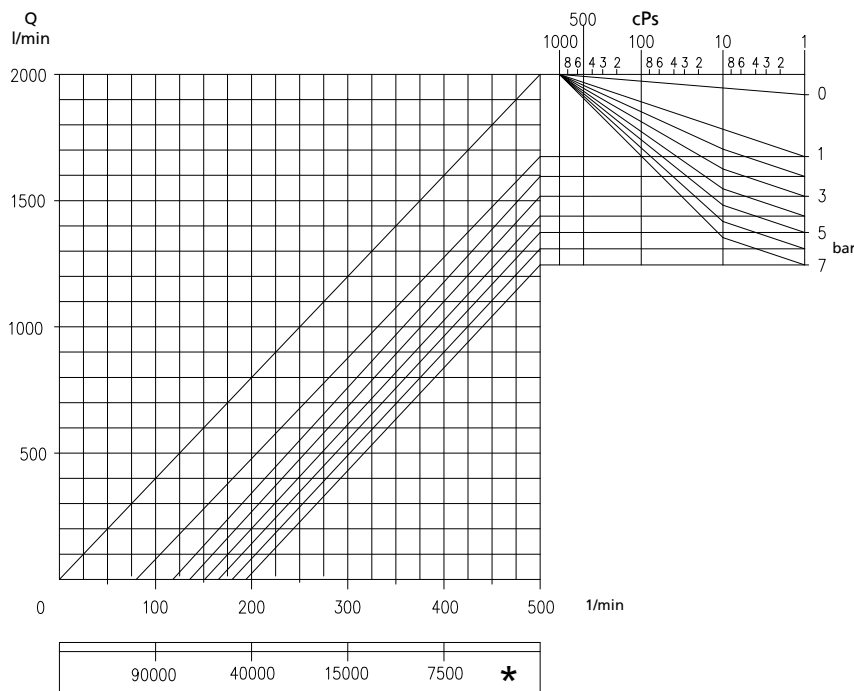

* Max. viscosity (cPs) at 0 bar (g) suction pressure / inlet pressure
Nozzle diameter 125 mm
Standard nominal nozzle diameter DN 125
Max. speed at 1 cPs = 500 rpm
It is recommended not to use all maximum values at the same time.

Total input power Vitalobe 550 - tri-lobe rotor - clearance: enlarged

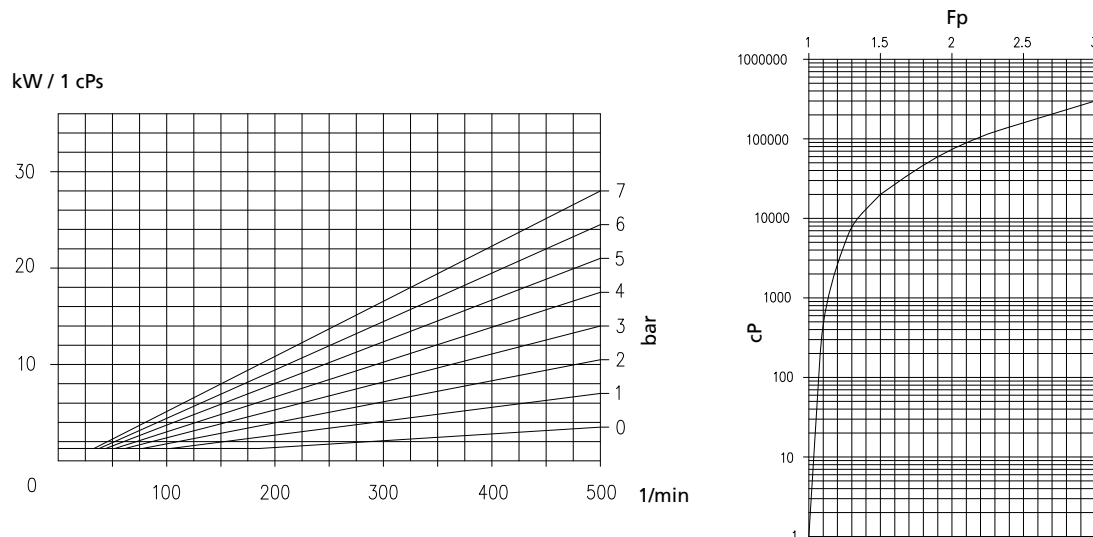


Total power = kW (1 cPs) x Fp

⁶⁰⁾ The characteristic curves shown are intended for orientation. Some individual pumps may differ for reasons related to their production, the fluid handled and the system conditions.

Characteristic curve Vitalobe 550 - bi-wing rotor - clearance: standard



Characteristic curve Vitalobe 550 - bi-wing rotor - clearance: standard

Flow rate: 3.8 l/rotation ⁶¹⁾

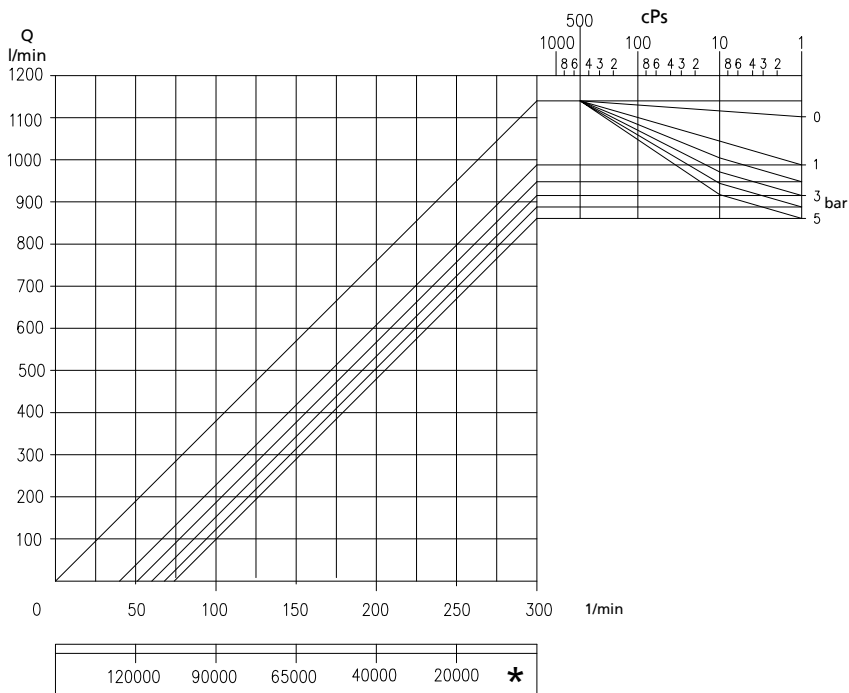

* Max. viscosity (cPs) at 0 bar (g) suction pressure / inlet pressure
Nozzle diameter 125 mm
Standard nominal nozzle diameter DN 125
Max. speed at 1 cPs = 300 rpm
It is recommended not to use all maximum values at the same time.


Total input power Vitalobe 550 - bi-wing rotor - clearance: standard

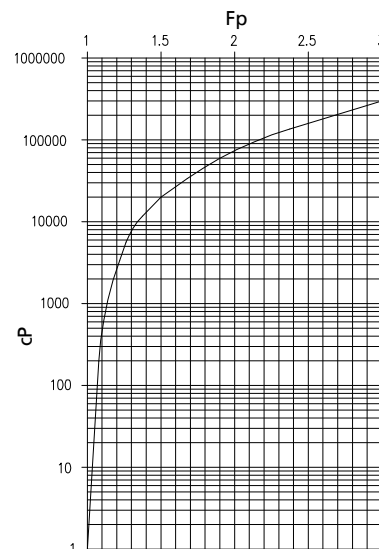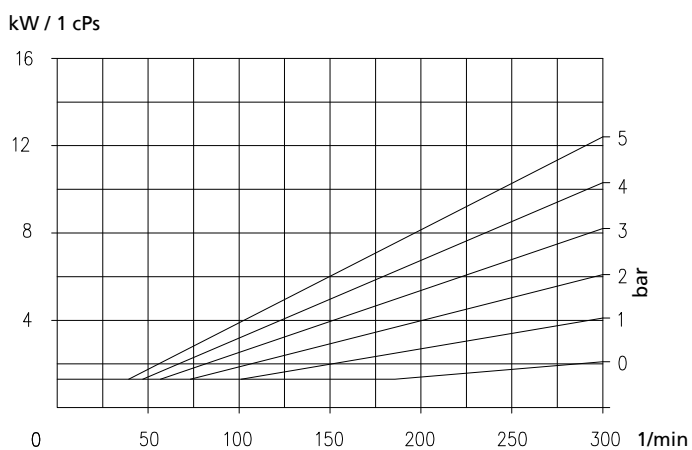

Total power = kW (1 cPs) x Fp

⁶¹⁾ The characteristic curves shown are intended for orientation. Some individual pumps may differ for reasons related to their production, the fluid handled and the system conditions.


NPSH curve Vitalobe 550

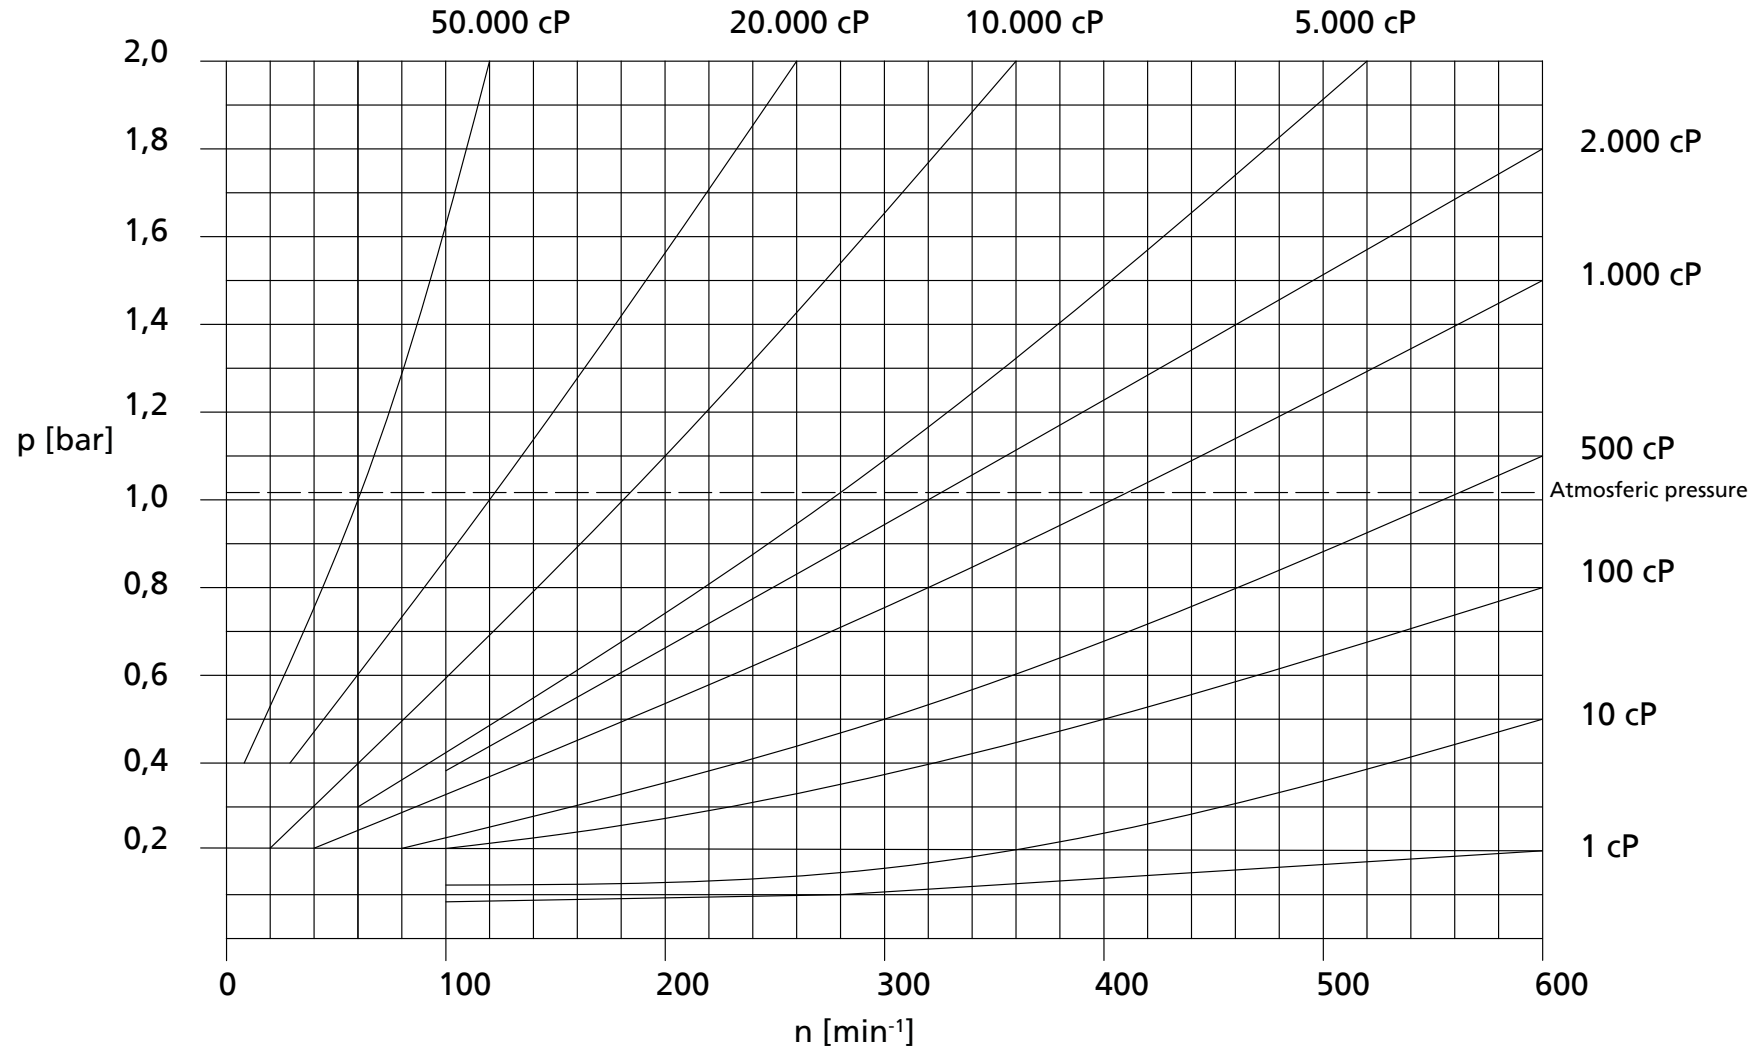

Characteristic curve Vitalobe 660 - tri-lobe rotor - clearance: standard



Characteristic curve Vitalobe 660 - tri-lobe rotor - clearance: standard

Flow rate: 7.6 l/rotation ⁶²⁾

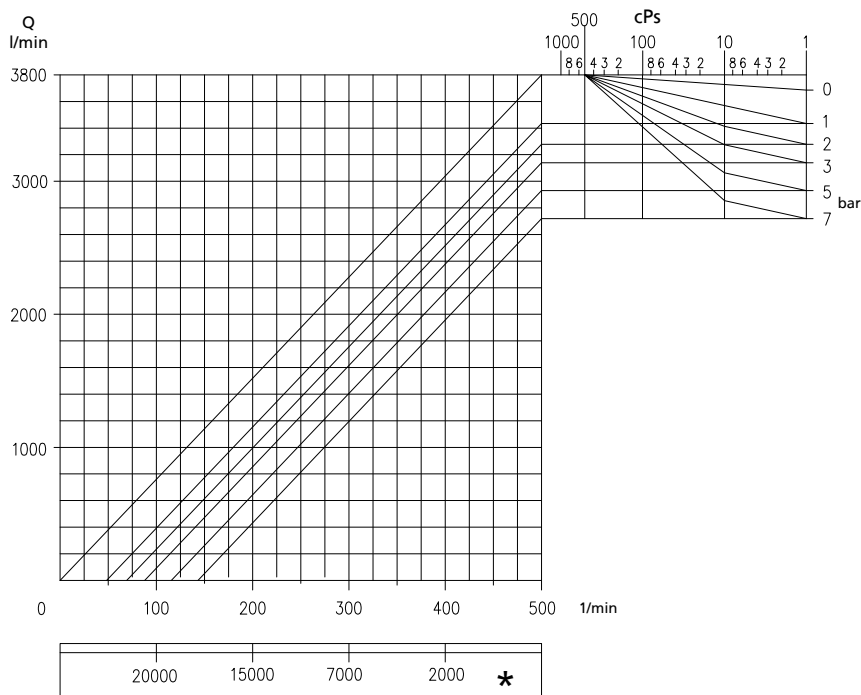

* Max. viscosity (cPs) at 0 bar (g) suction pressure / inlet pressure
Nozzle diameter 150 mm
Standard nominal nozzle diameter DN 150
Max. speed at 1 cPs = 500 rpm
It is recommended not to use all maximum values at the same time.

Total input power Vitalobe 660 - tri-lobe rotor - clearance: standard

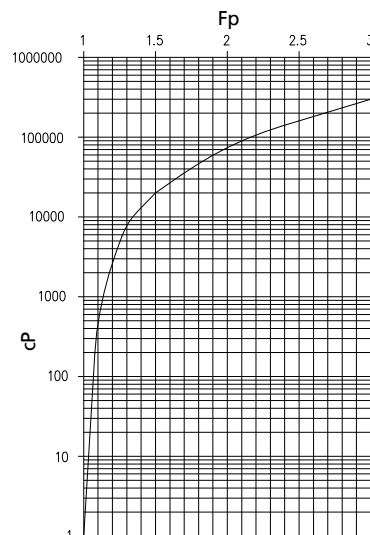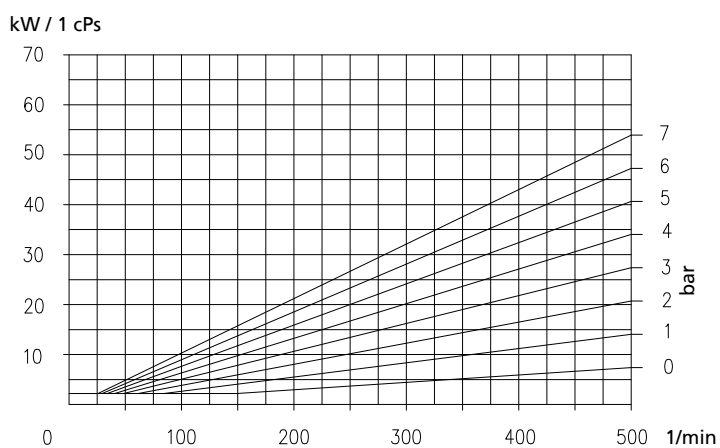


Total power = kW (1 cPs) x Fp

⁶²⁾ The characteristic curves shown are intended for orientation. Some individual pumps may differ for reasons related to their production, the fluid handled and the system conditions.

Characteristic curve Vitalobe 680 - tri-lobe rotor - clearance: standard


Characteristic curve Vitalobe 680 - tri-lobe rotor - clearance: standard

Flow rate: 11.4 l/rotation ⁶³⁾

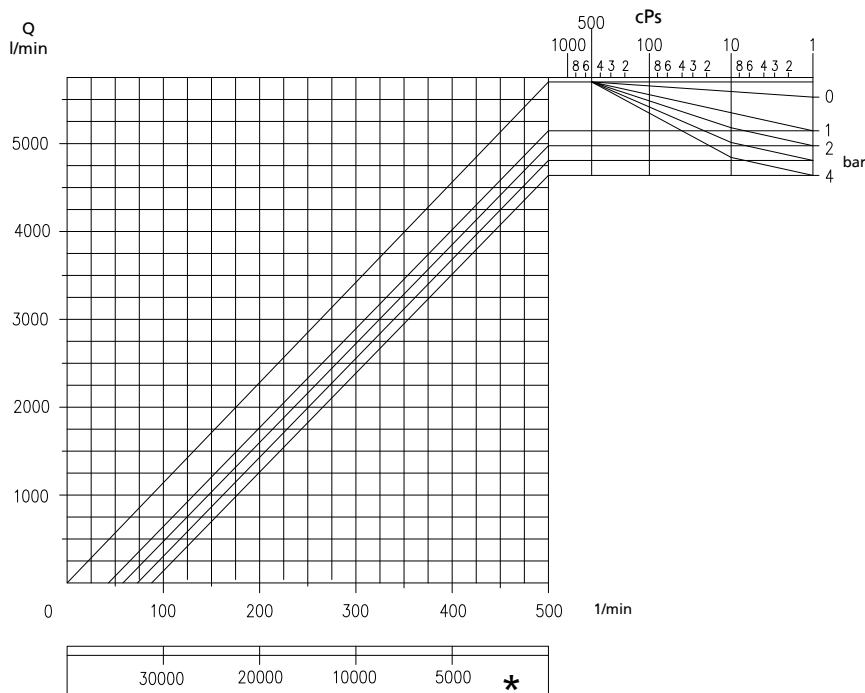

* Max. viscosity (cPs) at 0 bar (g) suction pressure / inlet pressure
Nozzle diameter 200 mm
Standard nominal nozzle diameter DN 200
Max. speed at 1 cPs = 500 rpm
It is recommended not to use all maximum values at the same time.


Total input power Vitalobe 680 - tri-lobe rotor - clearance: standard

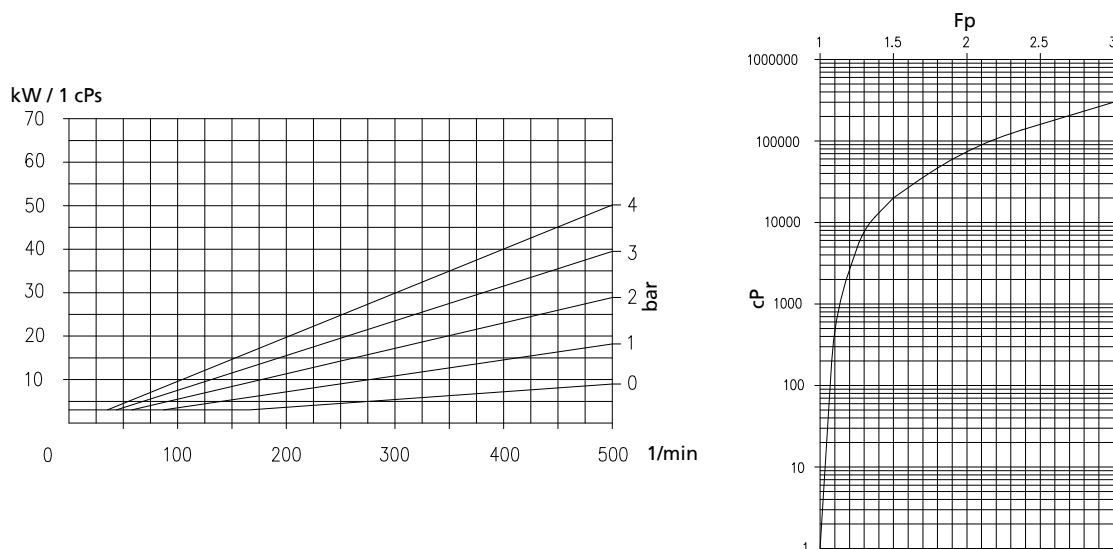

Total power = kW (1 cPs) x F_p

⁶³⁾ The characteristic curves shown are intended for orientation. Some individual pumps may differ for reasons related to their production, the fluid handled and the system conditions.

NPSH curve Vitalobe 660-680

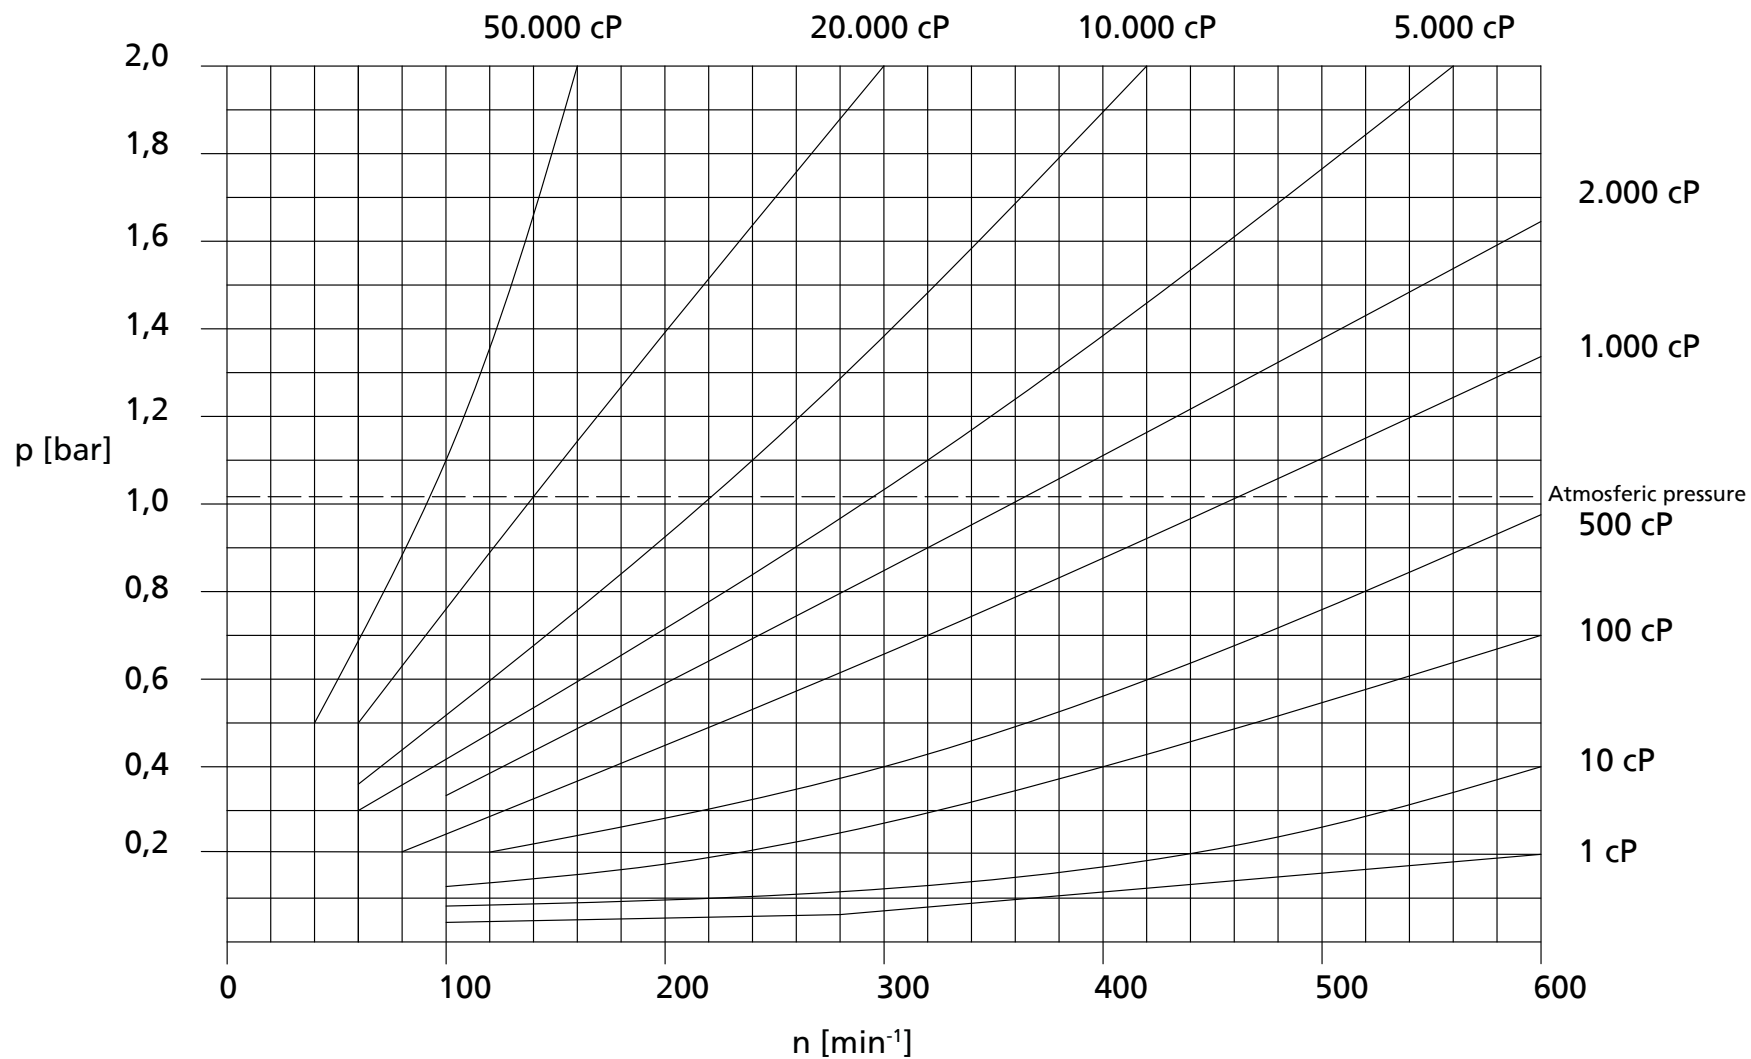



KSB Aktiengesellschaft

67225 Frankenthal • Johann-Klein-Str. 9 • 67227 Frankenthal (Germany)

Tel. +49 6233 86-0 • Fax +49 6233 86-3401

www.ksb.com

24.10.2014

1969.56/02-EN